
 
41' UTILITY BOAT OPERATOR'S HANDBOOK





COMDTINST M16114.2C

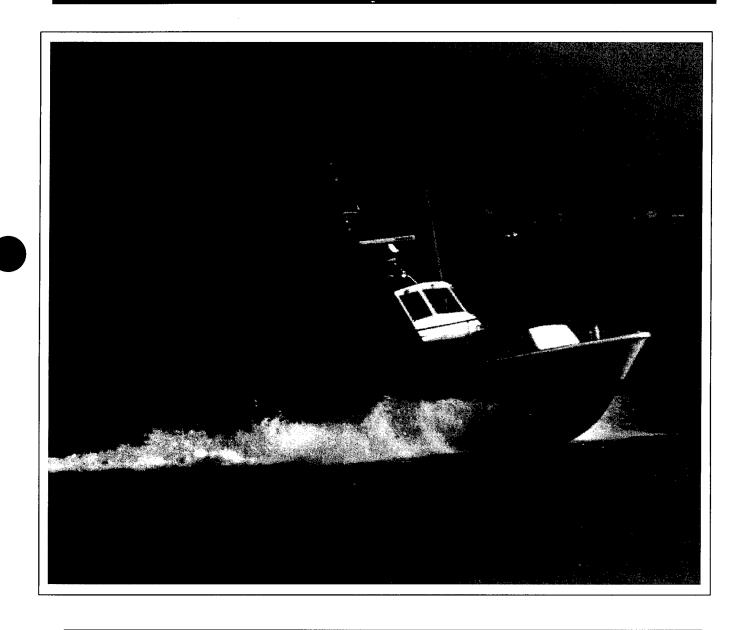



2100 Second Street, S.W. Washington, DC 20593-0001 Staff Symbol: G-OCS-2 Phone: (202) 267-2868

COMDTINST M16114.2C JUL 2 1999

COMMANDANT INSTRUCTION M16114.2C

Subj: 41' UTB OPERATOR'S HANDBOOK

- 1. <u>PURPOSE</u>. This instruction provides technical orientation, performance characteristics, and basic operating procedures for the 41' Utility Boat, Big (UTB). It also standardizes boat outfit equipment and layout.
- 2. <u>ACTION</u>. Area and district commanders, commanders of maintenance and logistics commands, commanding officers of headquarters units, assistant commandants for directorates, Chief Counsel, and special staff offices at Headquarters shall ensure adherence to the contents of this instruction at all units which operate and/or maintain 41' UTBs. To ensure standardization, there is no command prerogative with regard to the type or location of equipment carried except as noted. All design or structural alterations are prohibited unless specifically authorized by Commandant (G-SEN).
- 3. <u>DIRECTIVES AFFECTED</u>. This manual cancels the 41' UTB Operator's Handbook, COMDTINST M16114.2B on 01 Oct 1999.
- 4. <u>DISCUSSION</u>. This handbook contains the information necessary to safely and efficiently operate the 41' UTB. The operational capabilities, limitations, and emergency procedures are clearly stipulated. The fittings, outfit list, and physical characteristics of the boat are pictured and described in detail. This publication is directive in nature and applies to all 41' UTB crews, operational, and supervisory commands. This handbook revision serves the following purpose:
 - a. It incorporates the numerous changes to the 41' UTB and its authorized outfit which have occurred over the past six years.
 - b. It reformats the manual into an information mapping style for easy reading and reference.

| [| DIST | RIBU | TION | - SI | DL N | lo.13 | 6 | | - | | | | | | | | | <i>-</i> | | | | | | | |
|---|------|------|------|------|------|-------|---|----|----|---|---|--------------|----------|---|---|---|---|----------|---|---|----------|---|-----|---|---|
| | а | b | С | d | е | f | g | h | - | j | k | m | n | 0 | р | q | r | s | t | u | ٧ | w | Х | У | Z |
| Α | | | | | | | | | | | | <u> </u> | | | | | | | | | | | | | |
| В | | 8 | 10 | | * | | | 2 | 5 | | | <u> </u> | 50 | | | | | | L | | | | | | |
| С | * | * | | | | | | | 20 | | 2 | | 5 | | | | | | | | L | | _1_ | | |
| D | * | | | 5 | | | | 10 | | | | * | <u> </u> | | | | | | | | | | | | |
| E | | | 1 | | | | | 1 | | | | | <u> </u> | | | | | 5 | 2 | | <u> </u> | | | | |
| F | | | | | | | | | | | | | | | | | | | | | | | | | |
| G | | | | | | | | | | | | | | | | | | | | | | | | | |
| Н | | | | | | | | | | | | | Ĺ | | | L | | <u> </u> | | | | Ĺ | | | |

NON-STANDARD DISTRIBUTION Be: Academy :LDC (2); OIC/XPO (2); Ca: Airsta Kodiak (3); Cb: Airsta Sitka (3); Airsta Port Angeles (3); Da: Greater Antillees Section (5); Dm: Pacarea Trateam (5)

COMDTINST M16114.2C JUL 2 1999

- c. It incorporates into Chapter 5 the revised 41' UTB operating parameters, indicating the requirements, responsibilities and actions to be taken upon the occurrence of disabling casualties, restrictive, major and minor discrepancies. This change is consistent with the new Coast Guard Boat Readiness and Standardization Program that becomes effective 01 Oct 1999.
- d. It provides an inclusive list and definition of each disabling casualty, restrictive and major discrepancy in Appendices E and F.
- e. It provides the standardized requirements of a full power trial for the 41' UTB in Appendix G.
- 5. <u>PROCEDURE</u>. District, operational and unit commanders for all 41' UTB units shall ensure the procedures and limitations detailed within this instruction are followed. Forward any comments, corrections, recommendations and questions regarding this handbook to the UTB Systems Center in accordance with Section 1.C. of this manual. Design and structural change requests shall be submitted as outlined in the Naval Engineering Manual, COMDTINST M9000.6 (series).

6. <u>POLLUTION PREVENTION (P2) CONSIDERATIONS.</u> Pollution Prevention considerations were examined in the development of this directive and have been determined to be not applicable.

ERNEST R. RIUTTA

Assistant Commandant for Operations

PROTECTED UNDER INTERNATIONAL COPYRIGHT ALL RIGHTS RESERVED, NATIONAL TECHNICAL INFORMATION SERVICE U.S. DEPARTMENT OF COMMERCE

Reproduced from best available copy.



RECORD OF CHANGES

| CHANGE NUMBER | DATE OF CHANGE | DATE ENTERED | ENTERED BY |
|------------------|---------------------------------|---|------------|
| | 461 4 2 411 441 441 441 441 441 | | |
| 1 | | | |
| | | | |
| | | | |
| | | | |
| | <u> </u> | | |
| | | | |
| | | | |
| | 1.00 1.00 | | |
| | | | |
| | | | |
| | | | |
| | | 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 | |
| | | | |





Table of Contents

| CHAPTER 1 INTRODUCTION | |
|--|------|
| Overview | 1-1 |
| SECTION A. WARNINGS, CAUTIONS, AND NOTES | 1-3 |
| A.1. General | 1-3 |
| A.1. General A.2. WARNING 🛡 | 1-3 |
| A.3. CAUTION! | 1-3 |
| A.4. NOTE & | 1-3 |
| SECTION B. FACILITY MANAGEMENT | 1-4 |
| B.1. Commandant (G-OCS) | 1-4 |
| B.2. UTB System Center | 1-4 |
| SECTION C. CHANGES | 1-7 |
| C.1. General | 1- |
| C.1. General | 1-1 |
| SECTION D ACTION | 1_0 |
| D.1. General | 1.0 |
| D.1. General | , |
| | |
| CHAPTER 2 BOAT CHARACTERISTICS | |
| Overview | 2-1 |
| SECTION A. GENERAL DESCRIPTION | 2-3 |
| A.1. Manufacturer | 2-3 |
| A.2. Missions | 2-3 |
| A.3. Hull | 2-3 |
| A.4. Cabin top | 2-3 |
| A.5. Boat specification | 2-3 |
| SECTION B. THE HULL | 2-7 |
| B.1. Construction | 2-′ |
| B.2. Compartments | 2-1 |
| B.3. Hull reference points | |
| SECTION C. FOREPEAK | 2-9 |
| Exterior | 2-10 |
| C.1. Bullnose | 2-10 |
| C.2. Forward bitt | 2-10 |
| C.3. Forepeak scuttle | 2-10 |
| C.4. Forward deck handrails | 2-10 |
| Interior | 2-1 |
| C.5. Anchor line | 2-1 |
| C.6. Anchor | 2-1 |
| C.7. Fire monitor | 2-1 |
| C.8. 24V docking lights | 2-1 |
| C 9 Compartment lighting | 2-1 |



| SECTION D. PASSENGER COMPARTMENT (EXCLUDING PILOTHOUSE) | 2-13 |
|--|------|
| Exterior | 2-14 |
| D.1. Cabin top | 2-14 |
| D.2. Emergency escape hatch | 2-14 |
| D.3. Anchor | 2-14 |
| D.4. Handrails | |
| D.5. Windows | |
| D.6. Cleats | 2-15 |
| D.7. Boat hooks | |
| Interior | 2-16 |
| D.8. Deck | 2-16 |
| D.9. Bulkheads | 2-16 |
| D.10. Head | 2-16 |
| D.11. Emergency escape hatch | 2-16 |
| D.12. Deck hatches | 2.17 |
| D.13. Berth seats | 2 17 |
| D.14. Heater | 2.17 |
| D.15. Stokes Litter | 2 17 |
| D.16. Handrails | 2 17 |
| D.17. Gun locker | 2 17 |
| D.18. First aid kit | 2 17 |
| D.19. CO ₂ fire extinguisher | 2_17 |
| D.20. Sink area | 2-17 |
| D.21. Clock | 2-18 |
| D.22. Steering console access panel D.23. 24V hand-held searchlight | 2-19 |
| D.24. VHF-FM DES transceiver | 2-19 |
| D.25. VHF-FM guard receiver | 2-19 |
| D.26. Windshield washer fluid bottle | 2-19 |
| D.27. Wooden ladder | 2-19 |
| D.28. Stowage area | 2-19 |
| SECTION E. PILOTHOUSE | 2-21 |
| Exterior | 2-21 |
| E.1. Windows | 2-22 |
| E.2. Main searchlight | 2-22 |
| E.3. Aft floodlight | 2-22 |
| E.4. Rotating blue light | 2-22 |
| E.5. Horn | 2-23 |
| E.6. Radar antenna | 2-23 |
| E.7. Radar tripod | 2-23 |
| E.8. Loudhailer Speaker | 2-23 |
| E.9. Pilothouse top handrails | 2-23 |
| E.10. Side handrails | 2-23 |
| E.11. Side running lights | 2-24 |
| E.12. EPIRB (optional) | 2-24 |
| E.13. Shore-tie receptacle | 2-24 |
| E.14. Freshwater fill outlet/ vent | 2-24 |
| | |



| E.15. | HF-\$\$B radio antenna | 2-24 |
|---------------|--|--------------------|
| E.16. | Boathooks | 2-24 |
| E.17. | Fold-down step | 2-25 |
| | Side running light | |
| | Boat hook | |
| | Mast junction box | |
| | Door | |
| | RADHAZ marking | |
| | Bell bracket | |
| E.24. | Mast pad eye | 2-26 |
| | 24V spotlight receptacle | |
| | Cleat | |
| | Sliding rear window | |
| E.28. | Spanner wrenches | 2-26 |
| E.29. | Engine room exhaust vents | 2-26 |
| | Rescue and survival raft | |
| E.31. | Fire main riser and tri-gate | 2-27 |
| | Stuffing tubes. | |
| | ^ | |
| | Deck | |
| | Paneling | |
| E.35. | 24/ 28V DC power circuit breaker panel | .2-29 |
| E.36. | 110V AC circuit breaker panels | .2-29 |
| E.37. | 12V DC circuit breaker panels | .2-29 |
| E.38. | Bilge/ fire alarm panel | 2-29 |
| | Handrails | |
| | Fire ax | |
| | Window | |
| E.42. | Centerline steering console & console hood | .2-32 |
| E.43. | Gauges | 2-34 |
| E.44. | Steering console (face) | 2-33 |
| | Helmsman's chair | |
| E.46. | Electronics console | .2-37 |
| E.47. | Navigator's seat | 2-37 |
| E.48. | Battle lantern | ∠- <i>31</i> |
| E.49. | Chart table | 2-30 2 2 0 |
| E.50. | HF-SSB radio with microphone | ∠-30 |
| E.51. | RADHAZ marking | 2-30 2-38 |
| E.52. | Window | 2-38 |
| E.33. | WINDOW | 2-30 |
| E.54. | Door | ∠-39 2_30 |
| E.55. | Fire main pressure gauge Dry chemical (PKP) fire extinguisher | ∠- <i></i> 2,30 |
| E.30. | 110V AC outlet | ∠- <i></i> 2-30 |
| E.3/. E 59 | Bench seat | 2-39 |
| E 50 | Bell | 2-39 |
| E.59. | Handrails | 2-39 |
| L.00. | THERETO | |



| · | |
|--|------|
| E.61. Window | |
| E.62. VHF-FM channel 16 guard speaker | |
| E.63. Direction finder speaker | |
| E.64. VHF-FM transceiver speaker | |
| E.65. Searchlight handle and switch | 2-41 |
| E.66. Loudhailer directional handle | 2-41 |
| E.67. Space lighting | 2-41 |
| E.68. Smoke detector | 2-41 |
| E.69. Handrail | 2-41 |
| E.70. Windshield wiper motors | 2-41 |
| SECTION F. MAIN DECK | 2-42 |
| F.1. General | |
| F.2. Tow bitt | |
| F.3. Cleats | |
| F.4. Engine room scuttle | |
| F.5. Mast support handrails | |
| F.6. Main engine hatches | |
| F.7. Soft patch | |
| F.8. Main deck handrails | |
| F.9. Ring buoy and floating marker light | |
| F.10. M-60 machine gun mount bracket | |
| F.11. Main engine air intake vents | |
| SECTION G. MAST | |
| G.1. General | |
| G.2. Mast lights | |
| G.3. RDF antenna | |
| G.4. Crossarm antennas | |
| SECTION H. ENGINE ROOM | |
| H.1. General | |
| H.2. Engine room ladder | |
| H.3. Electrical system | |
| H.4. Raw water system | |
| H.5. Fire main system | |
| H.6. Main engines | |
| H.7. Bilge pump | |
| H.8. Skeg sounding pipe | |
| SECTION I. WELL DECK | |
| | |
| I.1. General | |
| I.2. Flagstaff | |
| I.3. Lazarette scuttle | |
| I.4. Deck storage boxes | |
| I.5. Fuel oil fill/ sounding tubes | |
| I.6. 5-Gallon gas can | |
| I.7. Towline and storage reel | |
| I.8. Sea chest vent | |
| I.9. Dewatering pump | |
| I.10. Engine room hatch tension bar access | 2-52 |



| 7.11 P. 1. 1 | 0.50 |
|---|---|
| I.11. Fuel tank vents | |
| I.12. Taff rail | |
| I.13. Fuel tank sounding rods | |
| I.14. Rudder arms | |
| I.15. Hydraulic ram | |
| I.16. Tie rod bar | |
| I.17. Cleats | |
| SECTION J. LAZARETTE | |
| J.1. General | |
| J.2. Emergency tiller | |
| J.3. Rudder tube | |
| J.4. Fuel oil system | |
| J.5. Stainless steel mufflers | |
| J.6. Exhaust pipe ends | 2-56 |
| J.7. Shaft strut air test fittings | 2-56 |
| SECTION K. MOORING EQUIPMENT AND FITTINGS | 2-57 |
| K.1. Cleats | |
| K.2. Fenders | 2-57 |
| K.3. Lines | |
| CHAPTER 3 BOAT SYSTEMS AND COMPONE Overview | |
| Overview | 3-1 |
| Overview SECTION A. PROPULSION SYSTEM | |
| OverviewSECTION A. PROPULSION SYSTEMOverview | |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines | |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General | |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System | 3-1 3-3 3-3 3-4 3-4 3-5 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter | 3-1 3-3 3-3 3-4 3-5 3-5 3-5 3-5 3-5 3-6 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler | 3-1 3-3 3-3 3-4 3-5 3-5 3-5 3-5 3-5 3-6 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-7 3-7 3-7 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-7 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-9 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines A.11. Priming and stripping pump | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines A.11. Priming and stripping pump | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 3-9 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines A.11. Priming and stripping pump A.12. Fuel oil filter | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 3-9 3-9 3-9 |
| Overview SECTION A. PROPULSION SYSTEM Overview Engines A.1. General Lubrication Oil System A.2. General A.3. Lube oil pump A.4. Lube oil cooler A.5. Lube oil filter Fuel Oil System A.6. Fuel tank A.7. Fuel fill/ sounding pipe A.8. Fuel vent A.9. Suction ports A.10. Stripping lines A.11. Priming and stripping pump A.12. Fuel oil filter A.13. Fuel supply line | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-7 3-9 3-9 3-9 3-9 3-9 3-9 |
| Overview | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 3-9 3-9 3-9 3-9 3-9 |
| Overview | 3-1 3-3 3-3 3-4 3-4 3-5 3-5 3-5 3-5 3-7 3-7 3-7 3-9 3-9 3-9 3-9 3-9 3-9 3-9 3-9 3-9 3-9 |



| A.18. Raw water system | 3-12 |
|--|------|
| A.19. Jacket water system | |
| Engine Exhaust System | |
| A.20. Functions | |
| A.21. Exhaust manifold | |
| A.22. Exhaust riser | |
| A.23. Exhaust pipe | |
| Engine Alarm System | 3-17 |
| A.24. Alarm system | |
| A.25. Alarm bell | |
| A.26. Mechanical gauges | 3-17 |
| Main Propulsion System | 3-18 |
| A.27. Marine gear | |
| A.28. Morse control hookup | |
| A.29. Propellers | |
| A.30. Strut | 3-19 |
| A.31. Shaft | |
| A.32. Stern tube | |
| A.33. Stuffing box | |
| A.34. Cutlass bearing | |
| SECTION B. STEERING SYSTEM | |
| B.1. Steering wheel | |
| B.2. Hydraulic helm assembly | |
| B.3. Hydraulic ram | |
| B.4. Tie rod bar | |
| B.5. Rudders | |
| SECTION C. FIRE MAIN SYSTEM | |
| C.1. Sea chest | |
| C.2. Simplex/ duplex firemain strainer | |
| C.3. Power take-off | 3-24 |
| C.4. Fire pump | |
| C.5. Fire main pressure gauge | 3-24 |
| C.6. Fire main riser | 3-24 |
| C.7. Tri-gate | |
| SECTION D. FIREFIGHTING EQUIPMENT | 3-25 |
| D.1. Hoses | 3-25 |
| D.2. Vari-nozzle | 3-25 |
| D.3. Fire monitor | 3-25 |
| D.4. Fire monitor nozzle | 3-25 |
| Section E. Dewatering Equipment | |
| E.1. Bilge pump system | 3-27 |
| E.2. Eductor | 3-28 |
| E.3. Dewatering pump kits | 3-28 |
| SECTION F. FIRE EXTINGUISHING AGENTS | 3_31 |
| | |
| Overview | |
| Fixed Fire Extinguishing System | 3-32 |



| | 2.22 |
|--|------|
| F.1. Halon 1301 | |
| F.2. Halon bottle | |
| F.3. Thermal sensors | |
| F.4. Discharge nozzles | |
| F.5. Fuel shut-off cylinder | |
| Portable Fire Extinguisher | 3-34 |
| F.6. Dry chemical (PKP) fire extinguisher | 3-34 |
| F.7. Carbon dioxide (CO ₂) fire extinguisher | |
| SECTION G. ELECTRICAL SYSTEM | 3-35 |
| Overview | 3-35 |
| <i>Power</i> | 3-36 |
| G.1. Batteries | |
| G.2. Battery charger | |
| G.3. Battery equalizer | |
| G.4. Starters | |
| G.5. Alternators | |
| Electrical Panels | |
| G.6. Electrical control panel | |
| G.7. Windshield wipers | |
| G.8. 24/28 DC electrical panel | |
| G.9. 110V AC electrical panel | |
| G.10. 12V DC circuit breaker panel | |
| G.11. Bilge/fire alarm panel | |
| Navigation Lighting System | 3-43 |
| G.12. Operation | |
| G.13. Mast lights | |
| G.14. Side running lights | |
| Communications | |
| G.15. Radios | |
| G.16. Direction finder | |
| G.17. Loudhailer | |
| Navigation | |
| G.18. Depth finder | 3-45 |
| G.19. Radar | 3-45 |
| G.20. DGPS receiver | 3-45 |
| | |
| CITA DEPENDA DITTE CIDENTI | |
| CHAPTER 4 THE CREW | |
| Overview | 4-1 |
| SECTION A. CREW SIZE | |
| A.1. General | 4-3 |
| SECTION B. BOAT CREW | 4-5 |
| B.1. Coxswain | |
| B.2. Engineer | 4-5 |
| B.3. Crew member | 4-5 |
| D.D. Clevi memori | |



CHAPTER 5 OPERATIONS

| Overview | 5-1 |
|--------------------------------------|---------------|
| SECTION A. OPERATING PARAMETERS | 5-3 |
| A.1. General | 5-3 |
| A.2. Disabling casualties | 5-3 |
| A.3. Restrictive discrepancies | 5-3 |
| A.4. Major discrepancies | 5-5 |
| A.5. Minor discrepancies | 5-5 |
| A.6. Responsibilities | 5-5 |
| A.7. Towing and environmental limits | |
| A.8. Mission equipment limits | |
| SECTION B. PERFORMANCE DATA | |
| B.1. Fuel consumption | |
| SECTION C. STARTING PROCEDURES | |
| C.1. Pre-start | |
| C.2. Starting | |
| C.3. Post-start | |
| SECTION D. UNDERWAY | |
| D.1. Gauges | |
| D.2. Corrective action | |
| D.3. Throttles | 5-15 |
| SECTION E. HANDLING CHARACTERISTICS | 5-17 |
| Overview | 5-17 |
| Maneuverability | 5-18 |
| E.1. General | 5-18 |
| E.2. Main engine RPMs | |
| E.3. Stopping | |
| Head Seas | |
| E.4. Operating in head seas | 5-20 |
| Dead in the Water | |
| E.5. Operating in calm conditions | 5 -2 1 |
| Beam Seas and Following Seas | 5-22 |
| E.6. Operating in beam seas | 5-22 |
| E.7. Operating in following seas | 5-22 |
| E.8. White water | |
| Inlets | |
| E.9. Entering an inlet | |
| E.10. Breaking waves | 5-24 |
| Capsize Prevention | |
| Ē.11. Statistics | |
| E.12. Assess the situation | |
| E.13. Operate within limitations | 5-25 |
| E.14. Capsizing conditions | 5-25 |
| E.15. Corrective action | 5 - 26 |



| Towing in Heavy Weather | 5-27 |
|------------------------------------|------|
| E.16. General | 5-27 |
| E.17. Line handling | |
| Ice Operations | |
| E.18. Ice limitations | 5-28 |
| E.19. Operating in/ near ice | |
| E.20. Speed | 5-28 |
| E.21. Ice thickness | 5-28 |
| SECTION F. SECURING PROCEDURES | 5-29 |
| F.1. Procedures | 5-29 |
| CHAPTER 6 MISSION PERFORMANCE | |
| Overview | 6-1 |
| Person in the Water Recovery (PIW) | |
| Person in the water Recovery (FIW) | |
| A.1. General | |
| A.2. Key issues | |
| Damage Control And Dewatering | |
| A.3. General | 6-4 |
| A.4. Key factors | 6-4 |
| A.5. Assisting a boat | 6-10 |
| Firefighting | 6 10 |
| A.6. General | 6-10 |
| A.8. Assisting a boat | 6-13 |
| Anchoring | 6-14 |
| A.9. General | 6-14 |
| A.10. Site selection | 6-14 |
| Helicopter Operations | 6-15 |
| A.11. General | 6-15 |
| Towing | |
| A.12. Towing limitations | 6-16 |
| A.12. Towing limitations | 0-10 |
| CHAPTER 7 EMERGENCY PROCEDURES/CAS | |
| Overview | 7-1 |
| SECTION A. CAPSIZING | 7-3 |
| A.1. General | 7-3 |
| A.2. Egress | 7-3 |
| A.3. Recommended methods of egress | 7-4 |
| SECTION B. CASUALTY CONTROL | 7-5 |
| Overview | |
| Fire | 7-6 |



| B.1. General | |
|---|-------------|
| B.2. Engine room fire | 7-6 |
| B.3. Other fires | |
| Main Engine Runaway | 7-7 |
| B.4. Procedure | 7-7 |
| Loss of Main Engine Lube Oil Pressure | <i>7-8</i> |
| B.5. Procedure | 7-8 |
| Main Engine High Water Temperature | <i>7-9</i> |
| B.6. Procedure | |
| Shaft Stuffing Box/Packing Gland Overheating | |
| B.7. Warning signs | |
| B.8. Procedure | |
| Collision With a Submerged Object/Running Aground | <i>7-11</i> |
| B.9. Procedure | 7-11 |
| Loss of Steering | <i>7-12</i> |
| B.10. Signs | 7-12 |
| B.11. Steering hose broken | 7-12 |
| B.12. Jammed rudder | |
| Main Engines Fail to Start | <i>7-15</i> |
| B.13. General | |
| Reduction Gear Failure | |
| B.14. Procedure | |
| Main Engine/Marine Gear Failure | |
| B.15. Procedure | |
| | |

APPENDIX A: 41' UTB OUTFIT LIST AND STOWAGE PLAN

APPENDIX B: 41' UTB PAINT / COLOR REFERENCE GUIDE

APPENDIX C: BOAT ALTERATIONS

APPENDIX D: 41' UTB MATERIAL INSPECTION CHECKLIST

APPENDIX E: DISABLING CASUALTIES

APPENDIX F: RESTRICTIVE DISCREPANCIES

APPENDIX G: FULL POWER TRIAL



Chapter 1 Introduction

Overview

Introduction

This handbook outlines safety and operational procedures for the Coast Guard's 41' Utility Boat (UTB). It clearly defines operational capabilities, limitations, and emergency procedures. In addition, it shows or describes the fittings, outfit list, and physical characteristics of the boat.

In this chapter

| Section | Title | See Page |
|---------|-------------------------------|----------|
| A | Warnings, Cautions, and Notes | 1-3 |
| В | Facility Management | 1-5 |
| C | Changes | 1-7 |
| D | Action | 1-9 |





Section A. Warnings, Cautions, And Notes

A.1. General

The following definitions apply to Warnings, Cautions, and Notes found throughout the handbook.

A.2. WARNING 💖

Operating procedures or techniques which must be carefully followed to avoid personal injury or loss of life.

A.3. CAUTION!

Operating procedures or techniques which must be carefully followed to avoid equipment damage.

A.4. NOTE 6

An operating procedure or technique essential to emphasize.





Section B. Facility Management

B.1. Commandant (G-OCS)

Commandant (G-OCS) is the facility manager for the 41' UTB. The 41' UTB is a standard boat as defined in the Boat Management Manual, COMDTINST M16114.4 (series), and the Naval Engineering Manual, COMDTINST M9000.6 (series).

B.2. UTBSystem Center

In support of Commandant (G-OCS), the UTB Systems Center (UTBSC), located at the USCG Reserve Training Center Yorktown, is the center of excellence for the 41' UTB. In addition to training coxswains to operate the 41' UTB, the UTBSC provides the following:

- expertise in all aspects of 41' UTB operation and maintenance,
- review of the boat, its equipment and crew procedures,
- evaluation of prototype alterations, and
- 41' UTB Standardization Team.





Section C. Changes

C.1. General

Commandant (G-OCS) promulgates this manual and its changes. Submit recommendations for corrections or changes to the UTBSC via standard letter or electronic mail. The address and phone number for the UTBSC is as follows:

Commanding Officer (tutb) U.S. Coast Guard Reserve Training Center Yorktown, VA 23690-5000

757-898-2180 or 2125

C.2. Boat alterations (BoatAlts)

Appendix C is an index of all Boat Alterations (BoatAlts) issued since the 41' UTB has been in service. BoatAlts issued after the date of this revision supersede information in this manual where applicable.





Section D. Action

D.1. General

Unit and operational commanders will comply with the procedures and limitations specified in this publication and any duly issued changes.

NOTE &

To maintain fleet-wide standardization, unit commanders are not authorized to change or vary the type or location of equipment carried except where noted. Design or structural alterations are prohibited unless specifically authorized by the Office of Naval Engineering, Commandant (G-SEN).

NOTE &

Prototype testing of 41' UTB configuration changes may only be carried out with the specific authorization of the Office of Naval Engineering, Commandant (G-SEN). Under most circumstances, prototype testing is done at the UTBSC.





Chapter 2 Boat Characteristics

Overview

Introduction

NOTE &

Be aware of and allow for any differences in a particular boat as compared to the standard measurements, particularly with regard to maximum operating height above water (i.e., antennas).

This chapter describes standard 41' UTB features and equipment. The chapter is organized by vessel compartment and deck areas working forward to aft. The standards maintain 41' UTB configuration and stowage. Where discrepancies exist, commands shall initiate action to comply with these standards. Many of the systems described briefly in this chapter are covered in greater detail in Chapter 3, Boat Systems and Components.

Figure 2-1 lists standard 41' UTB specifications. Figures 2-2 and 2-3 show overall boat layout. Individual compartment and deck area diagrams are included throughout the chapter.

In this chapter

| Section | Title | See Page |
|---------|--|----------|
| A | General Description | 2-3 |
| В | The Hull | 2-7 |
| С | Forepeak | 2-9 |
| D | Passenger Compartment (Excluding Pilothouse) | 2-13 |
| E | Pilothouse | 2-21 |
| F | Main Deck | 2-42 |
| G | Mast | 2-45 |
| Н | Engine Room | 2-47 |
| I | Well Deck | 2-51 |
| J | Lazarette | 2-55 |
| K | Mooring Equipment and Fittings | 2-57 |

Operators Manual - 41' UTB





Section A. General Description

A.1. Manufacturer

The Coast Guard Yard at Curtis Bay, Maryland, built 208 UTBs between 1973 and 1983. There are over 150 still in service.

A.2. Missions

The 41' UTB is the general workhorse at multi-mission units. It is designed to operate under moderate weather and sea conditions where its speed and maneuverability make it an ideal platform for a variety of missions.

Strategic goals supported are:

- Search and Rescue
- Maritime Law Enforcement
- Port Security
- Marine Environmental Protection
- Recreational Boating Safety
- Coxswain (UTB SYSCEN) & Aircrew (AIRSTAs) Training

A.3. Hull

The boat has an aluminum hull with main deck flush over the engines and a self-bailing well deck aft. It is of modified planing hull design, with a deep-V bow spreading gradually to form a wide, low-deadrise stern. A hollow skeg runs from Bulkhead 2 to just forward of the propellers at Frame 12. It slopes downward to its deepest point 4'1" below the water line at Frame 9. The entire exterior deck area is covered with non-skid to prevent slipping when deck or wet or dry.

A.4. Cabin top

The passenger compartment and pilothouse are enclosed in a cabin of molded, fiberglass-reinforced plastic over an end-grain balsa core. Beginning at Bulkhead 2, the cabin rises vertically from the main deck and then horizontally aft and slightly upward to a point just aft of Frame 4. The forward face of the pilothouse rises vertically with a slight aft angle from the top of the passenger compartment. The pilothouse top follows aft to Frame 7.

A.5. Boat specification

Figure 2-1 lists the standard 41' UTB boat specifications.



| | 0 | |
|--|-------------------------------------|--|
| Characteristic | Specification | |
| Length, molded | 40' 08" | |
| Length (with rub rails) | 41' 03 ¾" | |
| Beam, molded | 13' 05- ¼" | |
| Beam (with rub rails) | 14' 01" | |
| Freeboard, bow | 4' 06" | |
| Freeboard, amidship (Frame 7) | 3' 09" | |
| Freeboard, stern | 2' 09" | |
| Draft (maximum) | 4' 01" | |
| Fixed height above water line (top of radar antenna) | 13' 02" | |
| Unfixed height above water line (top of AM antenna) | 26' 8" | |
| Mast height (top of RDF antenna) | 17' 00" | |
| Engines | Cummins Diesel Model VT-903M | |
| Shaft horsepower, each engine | 340 SHP | |
| Fuel | #2 diesel | |
| Fuel capacity | 486.8 gallons | |
| Fuel capacity (95% full) | 463.0 gallons | |
| Fuel, usable | 420.0 gallons | |
| Propellers | Two, 4-bladed, 26" dia. x 28" pitch | |
| Maximum speed | 26 kts | |
| Endurance at maximum speed | 10.5 hours | |
| Range at 18 kts (2,000 RPM) | 300 NM | |
| Displacement, full load | 30,000 pounds | |
| Displacement, less cargo | 26,000 pounds | |
| Crew | 3 | |
| Passengers | 20 | |

Figure 2-1
Standard 41' UTB Boat Specifications



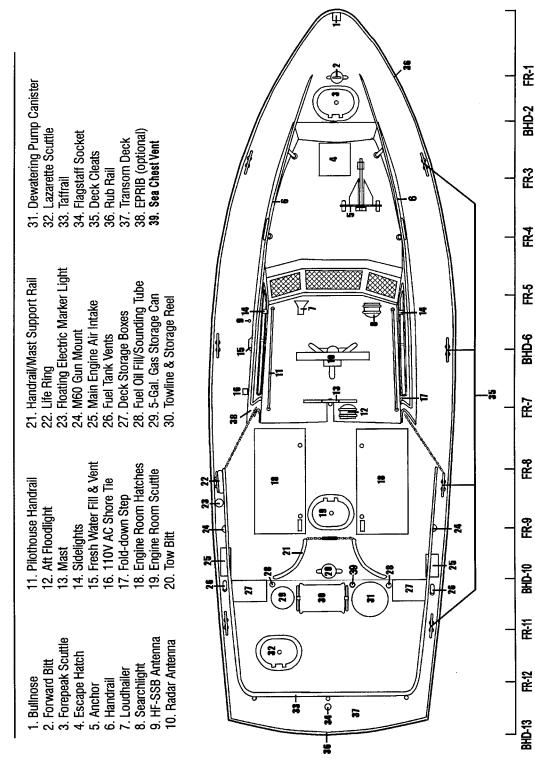


Figure 2-2 41' UTB (Top View)



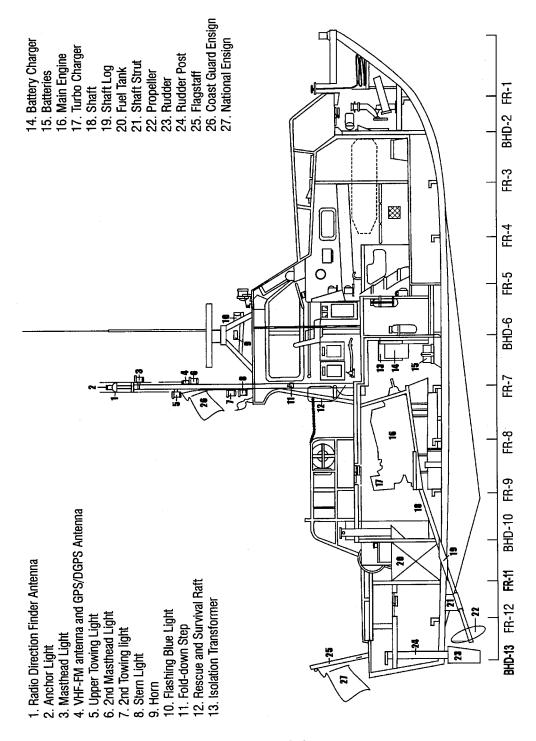


Figure 2-3 41' UTB (Side view)



Section B. The Hull

B.1. Construction

The aluminum hull will withstand the stresses and strains experienced by the all-purpose utility boat. The hull consists of an internal, central keel running the full length of the boat with a hollow skeg mounted externally below it. Longitudinal frames, spaced at 11" intervals, run parallel to the keel. Transverse frames, spaced at 31" intervals, connect the keel and longitudinal frames in a web-like network. The shell plate attaches to this extensive framework. Transverse frames (or the corresponding bulkhead at a frame) are numbered fore to aft and referenced to discuss compartment or equipment location.

The hull plating has three thicknesses to withstand varied stresses. Between the gunwale and chines, the plating is ³/16". Between the chines and keel, the thickness is ¹/4", except between Frames 11 and Bulkhead 13 where ⁵/16" plating helps to withstand stress caused by the propellers, propeller struts, and rudders.

CAUTION!

The hull will **not** withstand hard contact. The exterior hull has an installed continuous fender system (rub rail) for protection. However, this **does not** relieve the operator from using standard boat seamanship skills and portable fenders to cushion any direct contact during close quarters maneuvering situations.

CAUTION!

Mercury is extremely corrosive to aluminum. Do not use mercury based float switches or calibration/measuring instruments on board.

B.2. Compartments

The hull has five compartments:

| Compartment | Location | |
|--|-------------------------|--|
| Forepeak (watertight) | Bow to bulkhead 2 | |
| Passenger Compartment (not watertight) | Bulkhead 2 to 6 | |
| Engine Room (watertight to main deck) | Bulkhead 6 to 10 | |
| Fuel Tank (watertight to well-deck) | Bulkhead 10 to Frame 11 | |
| Lazarette (watertight) | Frame 11 to Transom | |



B.3. Hull reference points

Frequent use is made of the following reference points:

| Frame/ Bulkhead | Reference | |
|------------------------------|---|--|
| BHD-2 | 24/28V DC docking lights are recessed into the hull, port and starboard, just forward of this point. | |
| | Aft edge of the Coast Guard identification 2' wide red stripe ends here on the exterior of the hull and runs diagonally aft from the main deck to the water line. | |
| Between BHD-6 and FR-7 | The depth finder transducer penetrates the hull approximately 18" to starboard of the keel. | |
| FR-9 | Maximum draft occurs here, below the middle stanchion of the handrails. | |
| BHD-10 | The shafts penetrate the hull through stuffing tubes and shaft logs. | |
| FR-12 | FR-12 Shafts and propellers are supported by shaft struts installed just forward of Frame 12. The top of the propeller radius approximately 2'below the water line. | |



Section C. Forepeak

Introduction

The forepeak is the first watertight compartment of the 41' UTB. This compartment extends from the peak to Bulkhead 2. This is the stowage location for the anchor line, spare anchor, and fire monitor.

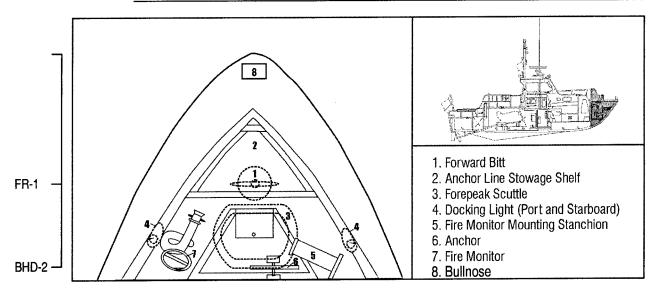


Figure 2-4 Forepeak

In this section

| Topic | See Page |
|----------|----------|
| Exterior | 2-10 |
| Interior | 2-11 |



Exterior

C.1. Bullnose

The solid aluminum bullnose chock is bolted to the main deck at the peak of the boat. The inside surface of the bullnose may be polish to aid in line handling.

C.2. Forward bitt

The forward bitt is a capped hollow pipe that penetrates the main deck at Frame 1 directly above the anchor locker. The anchor line chain hangs inside the bitt for easy access and ready use. A ⁷/16" screw pin shackle attached to the chafe chain hangs from a hook on the bottom of the bitt cap cover. To use the anchor line, first remove the bitt plug by turning the T-top, and lifting the cap cover. Then, pull the chain out of the bitt, and lead it forward through the bullnose chock and back to the anchor located on the cabin top.

C.3. Forepeak scuttle

A 19" x 26", flush-mounted, watertight scuttle located between Frame 1 and Bulkhead 2 on the main deck provides access to the forepeak. To open the scuttle, use either the handle from inside or the T-wrench (located in the starboard deck storage box) from outside.

C.4. Forward deck handrails

A handrail constructed of 1 ¼" schedule 40 aluminum pipe is bolted to the main deck just port and starboard of centerline. A bedding compound is used between the fiberglass cabin top and the metal handrail. They begin at Frame 1, even with the forward bitt. The handrails rise to a level 36" above the deck and continue aft, following the line of the deck along each side of the pilothouse. At the aft end of the pilothouse, the handrails curve upward along the aft vertical edge, ending at a height even with the top of the side windows.



Interior

C.5. Anchor line

The anchor line (300' of 2 ¾" double-braided nylon line) is stowed inside the forepeak on an expanded metal shelf just forward of Frame 1. Nine feet of ½" galvanized BBB chafe chain is attached to the anchor line by a 5/8" screw pin shackle and ½" swivel. A 7/16" screw pin shackle at the end of the chain connects to the anchor. The bitter end of the anchor line is attached to a staple (attached to the central keel) with a small line.

C.6. Anchor

The spare anchor is stowed inside the forepeak on brackets attached to Bulkhead 2. The shank of the anchor fits into a socket welded to the bulkhead. A shock cord is used to hold the anchor in the bracket.

NOTE &

Replacement anchors are 25 pounds. Modifications must be made to mounting brackets to accommodate the larger anchor.

C.7. Fire monitor

The fire monitor is inside the forepeak on brackets on the port side of the hull. Its mounting stanchion hangs on a bracket on the starboard side of the hull, just forward of Bulkhead 2. The forward bitt is fitted to receive the fire monitor mounting stanchion by removal of the bitt cap cover and insertion of the mounting stanchion.

C.8. 24V docking lights

The docking lights are just below the gunwale in both sides of the hull shell plate between Frame 1 and Bulkhead 2.

C.9. Compartment lighting

There is one light in the forepeak compartment. The white light is located over the anchor line, forward of the bitt.





Section D. Passenger Compartment (Excluding Pilothouse)

Introduction


The passenger compartment is the primary stowage location for boat outfit equipment. It also serves as an area to bring survivors. It extends from Bulkhead 2 to Bulkhead 6 and includes the head, berth seating area and stowage area.


In this section

|] | Горіс | See Page |
|----------|-------|----------|
| Exterior | | 2-14 |
| Interior | | 2-16 |



Exterior

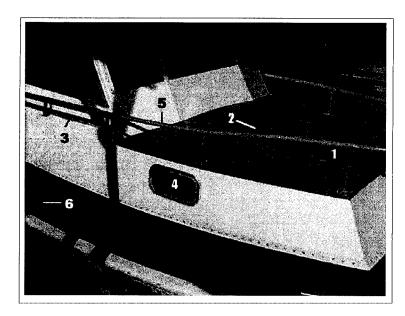

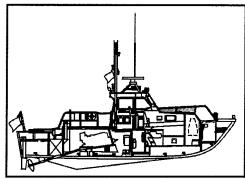

- 1. Head Escape Hatch
- 2. Anchor
- 3. Boat Hook
- 4. Cabin Fixed Window
- 5. Handrail
- 6. Cleat

Figure 2-5
Cabin Top and Foredeck

D.1. Cabin top

Generally speaking, the cabin top is the area from Bulkhead 2, where the cabin top attaches to the hull, to the front windshield and the pilothouse area. But in fact, the cabin top, including the pilothouse, is one solid fiberglass over end-grain balsa shell (See Section 2.A.4.). The cabin is bolted to the deck at the deck combing. The gelcoat is colored yellow on the interior surface, white on the exterior sides, and gray on the exterior horizontal surfaces.

D.2. Emergency escape hatch

An emergency escape hatch is in the cabin top. It leads out from the head space. (Also see Section 2.D.11.)

D.3. Anchor

A 22 or 25-pound Danforth anchor is on the cabin top, starboard side, approximately 28" forward of the pilothouse windshield.

D.4. Handrails

Handrails lead aft, over the cabin top and are bolted through the fiberglass. (Also see Section 2.C.4.)



| D.5. Windows | There is a fixed window on each side of the cabin just above the main decembetween Frames 3 and 4. | |
|-----------------|--|--|
| D.6. Cleats | (See Section 2.K.1.) | |
| D.7. Boat hooks | (See Section 2.E.16.) | |



Interior

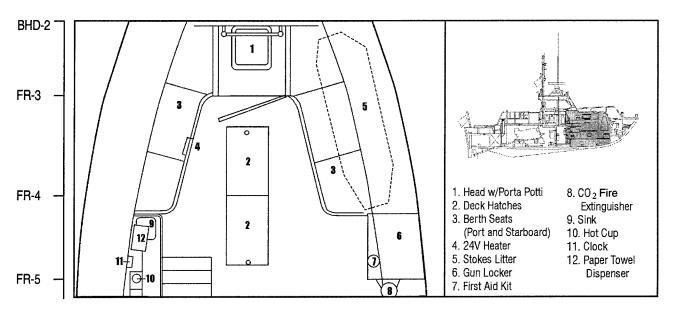


Figure 2-6
Passenger Compartment

D.8. Deck

The deck of the passenger compartment is fiberglass reinforced plastic over a 1" end-grain balsa core, overlaid with marine-grade carpet.

D.9. Bulkheads

The forward bulkhead and hull sides are encased in Ensolite thermal insulation covered by wood-grain paneling. The aft bulkhead separating the passenger compartment and engine room is not insulated or covered.

D.10. Head

The head is completely self-contained and enclosed for privacy. A portapotti is secured by strap belts on the centerline forward. A 23" handrail is attached to the forward cabin top above it. A toilet paper holder is on the port bulkhead.

D.11. Emergency escape hatch

The emergency escape hatch is directly above the porta-potti. It is hinged forward and has quick-release operating handles.

NOTE &

The emergency escape hatch must be secured and unobstructed at all times. Nothing will be stowed in the head in addition to the porta-potti.



D.12. Deck hatches

Two 21" x 33" deck hatches are just aft of the head door, between Frames 3 and 5. These hatches provide inspection and maintenance access to the passenger compartment bilge.

D.13. Berth seats

The berth seats have molded fiberglass frames with marine plywood panels. Four-inch foam cushions covered with naugahyde conform to the hull interior shape on both sides of the cabin. The plywood berth seat panels lift off for access to boat outfit item storage areas. The items stowed within the seat storage areas are listed in Appendix A.

D14. Heater

This heater is installed inside the port berth seat. It runs off coolant water from the port engine and has a 24 V DC electric fan. It is used while underway with main engines running.

D.15. Stokes Litter

The litter is stowed above the starboard berth seat against the hull on mounting brackets.

D.16. Handrails

A 64" stainless steel handrail is mounted to the passenger compartment overhead, parallel to the starboard cabin side. A second handrail is on the port side, which leads aft and out of the compartment.

D.17. Gun locker

The gun locker is located just aft of the starboard berth seat. The secure gun rack mounted inside is authorized to hold one M-16 rifle, one shotgun, one 9MM pistol, and one M60 machine gun (butt stock).

D.18. First aid kit

This ten-person kit is on the starboard side of the passenger compartment, directly above the gun locker.

D.19. CO₂ fire extinguisher

A 5-pound CO₂ fire extinguisher is mounted on the aft bulkhead of the gun locker.

D.20. Sink area

A fiberglass sink is on the port side, aft of the berth seat. A hand pump supplies fresh water from a 20-gallon tank mounted on Bulkhead 6. Two hotcup units are above and aft of the sink. A paper towel dispenser is mounted above the sink.

NOTE &

The sink drain valve is located directly below the sink. It must be closed except when actually using the sink to maintain watertight integrity.

D.21. Clock

A 24-hour clock is mounted above the sink area just aft of the paper towel dispenser.



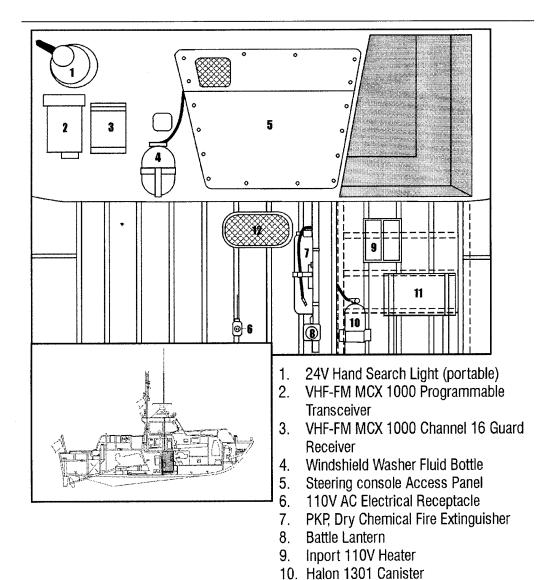


Figure 2-7
Passenger Compartment Stowage Area/Aft Bulkhead

11. Fresh Water Storage Tank12. Engine Room Viewing Window

D.22. Steering console access panel

The access panel is centered above the recessed storage area on the forward bulkhead of the pilothouse. This panel provides access to the steering controls, Morse throttle controls, and electrical cable runs for the steering console instrument clusters.



D.23. 24V hand-held searchlight

The portable searchlight is in a special bracket on the forward side of the coxswain console, to starboard of the steering console access panel.

D.24. VHF-FM DES transceiver

The VHF-FM DES transceiver is mounted on the forward side of the coxswain console, to starboard of the steering console access panel.

D.25. VHF-FM guard receiver

The VHF-FM guard receiver is mounted on the forward side of the coxswain console, inboard of the VHF-FM DES transceiver.

D.26. Windshield washer fluid bottle

The reservoir bottle is mounted on the forward side of the pilothouse bulkhead, to starboard of the steering console access panel.

D.27. Wooden ladder

The wooden ladder is located on the port side, fastened both top and bottom. It provides access between the pilothouse and the passenger compartment.

WARNING

The ladder treads will have non-skid material applied. Carpeting shall not be used on the ladder.

D.28. Stowage area

A recessed, athwartship stowage area is just aft of the passenger compartment deck and under the steering console access panel. It extends 36" under the pilothouse deck to Bulkhead 6. In addition to the following mounted items, there is ample space for boat outfit stowage (See Appendix A for a complete listing).

| Item | Location in Stowage Area |
|---|---|
| HF-SSB Tuner | On the sink aft panel. |
| 110V AC Electrical Receptacle | Bulkhead 6, below and to starboard of engine room viewing window. |
| Dry Chemical (PKP) Fire Extinguisher (10-lb.) | On the pilothouse support stanchion (after side, 21" off deck) to port of the centerline. |
| Battle Lantern | On the stanchion, 3" above the deck. Directed toward the head door. |



| Item | Location in Stowage Area |
|--|---|
| 110V AC Electric Heater | On Bulkhead 6 between Logitudinals 3 and 4. This heater is for inport using shore power. |
| 12V Battery Equalizer | On Bulkhead 6 amidship, above the batteries. It provides power to the 12V DC power panel in the pilothouse. |
| HALON 1301 Canister | Bulkhead 6, port side between Longitudinals 2 and 4. |
| Freshwater Storage Tank | In brackets on Bulkhead 6, Longitudinals 4 and 5, port side. |
| Engine Room Viewing Window | Bulkhead 6 amidship for visual checks of the engine room. |
| Bilge Pump (passenger compartment bilge) | Just forward of Bulkhead 6 on the starboard side between the keel and Longitudinal 1. BoatAlt 44 allows installation of a clear plastic, 6" access plate directly over the pump. (See Figure 3-11.) |
| Float Switch | To port side of the keel. This activates the passenger compartment bilge alarm. (See Figure 3-11.) |
| Overboard Discharge Hose and Spring Valve | This hose with valve runs from the bilge pump to a hull outlet above the waterline. (See Figure 3-11.) |
| Compartment Lighting | Two white lights in stowage area. Two white lights in main compartment. One red light in main compartment. One white light in head. |



Section E. Pilothouse

Introduction


The 41' UTB is operated from the pilothouse. This deck-level weather tight area houses most of the navigation and communication equipment. It extends from the three-paneled forward windshield, just aft of Frame 4, to the pilothouse door.


In this section

| Topic | See Page |
|----------|----------|
| Exterior | 2-22 |
| Interior | 2-28 |



Exterior

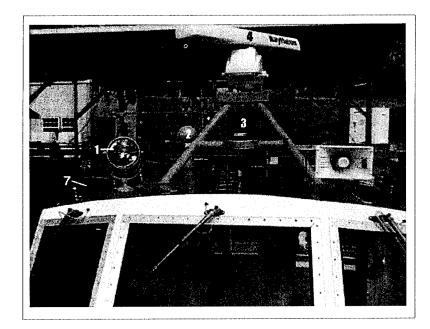

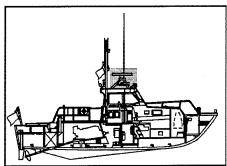

- 1. Main Searchlight
- 2. Aft Spotlight
- 3. Blue Light
- 4. Radar Antenna
- 5. Radar Antenna Pedestal
- 6. Loudhailer Speaker
- 7. Handrail

Figure 2-8
Pilothouse Top

E.1. Windows

The pilothouse has ³/₈" tempered glass windows on all four sides. The forward windshields are three fixed sections in individual, anodized aluminum frames. Each window has an independently-controlled combination wiper and washer arm. The port and starboard side windows have movable sections that slide aft. There is a sliding window on the after bulkhead of the pilothouse, extending from the centerline to the starboard side.

E.2. Main searchlight

The searchlight is located on the starboard side, forward. It can rotate through 360°.

E.3. Aft floodlight

The aft floodlight is located on the starboard side, 24" off centerline.

E.4. Rotating blue light

The blue light is mounted on the radar tripod, center shelf, forward. It is a rotating blue light.



E.5. Horn

The horn is mounted on the radar tripod, center shelf, aft of the blue light (See Figure 2-3).

E.6. Radar antenna

The radar antenna is mounted on the radar tripod, top shelf. It is a rotating antenna.

E.7. Radar tripod

The aluminum tripod with shelf is located on the centerline. It supports the marine radar transceiver, blue rotating light and horn.

E.8. Loudhailer speaker


The loudhailer speaker is mounted on the forward port corner of the pilothouse top. It should rotate approximately 350°.


E.9. Pilothouse top handrails

The two 62" long, 1" diameter stainless steel handrails run fore and aft along both sides of the pilothouse top. They are 3' off centerline and follow the contour of the pilothouse.

E.10. Side handrails

The forward deck handrails continue aft along the side of the pilothouse ending at a height even with the window. (Also see Section 2.C.4.)

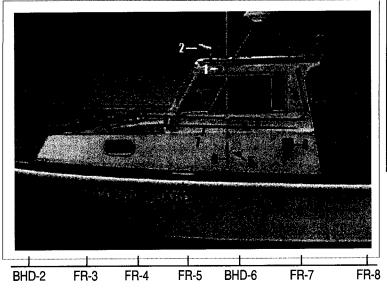

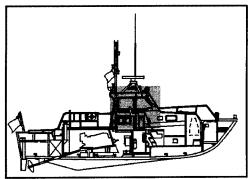

- 1. Side Running Light
- 2. Loudhailer Speaker
- 3. EPIRB Location (optional)
- 4. Shore Tie Receptacle
- FR-8 5. Fresh Water Fill and Vent
 - 6. HF-SSB Radio Antenna
 - 7. Boat Hook

Figure 2-9
Pilothouse Port Side



E.11. Side running lights

The side running lights are mounted to the pilothouse exterior side bulkheads, above each side window, 13" from the leading edge of the pilothouse top, port and starboard.

E.12. EPIRB (optional)

The optional Emergency Position Indicating Radio Beacon (EPIRB), if installed, is mounted on the exterior port side of the cabin, aft of the window and forward of the vertical handrail.

E.13. Shore-tie receptacle

The 110V AC shore-tie receptacle is located aft of the water fill outlet. It provides a connection for shore power.

E.14. Freshwater fill outlet/ vent

The freshwater fill, located midway on the port side, is connected by piping to the 20-gallon freshwater tank located in the passenger compartment stowage area, port side.

E.15. HF-SSB radio antenna

The HF antenna base-mounting bracket is welded to the main deck, port side, midway forward on the pilothouse. A hinged bracket welded to the aluminum handrail holds the antenna upright. The antenna can be folded aft or forward by releasing the bracket.

E.16. Boathooks


FR-7


BHD-6

FR-5

FR-4

Starting at a point even with the side windows and extending aft, two wooden-handled boat hooks are suspended from the aluminum cabin mounted handrails (forward deck handrails), port and starboard side, by leather straps. The boat's number is engraved into the handle.

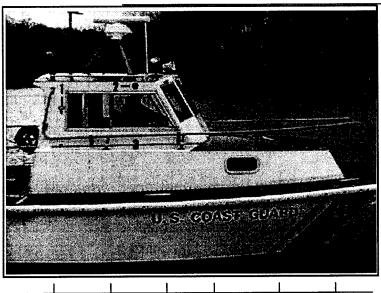

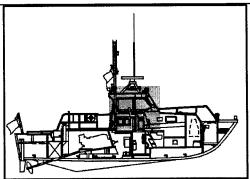

- 1. Fold-down Step
- 2. Side Running Light
- 3. Boat Hook

Figure 2-10 Starboard Side View of Pilothouse

FR-3

BHD-2




E.17. Fold-down step


A fold-down step is bolted to the starboard side forward of the handrail and aft of the window. It assists in accessing to the pilothouse top.

E.18. Side running light

(See Section 2.E.11.)

E.19. Boat hook (See Section 2.E.16.)

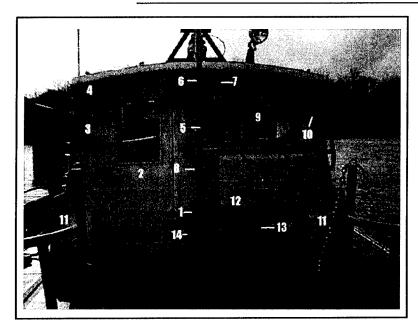

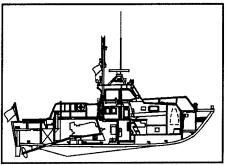

- 1. Mast Junction Box
- 2. Weathertight Door
- 3. RADHAZ Marking
- 4. Exterior Bell Mount
- 5. Mast
- 6. Mast Bracket
- 7. Portable Spotlight Receptacle
- 8. Cleat
- 9. Sliding Rear Window
- 10. Spanner Wrenches
- 11. Engine Room Exhaust Vent
- 12. Rescue Raft
- 13. Tri-gate
- 14. Stuffing Tubes

Figure 2-11
Pilothouse Aft Bulkhead

E.20. Mast junction box

The mast has a junction box 12" from the bottom, a drain hole at the bottom, and a ground strap (welded or bolted to the mast and cabin).

E.21. Door

The compartment access door is in the aft bulkhead to port of the centerline. This door (with window) is weathertight but not watertight. It measures approximately 27" by 63".



E.22. RADHAZ marking

The warning label indicating the hazards of transmitting over the AM radio.

E.23. Bell bracket

The bracket for the boat's bell (when in use) is outboard of the door on the aft upper bulkhead.

E.24. Mast pad eye

The mast has one pad eye permanently installed on top of the mast, aft of the flag halyard (not pictured).

E.25. 24V spotlight receptacle

This receptacle provides power for the hand-held 24V spotlight. It is on the aft bulkhead above the window.

E.26. Cleat

There is a 4" cleat mounted to the port side of the mast approximately 30" above the deck for securing the flag halyard.

E.27. Sliding rear window

Mounted in the aft bulkhead of the pilothouse, starboard side of centerline. One section slides open to starboard.

E.28. Spanner wrenches

Two aluminum spanner wrenches are installed in a mounting bracket on the starboard aft flare of the pilothouse.

E.29. Engine room exhaust vents

These vents are part of the aft pilothouse bulkhead at main deck level, port and starboard outboard.

E.30. Rescue and survival raft

The four or six-person raft is on a shelf on the aft starboard side of the pilothouse bulkhead. The shelf is shimmed away from the bulkhead with ¼" aluminum stock. The raft is held to the shelf by one horizontally secured shock cord. There is also a "weak link" connection to the boat. It must be manually deployed to float free in the event of a casualty.

WARNING

Keep the raft uncovered and free of any obstructions that could prevent the raft from floating free in event of a casualty.

NOTE &

A certified inspection agent must inspect and repack the raft annually. Indicate the inspection date and results in the Boat Record Book and on the raft container.



E.31. Fire main riser and trigate

The riser is a $2\frac{1}{2}$ " water supply pipe rising vertically from the deck, just aft of the pilothouse, starboard of the centerline. The attached tri-gate with two $1\frac{1}{2}$ " and one $2\frac{1}{2}$ " hose fittings, is threaded onto the riser. (Also see Section 3.C.6. and Section 3.C.7.)

E.32. Stuffing tubes

Stuffing tubes for all mast-mounted electrical and electronic hardware are in the aft pilothouse bulkhead, approximately on centerline near deck level.



Interior

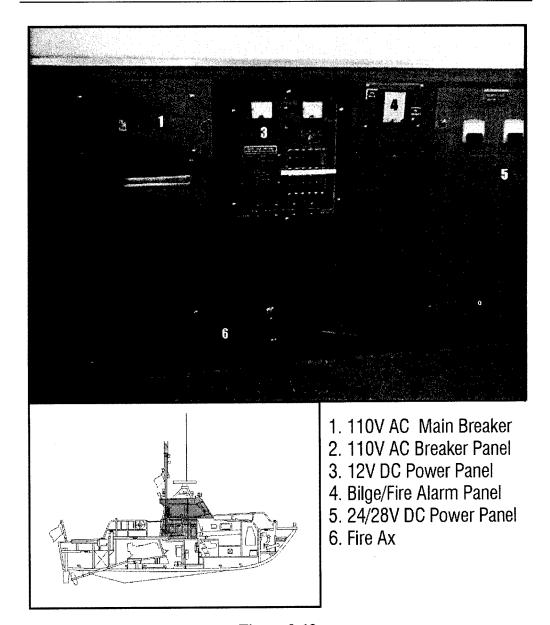


Figure 2-12
Pilothouse Interior Port Side

E.33. Deck

The deck of the pilothouse is 3/4" marine plywood on aluminum framework overlaid with marine-grade carpet.



E.34. Paneling

The port bulkhead is paneled with Provincial Cherry wood-grain Formica paneling. It is installed below window level from the pilothouse door down through the ladder/stair well area. The Formica is glued to plywood, and screwed onto the bulkhead. This paneling is also used on the inboard and aft bulkheads of the head, as well as in the gun locker.

E.35. 24/28V DC power circuit breaker panel

The 24/28V DC power circuit breaker panel is on the port bulkhead forward of the bilge/fire alarm panel. It receives power from the batteries and regulates all power necessary to operate the boat's systems, except for electronics. The panel has a voltmeter (left side of panel) for measuring battery voltage and an ammeter (right side of panel) for measuring the total amperage load on the system. (Also see Figure 3-14 for a close-up view of the panel and Section 3.G.8.)

E.36. 110V AC circuit breaker panels

Two breaker panels are on the port bulkhead. They regulate power from the shore-tie cable while the boat is moored and supply power to the engine hot starts, battery charger, heater, and receptacles. (Also see Figure 3-15 for a close-up view of the panel and Section 3.G.9.)

E.37. 12V DC circuit breaker panels

The 12V DC power circuit breaker panel is on the port bulkhead between the Bilge/Fire Alarm Panel and 110V AC panels. It receives power from the batteries through a battery equalizer and supplies power to all the electronic gear, when the boat is operating with the shore-tie removed. On the left side of the panel there is a voltmeter for measuring battery voltage and on the right side of the panel an ammeter for measuring the total amperage load on the system. (Also see Figure 3-16 for a close-up view of the panel.)

E.38. Bilge/ fire alarm panel

The bilge/fire alarm panel monitors bilge sensors in the forward cabin and engine room bilge and a smoke detector in the pilothouse. When a problem occurs it activates the boat's horn and blue light. It receives power from the 24-volt power panel and is on the port bulkhead aft of the 24-volt power panel. (Also see Figure 3-17 for a close-up view of the panel.)

E.39. Handrails

The pilothouse interior has four 1" stainless steel tubing safety handrails. The port side handrail runs between the pilothouse and passenger compartment (not shown in figure). When the handrail enters the passenger compartment, the attachment points change from the port bulkhead to the overhead. This allows the handrail to serve as a guide in foul weather and also for egress in the event of capsize. The pilothouse handrails are summarized below:



| Item | Location |
|---------------------|---|
| Starboard Side | 27" from the aft bulkhead, approx. 12" below the sliding window (32 ½" long) |
| Port Side | 3" from aft bulkhead, 39" above the deck. It runs forward 72", and then down into the passenger compartment |
| Aft bulkhead | 10" from the door (18" long) |
| Pilothouse Overhead | Centered, positioned 26" from the aft bulkhead, running athwartship (56" long) |


E.40. Fire ax


The fire ax with pick-head cover is located immediately below the 110V AC breaker panel.

E.41. Window

(Not pictured) (See Section 2.E.1.)



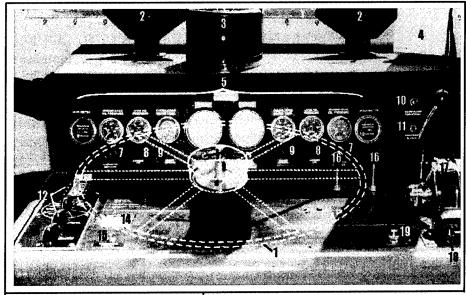

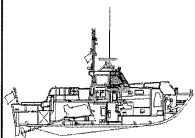

- 1. Morse Steering Wheel
- 2. Defroster Ducts
- 3. 5" Marine Compass
- 4. Depth Finder
- 5. Gauges (Port and Starboard Engines) (Reference Fig. 2-14)
- 6. Alarm Cut Out Switches
- 7. Alternator Warning Light
- 8. Main Engine Lube Oil Low Pressure Warning Light
- Main Engine Fresh Water High Temperature Warning Light
- 10. Halon Alarm Test Button
- 11. Defroster Booster Blower Switch
- 12. Electrical Control Panel (Reference Fig. 3-13)
- 13. Compass and Main Engine Gauge Dimmer Switches (Reference Fig. 3-13)
- 14. Windshield Wiper Switches
- 15. Windshield Washer Pump Switch
- 16. Engine Stop Cables
- 17. Main Engine Morse Throttle Controls
- 18. Main Engine Start Buttons
- 19. Horn Button

Figure 2-13
Steering Console



E.42. Centerline steering console & console hood

The centerline console and console hood contain the majority of the boat operating controls and gauges. The console is located in the forward pilothouse on Frame 5. The centerline steering console consists of:

| NOTE | G-S |
|-------------|-----|

If compass deviation is greater than 5° and cannot be corrected, the compass shall be overhauled and/or replaced.

| Item | Location |
|---|--|
| Steering Wheel | A 20" diameter, nonmagnetic, stainless steel, Morse steering wheel is located amidship on the steering console top. |
| Defroster Ducts | The duct work is on the pilothouse forward bulkhead and forward top of console hood. The defroster heads focus on all three fixed forward windshields. |
| Compass | A 5" marine compass is on the console hood, on centerline. A red compass light is attached for night visibility. (See Figure 3-13) |
| Depth Finder | The depth finder is to the right of the compass on top of the console hood. (Also see Section 3.G.18.) |
| Gauges | (See Section 2.E.43.) |
| Alarm Cut-Out Switches | The alarm cut-out switches beneath each tachometer control the engine alarm bells. They must remain on at all times, except when the electrical circuits are energized and the main engine is secured. |
| Alternator Light | The alternator light is below the Marine Gear Oil Pressure gauge. It comes on when the alternator is not charging the batteries. |
| Warning Lights | Located directly below the Lube Oil Pressure and Circulating Water Temperature gauges. They also indicate abnormal operating conditions. |
| HALON 1301 Alarm Horn Test Button | This button is outboard of the starboard engine hour counter. |
| Defroster Booster Blower Switch | Outboard of the starboard engine hour counter and directly below the Halon 1301 horn test button. |
| Electrical Control Panels | On the forward, port side of the steering console. This panel has a rotary control switch for the navigation lights and rocker switches for the docking lights, aft floodlight, and blue light. (Also see Section 3.G.6. for a detailed description and Figure 3-13 for a close-up view of the panel.) |



| Item | Location |
|---|--|
| Compass and Main Engine Gauge Dimmer Switches | The compass light dimmer is located aft on the electrical control panel. The engine gauge dimmer is the aft most rotary rheostat. (See Figure 3-13.) |
| Windshield Wiper Switches | On the port side of the steering console, inboard of the light switches for each wiper motor. |
| Windshield Washer Pump Switch | Just aft of the windshield wiper switches is the windshield washer pump switch. |
| Bilge Pumps Control Switches | On the forward most section of the electrical control panel. (See Figure 3-13 for a close-up of the panel.) |
| Engine Stop Cables | Starboard and forward of the wheel, 8" and 12" off the centerline, are T-handled cables that shut off fuel to the engines. |

CAUTION!

When the engines are not running the engine stop cables **must** always be in the up position. This prevents fuel leakage past the injector nozzle into the cylinders, which may cause a hydraulic lock of the engine.

| Main Engine Throttle and Drive (Morse) Controls | On the starboard side of the steering console. |
|---|--|
| Main Engine Start Buttons | On the steering console aft of the Morse Controls. They activate the 24V DC starting motors. A metal shield protects the buttons from accidental pushing and possible damage to the engine starters. |
| Horn Button | On the steering console, inboard of the starter buttons. |



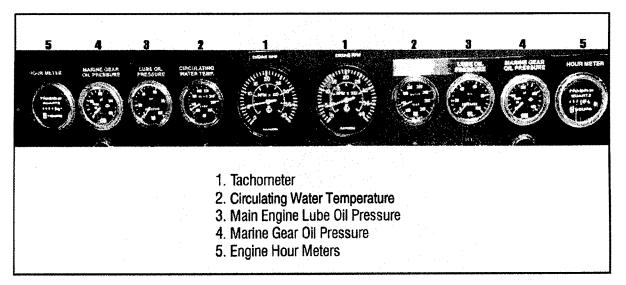



Figure 2-14
Close-up of Steering Console Gauges

E.43. Gauges

On a vertical facing plate under the overhanging console hood are a series of gauges to monitor each main engine. The gauge package for each main engine starts at the center (tachometer) and works outboard representing the respective main engine in the following order:

| Gauge | Function |
|---|---|
| Engine RPM (Tachometer) | Indicates revolutions per minute (RPM) for the engine. Normal idle is 700 to 725 RPM. Maximum allowable RPM is 2700. Maximum continuous duty speed is 2300 RPM. Red line marking is at 2700 RPM. |
| Circulating Water Temperature Gauge | Indicates temperature in the jacket water cooling system. Normal operating temperature range is 165° to 195°F indicated by green marking. |
| Lube Oil Pressure Gauge | Indicates pressure of lubricating oil within the engine. Pressure at idle should be 10 - 30 psi, increasing to 40-65 psi at cruising, with a minimum allowable pressure of 30 psi indicated by red marking. |
| Marine Gear Oil Pressure Gauge | Indicates the lube oil pressure in the marine gear. The pressure at idle should be approximately 25 to 70 psi, increasing to 190 to 220 psi at cruising speed indicated by green markings. |
| Engine Hour Counter | An "odometer" type gauge that counts the hours of engine operating time. |



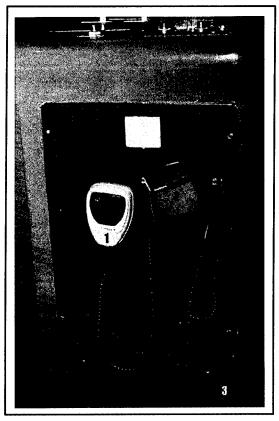

- 1. VHF-FM MCX-1000 Microphone
- 2. Ray-430 Loudhailer Microphone
- 3. Boat Plate

Figure 2-15 Steering Console Face

E.44. Steering console (face)


The following items are located on the face of the steering console. This area is located directly below the starter buttons.


| Item | Location |
|--------------------------|---|
| VHF-FM microphone | Recessed in the face of the steering console, used for transmitting over the VHF radio. |
| Loudhailer microphone | Recessed in the face of the steering console, used for speaking over the loudhailer and activating the siren. |
| Boat plate | On the steering console, below the microphones. The brass plate indicates the hull number, manufacturer, crew size, displacement, maximum passengers, maximum load, and year of construction of the boat. |



E.45. Helmsman's chair

Centered just aft of the steering console on a pedestal stand is the adjustable helmsman's chair. The padded chair with armrests is designed to swivel, move fore and aft, and up and down for the helmsman's personal comfort.

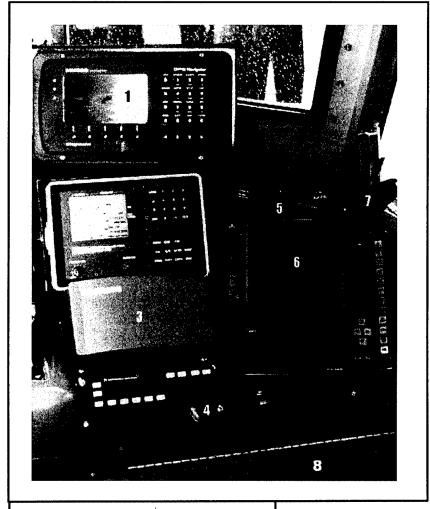

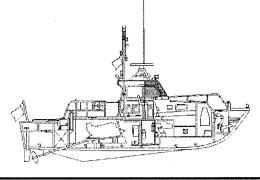


- 1. MX-200 DGPS
- 2. VHF-FM Radio Direction Finder
- 3. Ray-430 Loudhailer
- 4. VHF-FM MCX-1000 Control Head
- 5. Binocular Stowage
- 6. AN/SPS-69 Surface Radar
- 7. Chart Light
- 8. Chart Table (folded down)


Figure 2-16
Electronics Console



E.46. Electronics console

The electronics console is to the right of the steering console. It houses the majority of the electronic navigation instruments. The contents of the console are discussed in Sections 3.G.15, 3.G.16, 3.G.17, and 3.G.19

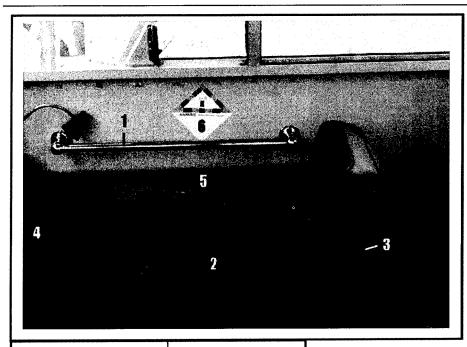

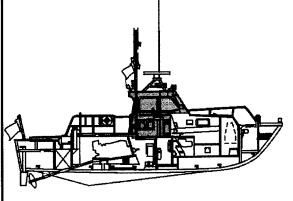

- 1. Hand Rail
- 2. Navigator's Seat
- 3. Battle Lantern
- 4. Chart Table
- 5. HF-SSB Radio
- 6. RADHAZ Marking

Figure 2-17
Pilothouse Interior Starboard Side

E.47. Navigator's seat

The Navigator's seat is located on the starboard side between the helmsman's chair and the starboard bulkhead off the deck. This seat is nonadjustable.

E.48. Battle lantern

The battle lantern is located on the starboard bulkhead just below and aft of the navigator's seat. (Not pictured)



E.49. Chart table

The Navigator's seat is located on the starboard side between the helmsman's chair and the starboard bulkhead off the deck. This seat is nonadjustable.

E.50. HF-SSB radio with microphone

The HF radio is located on the starboard bulkhead adjacent to the navigator's seat, and under the handrail.

marking


E.51. RADHAZ The radiation hazard sticker is on the bulkhead above the HF radio (Type 5).

E.52. Handrails

(See Section 2.E.39.)

E.53. Window

(See Section 2.E.1.)

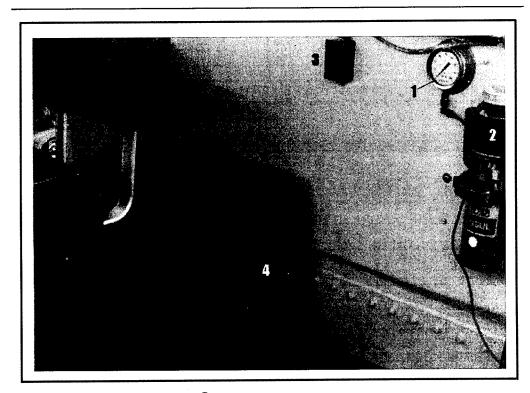


- 1. Fire Main Pressure Gage
- 2. Dry Chemical Fire Extinguisher
- 3. 110VAC Outlet
- 4. Storage/Bench Seat


Pilothouse Interior Aft Bulkhead Figure 2-18



| E.54. Door | (Not pictured) (See Section 2.E.21.) | |
|--|---|--|
| E.55. Fire main pressure gauge | The fire main pressure gauge is located on the aft bulkhead, inboard of the PKP fire extinguisher. | |
| E.56. Dry chemical (PKP) fire extinguisher | The second PKP on board the boat is located on the aft bulkhead just inboard of the door hinge. The other is located in the passenger compartment stowage area. | |
| E.57. 110V AC outlet | The outlet is located below the aft window outboard of the fire extinguisher. | |
| E.58. Bench seat | The padded bench seat is mounted in the back starboard corner against aft bulkhead. The top opens to hold navigational publications and equipment. | |
| E.59. Bell | When not in use, the bell is mounted in the pilothouse on the aft bulkhead, port side, outboard of the door. (Not pictured) | |
| E.60. Handrails | (Not pictured) (See Section 2.E.39.) | |
| E.61. Window | (Not pictured) (See Section 2.E.1.) | |



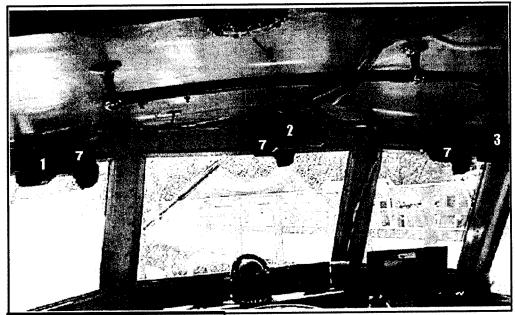

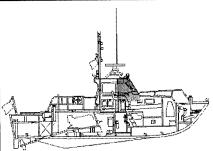

- 1. VHF-FM Channel 16 Guard Speaker
- 2. Direction Finder Speaker
- 3. VHF-FM Transceiver Speaker
- 4. Searchlight Handle and Switch
- 5. Loudhailer Directional Handle
- 6. Space Lighting
- 7. Wiper Motors

Figure 2-19 Overhead Pilothouse

E.62. VHF-FM channel 16 guard speaker

The VHF-FM Channel 16 guard speaker is on the overhead, forward, port corner.

E.63. Direction finder speaker

The DF speaker is on the overhead, forward, centerline.

E.64. VHF-FM transceiver speaker

The VHF-FM transceiver speaker is on the overhead, forward, starboard corner.


wiper motors




| E.65. Searchlight handle and switch | The searchlight handle and switch are on the overhead in the forward, starboard corner. The handle controls the searchlight aim through 360 degrees. A rotary on/off switch is just aft of the handle. | |
|--|--|--|
| E.66. Loudhailer directional handle | The loudhailer handle is on the overhead in the forward, port corner. The handle controls speaker direction through 350 degrees. | |
| E.67. Space lighting | The one red light is mounted in the overhead just port of centerline, aft of the handrail. | |
| E.68. Smoke detector | The smoke detector is mounted in the overhead, centerline, to starboard of the space lighting. (Not pictured) | |
| E.69. Handrail | The overhead handrail is available to assist crew and passengers with stability during underway operations. (Also see Section 2.E.39.) | |
| E.70. Windshield | There is a 24V DC wiper motor located above each of the three forward fixed windows which connects to exterior wipers through the cabin top. | |



Section F. Main Deck

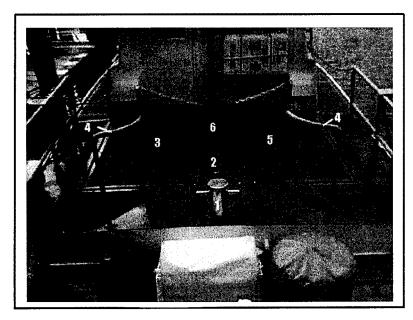

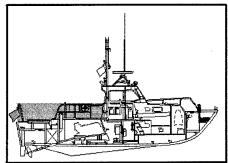

- 1. Tow Bitt
- 2. Engine Room Scuttle
- 3. Port Engine Hatch
- 4. Mast Support Rail
- 5. Stbd Engine Hatch
- 6. Softpatch

Figure 2-20
Main Deck (Aft of Pilothouse)

F.1. General

The main deck area aft of the pilothouse contains a variety of equipment and fittings to support the boat's missions. This section includes the area aft of the pilothouse (at Frame 7) to the well deck (Bulkhead 10).

F.2. Tow bitt

The tow bitt is 6" forward of Bulkhead 10, main deck, centerline. It is made of schedule 80 aluminum pipe. It may be polished to allow smoother operation when tending a tow.

F.3. Cleats

(See Section 2.K.I.)

F.4. Engine room scuttle

A 19" x 26", flush-mounted, watertight scuttle, on centerline just forward of Frame 9. It provides access to the engine room. The scuttle is opened using the hand lever from the inside or the T-wrench from the outside.

F.5. Mast support handrails

A pair of aluminum mast support/handrails with safety chain (chain covered 7" - 12" by chafing gear) are just aft of Frame 9, to port and starboard of the towing bitt.



F.6. Main engine hatches

A 4'x 6' watertight hatch with spring-loaded hinges and flush-mounted dogs is over each engine. The hatches open from the main deck only, using the T-wrench.

NOTE &


Inspect the hatches regularly and keep them watertight. Leaks can flood the turbocharger intakes and damage the engine.


CAUTION!

When opening the engine hatches, be sure the safety latches adjacent to each hinge are in the secure position before releasing the hatch. Likewise, be sure the safety latches are disengaged (pulled inboard) before closing the hatches. Failure to do so may bend the hatch hinges.

F.7. Soft patch

The soft patch is a removable section of the deck provided for access when removing or installing engines.

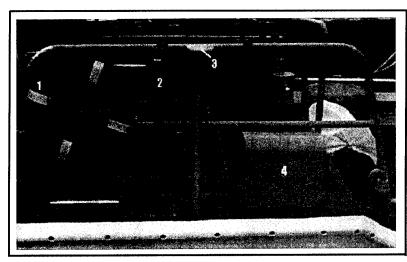

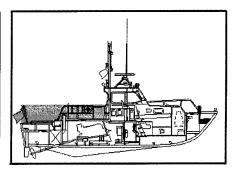

- 1. Life Ring Bouy
- 2. Float Light
- 3. M-60 Gun Mount
- 4. Engine Room Intake Vent

Figure 2-21
Main Deck Port Side

F.8. Main deck handrails

There are handrails welded to the main deck along the outside perimeter from Frame 8 to midway between Bulkhead 10 and Frame 11. A detachable safety chain fitted with a D-ring and shackles connects the after end of the pilothouse handrail to the forward part of the main deck handrail, port and starboard.

F.9. Ring buoy and floating marker light

A 24" ring buoy rests in brackets welded to the outboard side of the port handrail. The battery operated marker light rests in a fitted bracket, outboard and aft of the ring buoy. The bracket is bolted to a base plate on the handrail.



F.10. M-60 machine gun mount bracket


The M-60 mounting bracket is centered in the main deck handrail (the second stanchion) both port and starboard side at Frame 9.


F.11. Main engine air intake vents

These vent ducts are outboard of the main deck handrails between Frame 9 and Bulkhead 10. They provide fresh air to the engine room.



Section G. Mast

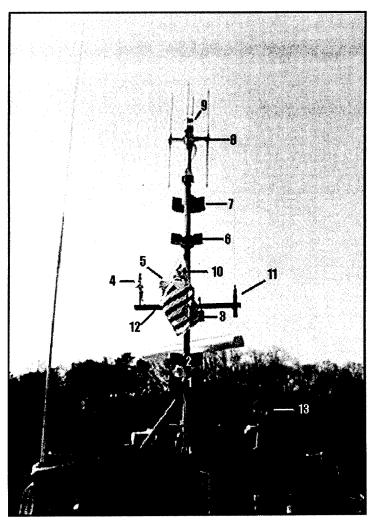

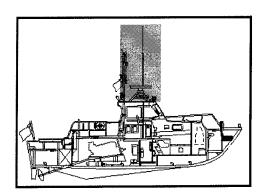

- 1. Stern Light
- 2. 2nd Towing Light
- 3. 2nd Mast Head Light
- 4. GPS Antenna
- 5. DGPS Antenna
- 6. Towing Light
- 7. Mast Head Light
- 8. VHF-FM ADF Antenna
- 9. Anchor Light
- 10. CG Ensign
- 11. VHF-FM Radio Antenna
- 12. Mast Cross Arm
- 13. Aft Floodlight

Figure 2-22
Mast
(Looking forward from the Main Deck)

G.1. General

The 17' mast is on the centerline just aft of the pilothouse bulkhead (at Frame 7) and is hinged to fold down aft. Wires for electrical and electronic systems go up through the mast and exit at the appropriate level. The mast has a junction box 12" from the bottom, a drain hole at the bottom, and a ground strap (welded or bolted to the mast and bolted to the cabin).

NOTE &

All wires must exit the mast to the pilothouse through the junction box. All splices or connections for these wires must be inside the junction box. Where wires exit the mast at light or antenna levels, grommets must be used to prevent chafing.



G.2. Mast lights The installed configuration is:

| Light | Location |
|-------------------------|--|
| Anchor (white) | Top center of the mast, 15' above the mast bottom plate. |
| Masthead (white) | Forward side of mast, 12'11" above the mast bottom plate. |
| 2nd Masthead (white) | Forward side of the mast, 9'7" above the mast bottom plate. |
| Stern (white) | Aft side of the mast, 7'7" above the mast bottom plate. |
| Towing (yellow) | Aft side of the mast, 11' 7 ½" above the mast bottom plate. |
| 2nd Towing (yellow) | Aft side of the mast, 8' 8 3/4" above the mast bottom plate. |

G.3. RDF antenna

The four sector radio direction finder (RDF) antenna is mounted just below the anchor light a top the mast. Due to the four antenna prong's additional height above the light, the resulting fixed mast height is 17'.

G.4. Crossarm antennas

There is a 36" long aluminum crossarm installed on the forward side of the mast just above the second masthead light. The following is a list of the antennas mounted to this crossarm:

| Antenna | Location |
|--|--|
| Global Positioning Antenna | On the port side of the crossarm. |
| Differential Global Positioning Antenna | Inboard of the Global Positioning Antenna, on the port side. |
| VHF-FM Antenna | On the starboard side end on top of the crossarm. |
| VHF-FM Guard Antenna | On the starboard side end, underneath the crossarm, below the VHF-FM antenna. (Not pictured) |



Section H. Engine Room

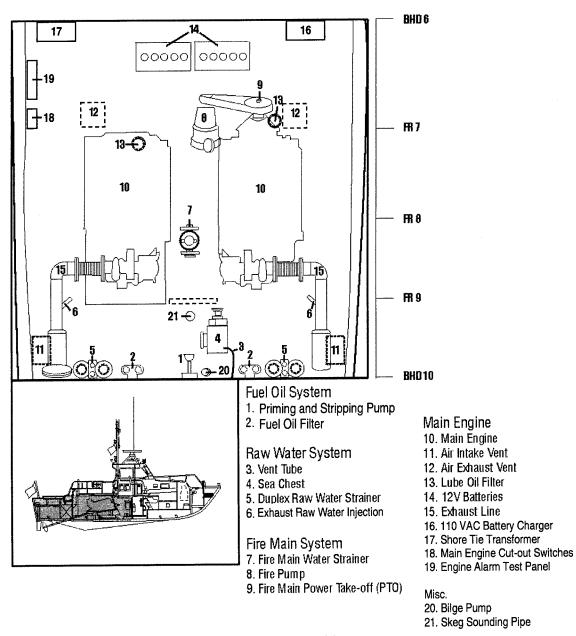


Figure 2-23
Engine Room

H.1. General

The engine room extends from Bulkhead 6 to Bulkhead 10, below the main deck.



H.2. Engine room ladder

This ladder is directly beneath the engine room scuttle for access to the engine room.

H.3. Electrical system

This system provides all electrical power utilized by the boat in port and underway.

| Item | Location |
|---------------------------------|--|
| 12V Batteries | The two batteries are just off centerline port and starboard, just aft of Bulkhead 6. They are wired in series to produce 24V DC. |
| Battery Charger | This is mounted to Bulkhead 6, at the extreme starboard side of the engine room. |
| Shore-Tie Transformer | This is on the aft side of Bulkhead 6, at the extreme port side. |
| Main Engine Cut-out Switches | On the port side hull, just forward of Frame 7. These two switches prevent accidental main engine starting during maintenance. |
| Engine Alarm Test Panel | On the port side hull, just forward of the engine cut-out switches. This panel has alarm system test switches (engine jacket water temperature and lube oil pressure) for each engine. |
| 120V AC Receptacle | On the port side hull between Frames 7 and 8. |
| Compartment Lighting | There are four 24VDC white lights on the overhead: one forward and one aft on centerline and one outboard of each engine. |

H.4. Raw water system

This system provides cooling water for operation of the main engines, as well as water for the firefighting system.

| Item | Location |
|-----------|---|
| Vent Tube | Used to vent the sea chest of air. The hose runs from the top of the sea chest and penetrates through Bulkhead 10 into the well deck, between the drop pump and tow reel. |
| Sea Chest | Starboard of centerline, between Frame 9 and Bulkhead 10, just aft of the Engine Room ladder. It serves both main engines and the firemain and vents to the well deck. |



| Item | Location | |
|--------------------------------|--|--|
| Duplex Raw Water Strainers | Just forward of Bulkhead 10 at Longitudinals 4 and 5 port and starboard sides. | |
| Exhaust Raw Water Injection | Each main engine routes heated raw water from the system into the exhaust line at Frame 9. | |

H.5. Fire main system

This system provides water to a fire riser on the main deck for distribution to firefighting and dewatering equipment.

| Item | Location | |
|------------------------------------|--|--|
| Fire Main Strainer | On the centerline just forward of Frame 9 (underneath the access plate and just below the ladder), this strainer is supplied by a 3" IPS line to accommodate the firemain pump capacity. | |
| Fire Pump | Inboard of the starboard main engine at Frame 7. | |
| Fire Main Power Take- Off (PTO) | On the forward end of the starboard main engine. It produces the power to drive the fire pump. A safety catch keeps the PTO handle disengaged when the pump is not operating. | |

WARNING 💖

Do not engage or operate the PTO over 1,000 RPM.

H.6. Main engines

The main engines are the propulsion source for the 41' UTB. The starboard engine also operates the fire pump.

| Item | Location |
|-------------------------------------|---|
| Cummins Diesel Engines (VT-903M) | Port and starboard between Frames 7 and 9. The engines are turbocharged Cummins diesels. |
| Air Intake Vent | Just forward of fuel tank vents, outboard of port and starboard side liferails, aft of Frame 9. They extend into the engine room to a level below the main engine turbochargers. |
| Air Exhaust Vent | On the aft pilothouse outboard of door (port) and raft (starboard) at Frame 7. At main deck level the ductwork is a part of the aft pilothouse bulkhead, port and starboard side. |
| Lube Oil Filters | These filters are at the forward starboard end of each main engine. |



| Item | Location | |
|------------------|--|--|
| Fuel Oil Filters | On Bulkhead 10, port and starboard of the centerline. | |
| Exhaust Lines | Beginning on the aft outboard side of each main engine, the exhaust lines pass through Bulkhead 10 outboard of longitudinal 5. | |

H.7. Bilge pump

This pump is starboard of centerline just forward to Bulkhead 10. It discharges overboard through a hose to the starboard side through a check valve.

NOTE &


All crew members should remain aware that Federal laws prohibit the dumping oil pollution and hazardous material discharge in all navigable waters of the United States.


H.8. Skeg sounding pipe

This is a ¾" diameter, 10" long, schedule 40 aluminum pipe with screw cap. It is welded into the hollow, airtight skeg. It is located just aft of Frame 9, and just starboard of the centerline.



Section I. Well Deck

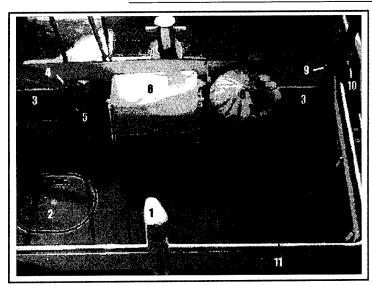

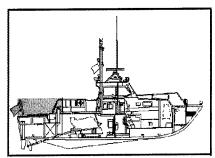

- 1. Flagstaff
- 2. Lazarette Scuttle
- 3. Deck Storage Boxes
- 4. Fuel Oil Fill/Sounding Tubes
- 5. 5-Gallon Gas Can (w/cover)
- 6. Towline and Stowage Reel (w/cover)
- 7. Sea Chest Vent
- 8. Dewatering Pump (w/cover)
- 9. Engine Room Hatch Tension Bar Access
- 10. Fuel Tank Vent
- 11. Taff Rail

Figure 2-24 Well Deck

I.1. General

The well deck is the recessed area of the weather deck between the main deck and the transom.

I.2. Flagstaff

A 6'6" Flagstaff is fitted in a socket on the centerline, just aft of the taff rail in the transom deck. A #11 Nation Ensign is hung from it while in port and underway.

I.3. Lazarette scuttle

Access to the lazarette is through a 19" x 26", flush-mounted, watertight scuttle. The scuttle can be opened using the hand lever from the inside or a T-wrench from the outside.



I.4. Deck storage boxes

The boxes are located outboard, port and starboard sides. They double as access steps into the well deck area. The lids for these boxes are held closed by rubber straps. The bottom of these boxes should have an aluminum grating to keep stowed items off the deck. Within these boxes are items per Appendix A.

I.5. Fuel oil fill/sounding tubes

Fill/sounding tubes are on the inboard side of the deck boxes aft of Bulkhead 10 both port and starboard sides.

I.6. 5-Gallon gas can

The can is located inboard of the port deck box. The optional cover if used, shall be red in color.

I.7. Towline and storage reel

The reel is on the centerline just aft of Bulkhead 10. The reel holds 600' of 2 3/4" DBN line. The required fitted cover is made of naugahyde and is white in color. The cover keeps the sunlight from causing damage to the line when not in use.

I.8. Sea chest vent

The vent exits Bulkhead 10 just below main deck level to starboard of the tow reel.

I.9. Dewatering pump

This pump, enclosed in a watertight canister, is secured in a special bracket on the starboard side inboard of the deck stowage box. The optional cover if used, shall be orange in color.

I.10. Engine room hatch tension bar access

Access to adjust, remove, or install the torsion bar is through a plate located in Bulkhead 10, above and outboard of each deck storage box.

I.11. Fuel tank vents

These vents are just aft of Bulkhead 10, port and starboard gunwales. They are fitted with 40-mesh flame screens.

I.12. Taff rail

A 1-1/4" polished schedule 40 pipe that follows the contour of the well deck. Used to fairlead towline over the side.

I.13. Fuel tank sounding rods

These flat measuring rods (not pictured) are in brackets welded to Frames 11 and 12, under the gunwales port and starboard side. The measuring side of the rod shall be unpainted, and the reverse side shall be painted flat black. (See Figure 3-2 for measuring level marking points.)



| I.14. Rudder arms | The rudder arms are under the transom deck between Frames 12 and Bulkhead 13 and Longitudinals 2 and 3, port and starboard sides. (See Figure 3-9) | |
|----------------------|--|--|
| I.15. Hydraulic ram | (See Section 3.B.3. and Figure 3-9) | |
| I.16. Tie rod bar | This adjustable rod is under the transom deck and connects the two rudde arms. (Also see Section 3.B.4. and Figure 3-9.) | |
| I.17. Cleats | (See Section 2.K.1.) | |





Section J. Lazarette

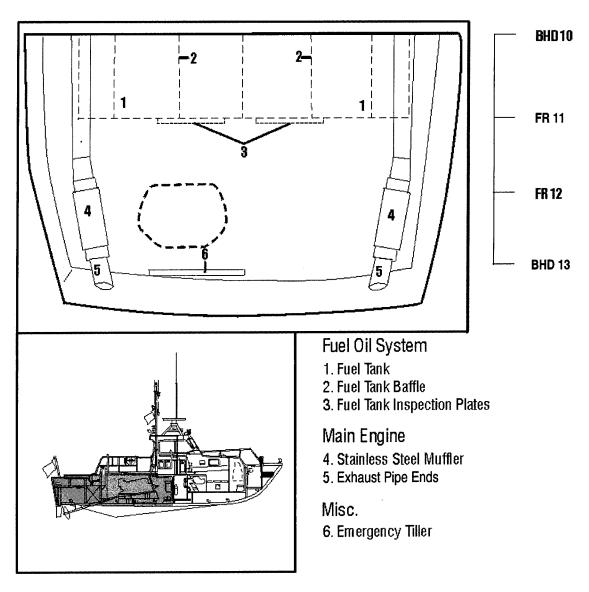


Figure 2-25 Lazarette

J.1. General

The lazarette is the fourth watertight compartment of the boat that extends from Bulkhead 10 to the transom below the well deck.

J.2. Emergency tiller

The emergency tiller is stored in the lazarette between Frame 12 and Bulkhead 13 in brackets mounted to the port side Longitudinals 2 and 5.



J.3. Rudder tube

The rudder tubes are between Frames 12 and Bulkhead 13 both port and starboard sides at Longitudinals 2 and 3.

J.4. Fuel oil system

This system provides fuel oil to the main diesel engines.

| Item | Location |
|--------------------------------|---|
| Fuel Tanks | Two fuel tanks with a common center bulkhead are between Bulkhead 10 and Frame 11. They run athwartship (not fully side to side), and are built into the hull. |
| Fuel Tank Baffles | Each tank has one removable baffle installed in a vertical position athwartship in the center of the tank. |
| Fuel Tank Inspection Plates | Two removable inspection plates allow access inside the tanks at Frame 11 just outboard of the keel port and starboard side. Access is from within the lazarette. |

J.5. Stainless steel mufflers

These connect with the exhaust pipes in the lazarette at Frame 12.

J.6. Exhaust pipe ends

These pipes, the last piece of the exhaust lines, are welded into the transom with the stainless steel mufflers fitted over them.

J.7. Shaft strut air test fittings

The air test fittings are between Frame 11 and 12 at Longitudinal 3, port and starboard. Each fitting has a $\frac{1}{2}$ " coupler and $\frac{1}{2}$ " flush stainless steel allan head-type plug for air testing.



Section K. Mooring Equipment and Fittings

K.1. Cleats

The boat has eight 15" stainless-steel deck cleats, paired port and starboard. They are at Bulkhead 2, Frame 5, 14" aft of Frame 8, and at Frame 11. The cleats are bolted through the deck, have locknuts and stainless steel flat washers securing them, and are designed to withstand the force of boats towed alongside.

NOTE &

Cleats should be inspected regularly and replaced if cracked or deformed. Either hollow or solid cleats are authorized. If it becomes necessary to replace a cleat, it must be replaced with a solid cleat.

K.2. Fenders

Fenders are stowed in the passenger compartment stowage area.

K.3. Lines

Four mooring lines, two 30' lengths and two 60' lengths of 2 ¾" DBN, are required. They are stowed in the passenger compartment stowage area. Units are authorized up to 150' of additional line, stowed in the storage area, as the operating area dictates.





Chapter 3 Boat Systems and Components

Overview

Introduction

This chapter discusses the 41' UTB's mechanical, electronic, and manual operating systems. It describes basic operating characteristics and provides information for efficient use of the equipment and for prevention of casualties.

In this chapter

This chapter contains the following sections:

| Section | Title | See Page |
|---------|---------------------------|----------|
| Α | Propulsion System | 3-3 |
| В | Steering System | 3-21 |
| С | Fire Main System | 3-23 |
| D | Firefighting Equipment | 3-25 |
| E | Dewatering Equipment | 3-27 |
| F | Fire Extinguishing Agents | 3-31 |
| G | Electrical System | 3-35 |





Section A. Propulsion System

Overview

Introduction

This propulsion system provides the ability for the 41' UTB to accomplish all its missions. For each of these systems, addition information is provided in the manufacturers technical publications.

In this section

This section contains the following information:

| Topic | See Page |
|---------------------------------|----------|
| Engines | 3-4 |
| Lubrication Oil System | 3-5 |
| Fuel Oil System | 3-7 |
| Main Propulsion Cooling Systems | 3-11 |
| Engine Exhaust System | 3-15 |
| Engine Alarm System | 3-17 |
| Main Propulsion System | 3-18 |



Engines

A.1. General

The main engines on the 41' UTB are twin VT-903M Cummins marine diesel engines. Except for the front-end modifications (starboard engine only) required to install the firemain power take-off, all engines of the same number are interchangeable and have the same fuel consumption and speed figures. The specifications are:

- 340 shaft horsepower
- four-stroke
- eight-cylinder
- liquid-cooled
- right-hand rotation from the front
- Model VT-903M which represents:

V - block configuration

T - turbo charged

903 - cubic-inch displacement

M - marine version




Lubrication Oil System

A.2. General

The Cummins lube oil system (See figure 3-1) is a full-flow, high-pressure lubricating system. Oil capacity is 5 gallons in the sump and approximately 1 additional gallon in the lines and filter. This system is comprised of a pump, cooler, and filter. The lube oil type used is 15W40.

CAUTION!

Use care in adding lube oil to this engine. The interval marks on the dipstick between "low" and "high" represent two quarts. If overfilled, the engine seals may be damaged.

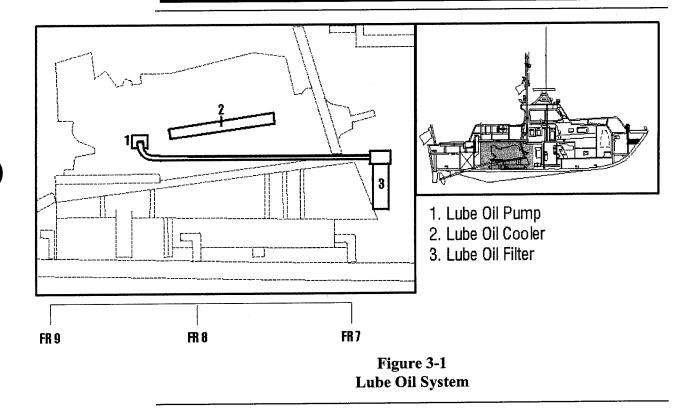

A.3. Lube oil pump

This internal engine, gear-type, pressure-regulated pump produces lube oil systems operating pressures of 10 - 30 psi at idle and 45 - 65 psi at cruising speed (30 psi minimum).

A.4. Lube oil cooler

Lubricant oil circulating through the engine passes through this externally mounted device and is indirectly jacket water cooled before continuing circulation.



A.5. Lube oil filter

This externally mounted spin-on type filter receives lubricating oil from the lube oil cooler. This filter removes microscopic particles from the lubricating oil to reduce engine wear. A bypass check valve in the filter head allows continuous flow if the filter becomes clogged.



Fuel Oil System

A.6. Fuel tank

Fuel oil is carried in two, 243.4 gallon tanks with a common center bulkhead. The tanks are built along the contour lines of the hull between Bulkhead 10 and the aft bulkhead of the fuel tank at Frame 11. Each tank tapers inboard from Longitudinal 5 on the bottom shell plate to Longitudinal 4 at main deck level to allow sufficient room for the main engine exhaust lines to pass outboard of the tank. The tanks are accessed within the lazarette through the inspection plates in Frame 11 for inspecting and cleaning. A removable baffle reduces free surface effect within each tank. (Also see Section 2.J.4.)

A.7. Fuel fill/sounding pipe

A fuel fill/sounding pipe is installed in each tank inboard of the deck storage boxes in the well deck area. It extends through the well deck ending 2" from the bottom of each tank. A striker plate installed directly under each sounding pipe prevents wear on the bottom shell plating when sounding the tank. A calibrated, aluminum, flat bar sounding rod is stowed in brackets welded to Frames 11 and 12 on the port and starboard sides of the well deck (See Section 2.I.13.). The fuel sounding bar shall have markings at the following fuel levels:

| Volume (gal.) |
|---------------|
| 50 |
| 75 |
| 100 |
| 125 |
| 150 |
| 175 |
| 200 |
| 225 |
| 95% (231.5) |
| 100% (243.4) |

Figure 3-2
Fuel Tank Sounding Table



Main Engine

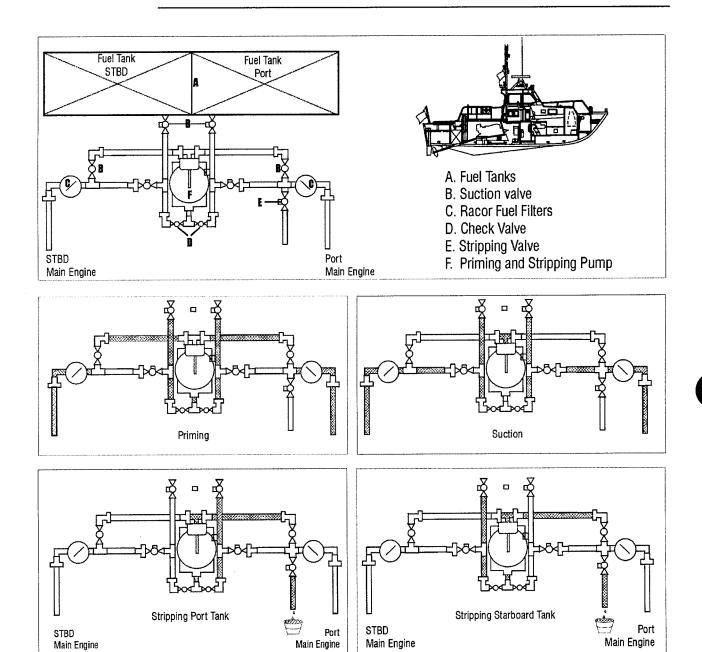


Figure 3-3 Fuel Oil Supply System

Main Engine

Main Engine



A.8. Fuel vent

(See Section 2.I.11.)

Fill fuel tanks to 95% capacity (231.5 gallons) upon completion of each sortie. This will:

- minimize condensation in the fuel tank preventing water contamination of the fuel
- allow a void for natural expansion of vapors as the fuel heats.
- contribute to operational readiness.

A.9. Suction ports

Each tank has a single source of suction from which to draw fuel oil. This suction port is used for priming the system and day-to-day operations. This suction port is also used for stripping contaminated fuel from the tanks.

A.10. Stripping lines

Stripping lines with ball valves are installed to remove water or sediment from the bottom of the tank as necessary.

A.11. Priming and stripping pump

A dual-purpose, hand-operated pump is in the supply side of the fuel system. The pump removes contaminated fuel from the bottom of either tank. It also provides fuel to prime the fuel supply system as necessary. The pump transfer capacity is rated at 20 gallons per 100 strokes.

A.12. Fuel oil filter

This filter/water separator-type Racor filter installed in each engine fuel line removes finer contaminants and trace amounts of water from the fuel. The filters are on Bulkhead 10 outboard of the centerline.

A.13. Fuel supply line

The fuel supply lines have manually activated ball valves, a priming and stripping valve, and directional flow check valves. These provide fuel passage and control from each tank through the various components.

A.14. Main engine fuel pump

For each main engine, a fuel pump draws fuel from the respective fuel tank through the line, strainer, and filter and then delivers it to the fuel injectors under pressure. Excess fuel not used for combustion is circulated through the injectors to cool and lubricate.

A.15. Fuel oil return line

The fuel return lines at the front of each cylinder head merge into one return line for each engine. These fuel lines carry excess fuel from each engine to standpipes in the outboard corners of Bulkhead 10. Fuel flows from the standpipe back to each fuel tank.



A.16. Fuel oil check valve

A check valve in the fuel return is at the forward, starboard side of each engine. It prevents fuel backflow to the injectors while the engine is secured. It also maintains a positive prime on the system.

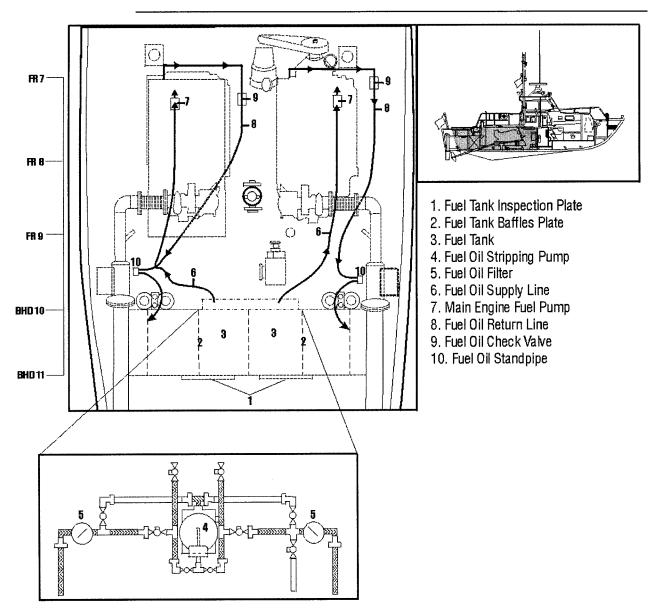


Figure 3-4
Fuel Oil System



Main Propulsion Cooling Systems

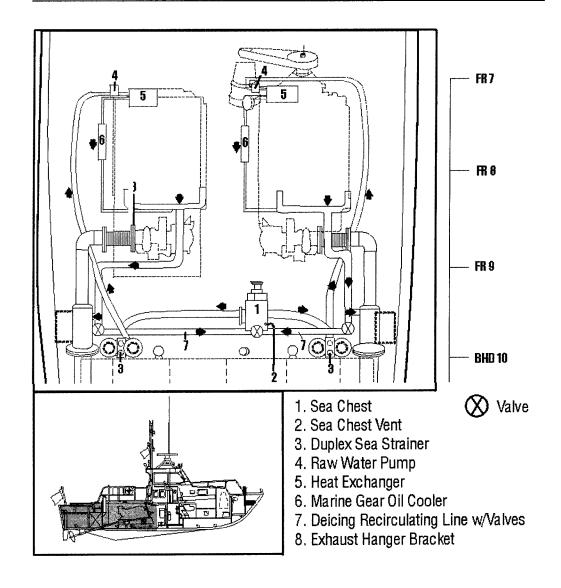


Figure 3-5
Raw Water System

A.17. General

To maintain efficient operating temperatures in the main engine and reduction gear, the boat uses a dual raw cooling/jacket water cooling and heating system. The raw water cools the closed-circuit jacket water system in the engine heat exchanger, located on the top, forward-most portion of each engine.



A.18. Raw water system

Raw water passes through a tube bundle, located within the heat exchanger. As jacket water passes over these tubes, heat is transferred from the engine's jacket water to the raw water and is carried away. In addition to removing heat from the main engines, the raw water also passes through the marine gear oil coolers and assists in cooling the engine exhaust gases. (See Figure 3-5.)

A.18.a. Sea chest

The sea chest is a rectangular, fiberglass box bolted internally to the hull shell plating in the engine room. It provides water to the main engine and firemain systems. A perforated cover plate bolted externally over the sea chest opening reduces air turbulence and prevents debris from entering the sea chest.

| Item | Location |
|-----------------------------|--|
| Sea chest vent | The sea chest vent line on top of the sea chest, allows trapped air to be vented into the atmosphere. The vent line goes aft, through a ball-check valve, and up Bulkhead 10. The line exits Bulkhead 10 in the well deck to starboard of centerline. |
| De-icing recirculating line | The de-icing recirculating line is a branch line off the main engine exhaust raw water injection fitting. It has a valve for regulating flow. This line carries heated raw water to the sea chest for de-icing during cold water operations. Heated raw water routed to the sea chest must be controlled to prevent main engine overheating or high muffler/exhaust pipe temperatures. |

A.18.b. Duplex sea strainer

A 2 ½" duplex sea strainer is installed in the raw water supply line between the sea chest and the main engine raw water pump. The dual basket design has a switching handle. This switching handle allows cleaning of both strainer baskets without interrupting the water flow to the raw water pump.

CAUTION!

Disruption of raw water flow for more than 3 minutes will damage the raw water pump impeller.



A.18.c. Raw water pump

Each engine is indirectly cooled by a gear-driven, impeller-type pump. Pump output is governed by engine operating speed (RPM). The pump is on the forward, port side of each engine. It delivers up to 60 gallons of raw water per minute through the heat exchanger and reduction drive oil cooler, depending on engine speeds (RPM).

A.18.d. Marine gear oil cooler

Raw water from the heat exchanger passes through the oil cooler. This raw water is then routed into the recirculating line for injection into the exhaust combustion chamber.

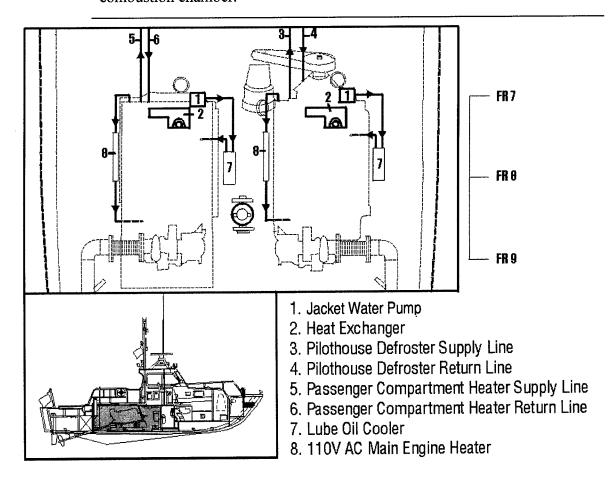


Figure 3-6
Jacket Water Cooling and Heating System



A.19. Jacket water system

This is a closed, internal main engine circulating system that has a 12-gallon capacity (See figure 3-6). In addition to cooling the main engine, it provides heated coolant to the pilothouse windshield defroster units and the passenger compartment underway heater. The coolant is a mixture of glycol antifreeze and fresh water, proportioned in accordance with manufacturer's instructions. In addition, an installed canister releases a timed amount of corrosive inhibitor into the coolant system.

NOTE &

The antifreeze used in the jacket water system must be compatible with DCA. **Do not** use Downtherm 209 antifreeze.

A.19.b. Heat exchanger

In the exchanger, the hot jacket water coolant has heat removed by cool raw water passing through a tube bundle immersed in the hotter, jacket water engine coolant. Thus, the raw water transfers the heat from the jacket water coolant without contaminating the jacket water system.

A.19.c. Pilothouse defroster

Heated coolant in the jacket water system passing from the starboard main engine provides heat for the pilothouse defroster.

A.19.d. Passenger compartment heater

Heated coolant in the jacket water system passing from the port main engine provides heat for this heater. (Also see Section 2.D.13.)

A.19.e. Lube oil cooler

This externally mounted cooler has separate passages for jacket water system coolant and main engine lube oil. The jacket water system coolant carries heat from the lube oil, through the system and back to the heat exchanger.

A.19.f. 110V AC main engine heater

This externally mounted, main engine block/coolant heater is integrated into the jacket water coolant system on each engine. The heater maintains the engine coolant temperature between 100 and 120 when the main engines are not operating and shore power is supplied.



Engine Exhaust System

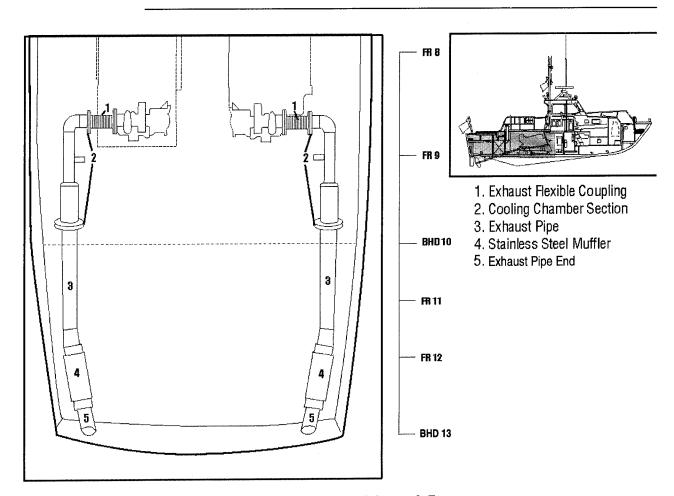


Figure 3-7
Main Engine Exhaust System

A.20. Functions

The exhaust system serves the following functions:

- discharges toxic main-engine exhaust gases;
- discharges quantities of heated raw water from the raw water system; and
- reduces the crew's exposure to the exhaust gases.

A.21. Exhaust manifold

Exhaust manifolds are bolted to each main engine cylinder head. The jacket water system circulates coolant through internal passages in the exhaust manifolds. This cools the manifolds and indirectly cools the exhaust gases.



A.22. Exhaust riser

The exhaust riser connects both engine exhaust manifolds. It balances and directs the exhaust gas, which drives the turbocharger. Raw water system coolant leaving the main engine heat exchanger and the marine reduction gear oil cooler passes through tubing inside the exhaust riser. This raw water coolant piping indirectly cools the exhaust gases before they enter the turbocharger.

A.23. Exhaust pipe

The exhaust pipe runs from the turbocharger to the transom. It is a combination of 5" and 6" stainless steel and 6" aluminum exhaust piping.

A.23.a. Exhaust flexible coupling

This flexible 5" IPS stainless steel section of exhaust piping runs between the main engine turbocharger exhaust port and the exhaust pipe. It helps reduce the transfer of main engine vibration to the solid exhaust pipe. In also acts as the exhaust system expansion joint by isolating the expansion and contraction of the system due to heating and cooling.

CAUTION!

The raw water exhaust/recirculation line support bracket MUST be installed at the exhaust flexible coupling. Frequent checks of the bracket fasteners are necessary to ensure tightness. The bracket should also be periodically checked for cracks caused by vibration. NEVER step on the bracket.

A.23.b. Cooling chamber section

This stainless steel section joins the 5" IPS flexible coupling section and the 6" IPS aluminum exhaust pipe. The exhaust cooling chamber is the double-walled portion, approximately 2'long, created by the overlap of 5" and 6" IPS pipe. The outboard end of the 5" IPS exhaust pipe is not welded shut. The raw water coolant line from the exhaust riser enters the exhaust pipe through the 6" IPS expansion chamber. The raw water coolant, is injected into the exhaust pipe reducing exhaust gas temperature and overall exhaust noise.

A.23.c. Exhaust pipe

This 6" IPS aluminum exhaust pipe runs aft and parallel to the shell plating. It starts just forward of Bulkhead 10, passes through the bulkhead outboard of the fuel tank, and ends just aft of Frame 11.

A.23.d. Stainless steel muffler

This stainless steel muffler is in the exhaust pipe at Frame 12. Mufflers are resistant to salt, oils, and acids.

A.23.e. Exhaust pipe ends

This short section of 6" IPS aluminum exhaust pipe is welded into the transom. This last section in the exhaust pipe connects the stainless steel muffler and the transom.



Engine Alarm System

A.24. Alarm system

Each main engine has its own 24V DC independently operating alarm system. The alarms alert the crew when engine standards drop below or rise above normal operating ranges. The system consists of the following:

- jacket water coolant temperature alarm and light
- lube oil alarm and light
- alternator fault light

A.25. Alarm bell

During normal operating conditions, the water temperature switch is open and the lube oil pressure switch is closed. An abnormal rise in water temperature will close the water temperature switch. A drop in lube oil pressure will open the lube oil pressure switch. In either case, the alarm bell, located under the steering console, will sound. The system has a silencing switch for the alarm bell when securing or performing maintenance on the engine.

NOTE &

There are two freshwater, high-temperature switches in use in the field. One is set at 200°F (plus or minus 5°F) and one is set at 205°F (plus or minus 5°F). There are also two lube-oil, low-pressure switches in use in the field. One is set at 18 psi and one is set at 12 psi.

A.26. Mechanical gauges

These gauges are in the steering console and are not connected to nor affected by the alarm systems. (See Section 2.E.43. for a detailed listing and description of each gauge.)



Main Propulsion System

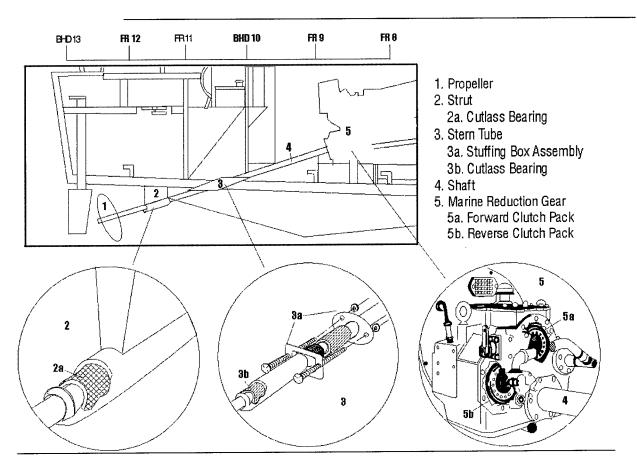


Figure 3-8
Marine Propulsion System

A.27. Marine gear

The Twin Disc MG-509 marine gear transfers power from the main engines to the shafts. The marine gear gives a straight engine to shaft/propeller speed reduction of 2:1 ratio, in either forward or reverse. This reduction in shaft/propeller to one-half that of the main engine provides optimum power for high speed and excellent maneuverability characteristics.

Operation of the marine gear is completely hydraulic. The bearings are oil lubricated. Both forward and reverse clutch packs are engaged by high-pressure oil and cooled and lubricated by low-pressure oil. Oil capacity is 10 quarts in the marine gear and 1 additional quart in the marine gear oil cooler.

The following unique features enhance the overall operation and capability of the boat:



A.27.a. Twin clutch pack feature

Each marine gear has two clutch packs. One provides forward motion and the other provides reverse motion. This twin clutch pack feature creates a more versatile operational setup.

A.27.b. Mechanical emergency "come-home" feature If the starboard forward motion clutch pack fails, a mechanical lockup device in the marine gear allows the use of the disabled gear in the **forward motion** function **only**. (See Section 7.B.15, Reduction Gear Failure, for use of this feature.)

NOTE &

The emergency "come-home" feature can only be used on the starboard marine gear. See "Morse Control Hook-Up" below for further explanation.

WARNING ♥

The starboard main engine must be secured before engaging the emergency "comehome" feature. Failure to secure the starboard engine will result in personnel injury.

A.28. Morse control hookup

A single, two-lever Morse Control unit installed on the steering console controls both main engine throttles and marine gear. This Morse Control unit allows individual (port or starboard) engine throttle and marine gear control by a single lever.

To improve the 41' UTB's handling characteristics, the port Morse Control cable hookup at the marine gear control mechanism has been reversed. This reverse hookup uses the reverse clutch pack to achieve forward motion and the forward clutch pack to achieve reverse motion. This produces an opposing movement on each shaft/propeller.

A.29. Propellers

The boat has two 26" diameter, 28 pitch, nickel-aluminum-bronze alloy, American Bureau of Shipping (ABS), grade 4, four-blade propellers. The starboard propeller is a right-hand rotation while the port is a left-hand rotation.

A.30. Strut

Each shaft is supported by a single leg strut located just forwarded of Frame 12.



A.31. Shaft

Power from the main engine/marine gear is transmitted by way of the 2" diameter propeller shaft. The shaft is made of Armco Aquamet 17 corrosion-resistant steel. The shaft penetrates the hull shell plate at Bulkhead 10 through the stern tube that is welded to a reinforced section of the hull.

In the forward motion position, the shafts rotate outward from the top. The counter-rotating shafts reduce propeller side thrust and overcome the natural tendency of the stern to walk sideways when shaft/propellers are engaged. If the port and starboard main engine RPMs are not matched when in forward motion, the stern will walk in the direction of the faster turning propeller and when in reverse motion, away from that direction.

A.32. Stern tube

The stern tube is a round, aluminum tube. It has a cutlass bearing inserted in the outer end to support the propeller shaft where it penetrates the hull. The tube also has a stuffing box in the inner end to prevent water from entering the hull.

A.33. Stuffing box


The stuffing box attaches to the stern tube by a short section of cloth-impregnated rubber hose. This adjustable box is in the engine room. It contains packing material to control raw water entry into the hull around the shaft. Raw water leakage (adjusted to approximately 6 - 10 drops per minute) reduces shaft/packing friction and aids in cooling the shaft and shaft packing.


A.34. Cutlass bearing

Each propeller shaft is supported in the strut and stern tube by a Cutlass bearing through which the shaft is fitted. The bearing is made of fibrous material impregnated with phenolic resin. These bearings help reduce friction and wear on the propeller shaft.



Section B. Steering System

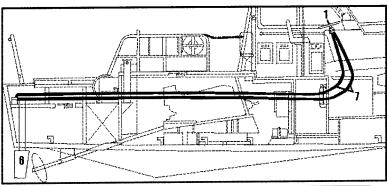

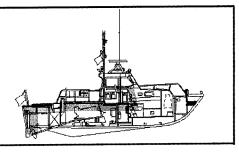

- 1. Steering Wheel/Pump Assembly
- 2. Push Pins
- 3. Tie-rod Bar
- 4. Rudder Arm
- 5. Rudder Post
- 6. Rudder
- 7. Hydraulic Flexible Hoses
- 8. Hydraulic Ram

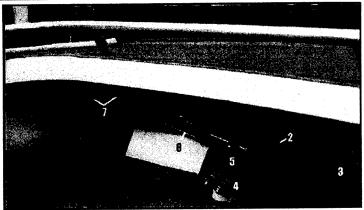


Figure 3-9
Steering System

B.1. Steering wheel

The steering wheel is a 20", non-magnetic, stainless steel Morse wheel. It is located on the steering console in the pilothouse. (Also see Section 2.E.42. and Figure 2-13.)

B.2. Hydraulic helm assembly

This hydraulic device connects the steering wheel to the hydraulic ram via two hoses. It is located within the steering console, and accessed through the console access panel (See Figure 2-7).

B.3. Hydraulic ram

The ram is connected to the starboard rudder arm with a removable pushpin.



B.4. Tie rod bar

The bar is a 1" diameter, Monel tie-rod bar with a bronze, threaded (adjustable), pin-type clevis fitting on each end. Removable pushpins, inserted in the clevis fittings, connect the tie-rod bar and rudder arms allowing the rudders to act in unison. The threaded, pin-type, clevis fitting allows for easy adjustment of the rudders and/or removal of the tie rod from the rudder arms.

B.5. Rudders

CAUTION!

During casualty steering, **Do not** allow personnel to hand tend the emergency tiller if it becomes necessary to back down. The rudders are aft of Frame 12, between Longitudinal 2 and 3. The rudderpost is made of Armco Aquamet 17 corrosion-resistant steel. The rudder blade is made of 316 stainless steel. The rudders are held in place by bronze rudder arms (See Section 2.I.14.), drilled to accept the ram and clevis fittings on each end of the tie-rod bar. Rudder stops are welded to the deck on the inboard and outboard sides of the port rudder arm. The starboard rudder does not have rudder stops. Unless the starboard rudder is jammed, the tie rod is left in place during emergency steering. This prevents the starboard rudder blade from turning into the starboard propeller.



Section C. Fire Main System

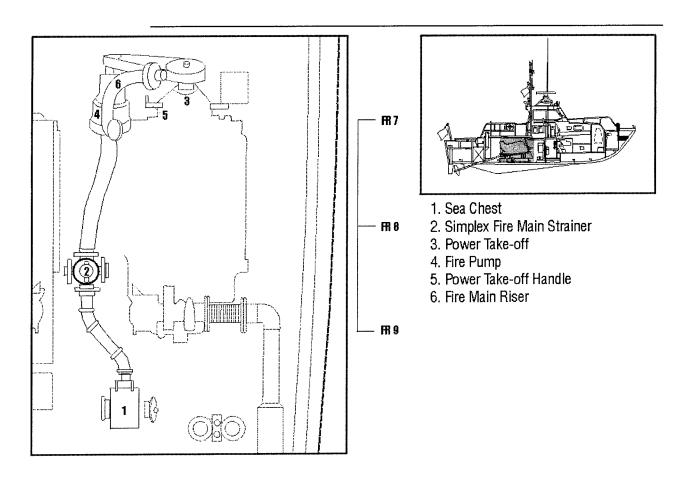


Figure 3-10 Fire Main

C.1. Sea chest

The sea chest provides raw water for the firemain system.

C.2. Simplex/duplex firemain strainer

Installed between the sea chest and the fire pump is a simplex or duplex strainer. Raw water passes through this strainer before entering the fire pump.



C.3. Power take-off

This mechanical device, when engaged, transfers power from the main engine to the fire pump. A 3" cleated rubber drive belt connects the power take-off and fire pump. To engage the power take-off, perform the following procedure:

| Step | Procedure |
|------|--|
| 1 | Put the starboard marine gear in the neutral position. |
| 2 | The starboard main engine must be at idle speed. |
| 3 | Remove the securing strap, and then firmly move the handle using open palm to the forward position. |
| 4 | To increase the pump output from the idle position, increase the starboard main engine Morse Control lever to a maximum of 1000 RPM. |

C.4. Fire pump

The fire pump is a single-stage, centrifugal-type pump located at the front, inboard side of the starboard main engine (Frame 7). The pump is rated to deliver 250 gallons per minute at 100 psi (produced by 1000 main engine RPM).

C.5. Fire main pressure gauge

This gauge, located on the aft bulkhead of the pilothouse (See Figure 2-18), connects to the firemain at the fire pump. It provides the coxswain with discharge pressure readings.

CAUTION!

With the power take-off engaged and the marine gear engaged for maneuvering, significant changes in pump/hose pressure will occur with every RPM change. This unannounced reduction in hose pressure could cause crew members manning the hose to lose control, thus causing personnel injury. The coxswain should always announce pressure changes to the crew before throttle changes.

C.6. Fire main riser

The riser piping transfers water from the pump to the tri-gate. The riser is a 2 ½" male threaded pipe leading from the fire pump to the main deck. It exits the main deck to starboard of centerline directly beneath the rescue and survival raft. (Also see Figure 2-11 and Section 2.E.31.)

C.7. Tri-gate

The tri-gate offers triple hose hook-up capability from a single-source fire main supply line. The tri-gate has one 2 ½" female threaded inlet connecting it to the fire main riser. The tri-gate also has two 1 ½" and one 2 ½" male threaded discharge ports (with covers) for hose attachment. (Also see Figure 2-11 and Section 2.E.31.)



Section D. Firefighting Equipment

D.1. Hoses

Four hoses for firefighting and dewatering are stowed in the passenger compartment stowage area. The authorized sizes are:

- 1 ½" X 25' firefighting hose
- 1 ½" X 50' firefighting hose
- 2 ½" X 12' firefighting, eductor discharge hose
- 2 ½" X 30' fire monitor connector hose

D.2. Varinozzle

One 1 ½", multi-purpose, variable-stream firefighting nozzle is stored in the passenger compartment stowage area. The nozzle has a bail-type on/off handle. The nozzle stream can be changed from a fog-spray to straight stream by twisting the rubber-coated tip through its full range.

D.3. Fire monitor

The fire monitor is made of 2 ½" steel with Fusecote anticorrosive coating. For control, the monitor has locking knobs for vertical angle positioning and a black, polyvinyl-coated wheel for horizontal directional control. The fire monitor has a nominal capacity rating of 750 GPM, where the fire pump capacity is rated at 250 GPM at 100 psi (1000 RPM).

The fire monitor gives the ability to fight large dockside or shipboard fires when the boat must stand off from the blaze. This allows one person to direct and control the stream with minimal effort at a much greater distance than it is possible with a hose. (Also see Figure 2-4 and Section 2.C.7.)

NOTE &

With the fire main power take-off engaged, use of the starboard marine gear for maneuvering is limited to a maximum of 1000 RPM. When the fire main nozzle is in the straight stream mode and the fire main operating at full pressure, the bow will be pushed in the opposite direction from which the nozzle is pointed. The coxswain must be prepared for maneuvering difficulty.

D.4. Fire monitor nozzle

This chrome-plated fog nozzle with control handles provides flexibility with gradual adjustment from full fog to straight stream.

$Chapter \ 3-Boat \ Systems \ and \ Components$





Section E. Dewatering Equipment

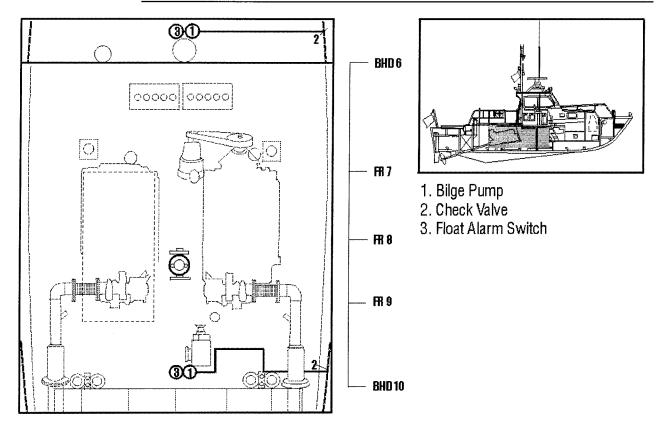


Figure 3-11
Bilge Pump System

E.1. Bilge pump system

The boat has two 24V DC submersible-type bilge pumps. The pumps are starboard of the keel just forward of Bulkheads 6 and 10. Switches on the port side of the steering console activate these pumps. Pump capacity is rated at 1300 gallons per hour per pump. (Also see Section 2.D.27.)

NOTE &

All crew members should remain aware that Federal laws prohibit the dumping oil pollution and hazardous material discharge in all navigable waters of the United States.

E.1.a. Check valve

This is a one-way valve in the overboard discharge line. It prevents water from entering the hull if the overboard discharge outlet goes below the water level.



E.1.b. Overboard discharge The discharge lines run from the pump to outlets above the waterline and one inch below the top of the boot topping on the starboard side.

E.1.c. Float alarm switch

A float-type switch is installed at each bilge pump. When this switch floats upward, it activates the bilge alarm circuit, causing the boat's horn to sound and the blue light to energize.

E.2. Eductor

A portable aluminum eductor is stored in the passenger compartment stowage area. The eductor has a $1\frac{1}{2}$ " inlet, a $2\frac{1}{2}$ " discharge fitting, and a detachable suction strainer.

NOTE &

The portable aluminum eductor has an internal flapper valve. This prevents flooding the compartment being dewatered should the discharge hose become kinked.

Water pressure, supplied through a 1 ½" fire hose to the eductor, passes through a venturi tube nozzle creating a low-pressure (vacuum) chamber at the eductor. With the fire pump operation at 250 gallons per minute output to the educator, the vacuum created in the low pressure chamber will cause a discharge equal to double the input rate. Therefore, the resulting discharge rate is 500 gallons per minute. The maximum effective lift from the eductor level to discharge level is 20 feet.

E.3. Dewatering pump kits

The CG-P1B is the standard Coast Guard pump. The CG-P5 is an authorized optional replacement. These pumps provide emergency dewatering for boats in danger of sinking. The CG-P1B has an output rate of 120 gallons per minute at a 5-foot suction lift. Under load it runs 4 to 5 hours per gallon of gasoline. The CG-P5 has an output rate of 200 gallons per minute at a 10-foot suction lift. Under load, this pump runs $1\frac{1}{2}$ to $2\frac{1}{2}$ hours per gallon of gasoline.

E.3.a. CG-P1B configuration

The CG-P1B consists of a 3-horsepower, 4-cycle gasoline driven engine attached to a centrifugal pump. It is primed using the integral priming device directly atop the pump casing. The permanently attached 3" discharge hose has a discharge check valve at the hose end. This check valve prevents air from entering the pump during the priming step. The pump has a removable 1 ½" X 15' wire-wound suction hose with strainer. The CG-P1B uses a detachable polyethylene gasoline tank mounted on the side of the engine with a quick connect/disconnect fitting. Other features include corrosion-resistant parts, lightweight, and compact design. Special waterproof, bilingual operating instructions are provided with the pump. The pump is packed inside a round aluminum waterproof container.



E.3.b. CG-P5 Configuration The CG-P5 is a 5-horsepower, 4-cycle gasoline driven engine attached to a centrifugal pump and is configured the same as the CG-P1B with the following exceptions:

WARNING

When operating the CG-P1B or CG-P5 dewatering pumps, ensure sufficient ventilation. Carbon monoxide exhaust fumes are toxic to personnel.

- a recoil-type starter,
- a manually operated discharge check valve, and
- quick release hose fittings.

Special waterproof, bilingual operating instructions are provided with the pump. The pump is packed inside a round aluminum waterproof container.

WARNING 💖

Use the CG-P1B or CG-P5 dewatering pumps for pumping fresh or sea water only. They may be used where small amounts of surface oil are present. Do not use if flammable (low-flashpoint) liquids are present (such as gasoline or paint thinner).

E.3.c. Maintenance

The Coast Guard Rescue and Survival Systems Manual, COMDTINST M10470.10 (series), provides detailed instructions for:

- Pump acceptance inspection
- Monthly inspection and test run
- Quarterly inspection
- Packing the pump
- Post SAR inspection

Chapter 3 – Boat Systems and Components





Section F. Fire Extinguishing Agents

Overview

Introduction

This section discusses the location and types of fire extinguishing agents aboard a 41' UTB.

In this section

| Topic | See Page |
|----------------------------------|----------|
| Fixed Fire Extinguishing Systems | 3-32 |
| Portable Fire Extinguisher | 3-34 |



Fixed Fire Extinguishing System

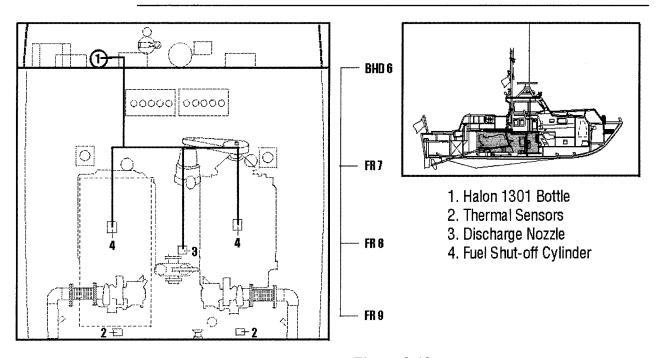


Figure 3-12
Fixed Fire Extinguishing Systems

F.1. Halon 1301

The 41'UTB is equipped with a fixed Halon 1301 fire extinguishing system to combat engine room fires. A thorough understanding of this system is vital.

F.2. Halon bottle

The bottle containing Halon 1301 is mounted to Bulkhead 6, port of the engine room viewing window, in the passenger compartment stowage area. (Also see Figure 2-7 and Section 2.D.27.)

F.3. Thermal sensors

There are two independently operating thermal sensors in the engine room, one aft of each main engine, mounted to the overhead. If the engine room temperature exceeds 190°F, the alarm horn will sound. The horn is mounted in the pilothouse steering console. An alarm horn test button is also on the steering console. (Also see Figure 2-13 and Section 2.E.42.)



F.4. Discharge nozzles

The system has one discharge nozzle 9" off the centerline of the engine room, between the main engines. The fuel shut-off cylinders are located over each main engine.

WARNING

Do not enter the compartment after a Halon discharge until ventilated.

NOTE &

The fixed Halon 1301 fire extinguishing system **must** be manually operated. If the alarm horn sounds, inspect the engine room through the viewing window at Bulkhead 6 to determine why the alarm is sounding before activating the system or entering the engine room.

F.5. Fuel shut-off cylinder

The fuel shut-off cylinder is automatically engaged when the Halon system is activated in the case of an engine room fire. This prevents Halon dust from entering the main engine and causing unnecessary damage.



Portable Fire Extinguisher

F.6. Dry chemical (PKP) fire extinguisher

Potassium bicarbonate (PKP) is effective to varying degrees on all types of fires, but most effective on burning liquids (Class B). It is corrosive and will cause damage to electrical contacts and internal engine components. It will also clog engine parts. The 41' UTB has two 10-pound, dry chemical extinguishers. One is located in the passenger compartment on the pilothouse support stanchion (See Figure 2-7 and Section 2.D.27.), and the other is in the pilothouse just inboard of the door on the aft bulkhead (See Figure 2-18 and Section 2.E.55).

WARNING

A dry chemical extinguisher does not cool or remove oxygen from the fire triangle. It is effective **only** in knocking down flames. If enough heat or an ignition source is present, the fire will reflash after the powder settles from the air. Class A fires are particularly prone to reflash. Dry chemical extinguishers are least effective on Class A fires.

F.7. Carbon Dioxide (CO₂) fire extinguisher

This extinguisher is most effective in fighting electrical (Class C) fires. CO₂ is especially suited for extinguishing fires in electrical panels and electronics as it does not conduct electricity and is non-corrosive. The 41' UTB carries one 5-pound CO₂ fire extinguisher is the passenger compartment on the aft bulkhead of the gun locker. Also see Figure 2-6 and Section 2.D.18.

WARNING 💖

 CO_2 allows the same reflash hazard, as does PKP. Cool all hot spots thoroughly to prevent reignition. Note also that CO_2 is very poor as a Class B extinguishing agent. Vapor fires can burn within a cloud of CO_2 .



Section G. Electrical System

Overview

Introduction

The 41'UTB has electronic communication and navigation equipment to aid the crew in accomplishing assigned missions. For detailed information on the functions, features, and operation of the individual equipment items, refer to appropriate owner's manual or contact an electronics technician for assistance.

In this section

| Topic | See Page |
|----------------------------|----------|
| Power | 3-36 |
| Electrical Panels | 3-37 |
| Navigation Lighting System | 3-43 |
| Communications | 3-44 |
| Navigation | 3-45 |



Power

G.1. Batteries

The 41' UTB has a bank of two 12-volt, 200-amp hour rated batteries connected in series, producing 24 volts DC. They are used to start the main engines and provide power for the 24-volt electrical and 12-volt electronic systems. (Also see Figure 2-3 and Section 2.H.3.)

WARNING 💖

Battery terminals **must be** covered with a protective rubber boot to prevent electrical shock.

G.2. Battery charger

A 110V AC battery charger is on the engine room side of Bulkhead 6, outboard of the starboard main engine. The charge-on-demand type battery charger is installed in the 110V AC shore-tie side of the electrical system. It maintains a positive charge on the batteries while main engines are secured and shore power is provided. (Also see Figure 2-3 and Section 2.H.3.)

NOTE &

The battery charge rate depends on the condition of the batteries and demand for power from the batteries while charging.

WARNING

Always use extreme care when handling batteries. Batteries contain a sulfuric acid solution. This acid will cause severe burns and is extremely corrosive. During recharge, batteries generate hydrogen gas, which is highly explosive and toxic. Therefore, **never** smoke around a battery, or disconnect a battery until the space has been thoroughly ventilated. Do not store or keep batteries in covered containers that might trap the hydrogen gas.

G.3. Battery equalizer

The 12V battery equalizer balances VOC power distribution and supplies it to the 12V power panel in the pilothouse for the electronics. (Also see Figure 2-7 and Section 2.D.27.)

G.4. Starters

A 24-volt, Delco-Remy starter is on the port side of each main engine.

G.5. Alternators

Each main engine has a heavy-duty, 24-volt, 75-amp, marine alternator with internal voltage regulator. The voltage regulator is factory-adjusted to allow a charge of 28.4 volts. The alternators are designed for parallel operation. Their output is based on the electrical demand placed on the batteries with engines running.



Electrical Panels

G.6. Electrical control panel

This panel, located on the port side of the steering console, has rocker switches and rotary control knobs (See Figure 3-13). It controls power to:

| Rocker Type Control Switches | Rotary Control Knobs |
|--|---|
| both bilge pumps blue rotating light console binnacle aft deck floodlight docking lights | binnacle light dimmer control instrument light dimmer control navigation lighting system selection knob navigation lights off anchor light running lights, no tow running lights tow astern (inland) running lights towing alongside (int'l waters) running lights towing alongside (inland waters) |

G.7. Windshield wipers

The three, individual, rocker-type windshield wiper control switches are on a separate panel inboard of the steering console electrical control panel. (See Figure 2-13 for location perspective.)

G.8. 24/28 DC electrical panel

This panel is located in the pilothouse port bulkhead (See Figure 3-14), under the window. It distributes power to all 24/28V DC electrical systems. (See Figure 2-12 for location perspective and Section 2.E.37.)

G.8.a. Voltage meter

The DC breaker panel has a voltage meter at the top left side that indicates the battery charge.

G.8.b. Amperage

The DC panel has an ammeter to the right of the voltage meter that indicates the amperage load on the batteries by the boat's electrical systems and electronic equipment.



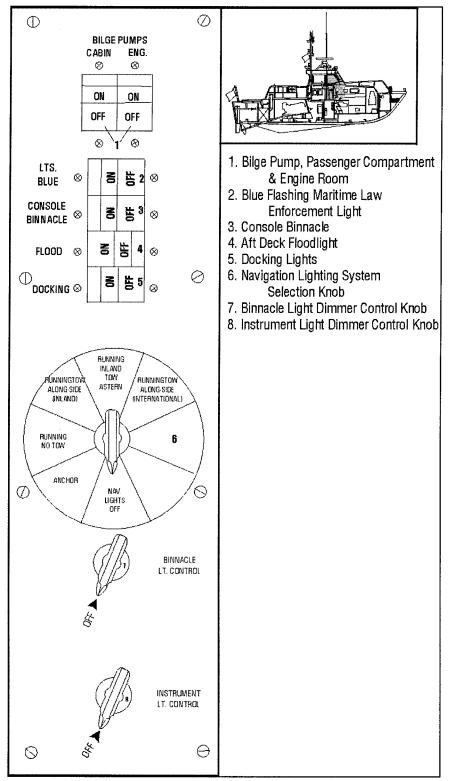


Figure 3-13
Steering Console Electrical Control Panel





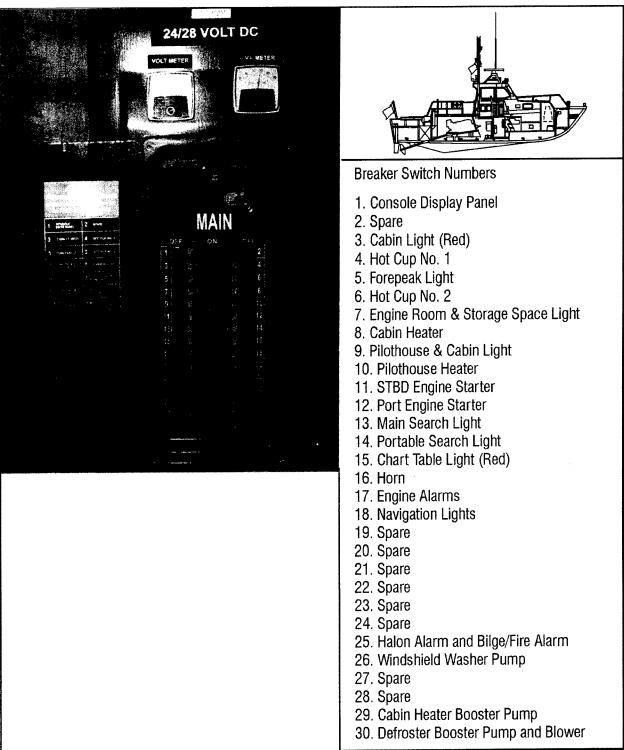


Figure 3-14
24/28 V DC Circuit Breaker Panel



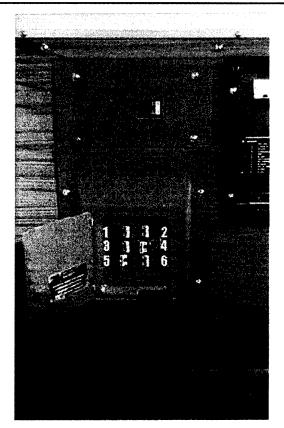

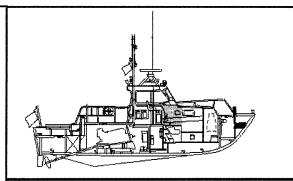


- 1. Battery Charger
- 2. 110V AC Electrical Test Receptacle (pilothouse & passenger compartment)
- 3. 110V AC Port Engine Heater
- 4. 110V AC Starboard Engine Heater
- 5. Passenger Compartment Heater
- 6. 110V AC Engine Room Receptacle


Figure 3-15
110V AC Circuit Breaker Panel

G.9. 110V AC electrical panel

This panel is located in the pilothouse port side bulkhead under the window. It distributes 110V AC shore power to those systems requiring AC power while in port. (See Figure 2-12 for location perspective and Section 2.E.36.)



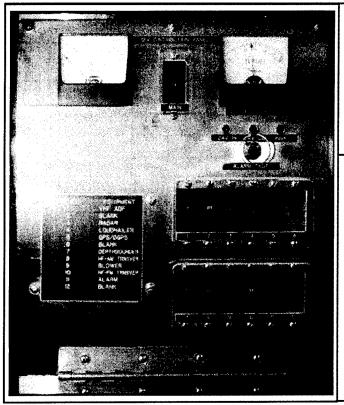

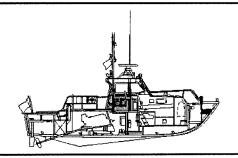

Breaker Switch Numbers


- 1. VHF ADF
- 2. Spare
- 3. Radar
- 4. Loudhailer
- 5. GPS/DGPS
- 6. Blank
- 7. Depthsounder
- 8. HF-AM Transmitter
- 9. Blower
- 10. VHF-FM Transceiver
- 11. Alarm
- 12. Blank

Figure 3-16
12V DC Circuit Breaker Panel

G.10. 12V DC circuit breaker panel

This panel is in the pilothouse port bulkhead, between the 110V AC electrical panel and Bilge/Fire alarm panel. It distributes power to all electronic equipment. (See Figure 2-12 for location perspective and Section 2.E.37.)



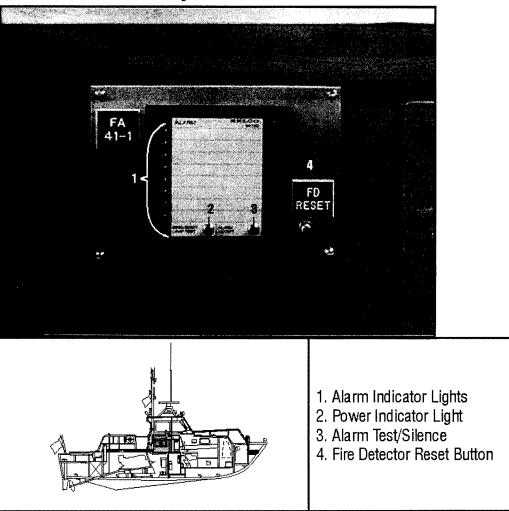

Bilge/Fire Alarm Panel

Figure 3-17 Bilge/Fire Alarm Panel

G.11. Bilge/fire alarm panel

This panel is located in the pilothouse port bulkhead, just aft of the 24/28V DC power panel. It monitors the two bilge alarm floats and also the smoke detector in the pilothouse. In the event the bilge or fire alarm is activated, the blue light and horn will be energized. (See Figure 2-12 for location perspective and Section 2.E.38.)



Navigation Lighting System

G.12. Operation

The navigational lights rotary control switch is a multi-function switch. It is wired to allow selection of different navigational light combinations. Circuit breaker #18 in the 24/28V DC circuit breaker panel energizes the circuit for the switch. (See Figure 3-13 for the available lighting combinations.)

G.13. Mast lights

The required color and arc of visibility for each navigation light on the mast is indicated below:

| Light | Color | ARC |
|--------------|--------|------|
| Anchor | White | 360° |
| Masthead | White | 225° |
| 2nd Masthead | White | 225° |
| Stern | White | 135° |
| Towing | Yellow | 135° |
| 2nd Towing | Yellow | 135° |

G.14. Side running lights

The navigation lights on each side of the pilothouse have color and arc of visibility as indicated below:

| Light | Color | ARC |
|-----------|-------|--------|
| Port | Red | 112.5° |
| Starboard | Green | 112.5° |



Communications

G.15. Radios

There are three types of radios that may be found on the 41'UTB.

- VHF-FM radio
- VHF-FM guard radio
- HF-SSB radio

G.15.a. VHF-FM radio

This is the boat's main communications tool. It is a FM radio covering the VHF-FM frequency range of 146-175 MHz. This radio has a built-in voice-scrambling feature. It is located in the Electronics Console (See Figure 2-16).

G.15.b. VHF-FM guard radio

This radio is a guard radio for VHF-FM Channel 16. It can also be used as a backup radio for the main VHF-FM radio. It is installed in the Electronics Console (See Figure 2-16).

G.15.c. Raytheon Ray-152 HF-SSB radio

This radio serves as a backup radio if there is a VHF-FM radio failure, in unique operating areas where VHF-FM communication is difficult due to excessive traffic, and when HF communication with other maritime vessels is necessary. It is mounted adjacent to the navigator's chair under the starboard window Console (See Figure 2-17).

G.16. Direction finder

The 41' UTB is equipped with the CFM-IES-KDF VHF-FM Direction Finder. This radio direction finder (homer) allows homing on the source of a FM radio signal. The unit can also function as a backup VHF-FM receiver (e.g., for continuous monitoring of VHF-FM Channel 13). It is located in the Electronics Console (See Figure 2-16).

G.17. Loudhailer

The RAYTHEON RAY-430 Loudhailer is a multi-purpose, sound generation (fog signal) and sound amplification (listening) device. It is located in the Electronics Console (See Figure 2-16).



Navigation

G.18. Depth finder

The Autohelm ST-50 Depth Finder indicates depth in feet or fathoms. A hull-mounted transducer sends a series of high frequency sound waves to the bottom. The depth finder measures the time duration from the transmission to return of the wave and changes it to a digital depth reading at the display head. The unit is equipped with a low water alarm that can be set to any depth. The transducer penetrates the hull shell plate 2 feet above the bottom of the skeg. The depth finder can be offset for 2 feet to give an accurate reading of water below the skeg on the display head. The display head is mounted on top of the Steering Console hood to the right of the compass Console (See Figure 2-13).

G.19. Radar

The 41' UTB is equipped with a Raytheon RASTER Scan Radar. The AN/SPS-69 radar incorporates many features that will assist the coxswain in safe navigation. It is installed in the Electronics Console. Some features are briefly covered below Console (See Figure 2-16).

G.19.a. Range settings

Range settings are available from ¹/₈ NM to 48 NM. The ¹/₈ NM range scale enhances navigation in tight channels or close-quarters situations.

G.19.b. Offset display mode

This feature allows movement of the boat's position from the center of the screen to any location within the range scale selected. The offset mode allows selection, preposition, and display of the boat's most vulnerable quadrant in greater depth for collision avoidance.

G.19.c. DGPS interface mode

The AN/SPS-69 radar is the first Coast Guard small boat radar with the combined capability of full-function radar and DGPS information display.

G.20. DGPS receiver

The Leica Differential Global Positioning System (DGPS) is a programmable, multifunction unit. The key functions this set provides are discussed below.

| Features | Description |
|----------|---|
| Waypoint | Unit is programmable up to 200 navigational |
| | waypoints at one time. |



| Cross Track Error | Displays your vessel position relative to either on course or right or left of the base course line while transiting between two waypoints. |
|---------------------------------|---|
| Two Plotter Displays | Provides a graphical representation of the boat movement. |
| Man-Overboard | When activated, stores the position, time, and date of the event plus activates a man overboard plotter display. |
| Calculator Function | Calculates math problems, latitude and longitude conversion problems, and addition and subtraction of times. |
| Datum List | Enables a match between the unit positioning information with datum on most any chart. |
| Automatic Magnetic Variation | Automatically compensates for magnetic bearing information. |



Chapter 4 The Crew

Overview

Introduction

The 41' UTB is one of the most commonly recognized symbols of the U.S. Coast Guard. The Coast Guard places great trust in the abilities of its boat crews to perform the sorties and missions assigned to them. The professional seamanship skills and knowledge required of a crew to safely and efficiently complete an assigned mission, are developed through underway training and operations in the environment their boats are designed to handle. Members of an assigned crew should develop confidence-building skills under relatively safe conditions before using their skills under maximum conditions. The Coast Guard has established minimum standards and guidelines for building skills which are a part of the certification process required by the Boat Crew Training Manual, COMDTINST M16114.9 (series). The general duties of the crew are described in this chapter.

In this chapter

| Section | Title | See Page |
|---------|-----------|----------|
| A | Crew Size | 4-3 |
| В | Boat Crew | 4-5 |

Operators Manual - 41' UTB





Section A. Crew Size

A.1. General

The minimum crew for a 41' UTB is three - coxswain, engineer, and crew member. Due to the small size of the crew, cross-training in the duties of other positions is essential. Additional members may be required during special operations. Where local staffing permits, additional crewmembers should first ride in a training capacity to increase their proficiency with the boat's equipment and operation.





Section B. Boat Crew

B.1. Coxswain

The coxswain is in charge of the boat and its crew during all sorties and missions. Coxswain certification and currency is required. The coxswain represents the commanding officer or officer-in-charge, and has authority and responsibility independent of rank or seniority. Coxswains must be familiar with Coast Guard Regulations, COMDTINST M5000.3 (series), which outlines this relationship.

The coxswain is responsible, in order of precedence, for:

- safety and conduct of passengers and crew,
- safe operation and navigation of the boat,
- completion of the sortie or mission(s),
- safeguarding of life and property, and
- compliance with Federal laws and regulations.

B.2. Engineer

The engineer must be certified and current both as an engineer and a crewmember. The engineer assists the coxswain as directed and is responsible for:

- engines and all power equipment; and
- assisting in boat navigation, line handling, lookout, towing watch, or helmsman.

B.3. Crew member

The crew member must also be certified and current and assists the coxswain as directed. The crew member is responsible for:

- securing the boat's equipment;
- line handling; and
- serving as a lookout, towing watch, firefighter, swimmer, or helmsman.





Chapter 5 Operations

Overview

Introduction

This chapter describes operation of the 41' UTB in the safest, most efficient manner. These policies and techniques outline necessary and proper actions, which are a product of field experience with boats of this design. Within these broad boundaries, local operating conditions, district regulations, and the skill of the crew will determine the extent to which the full capability of the boat is used.

The 41' UTB is a fast, highly maneuverable, and powerful boat designed to perform a variety of Coast Guard missions in moderate sea and weather conditions. When used for its intended purposes and within its operating limits, it is a safe and efficient vessel.

NOTE &

Information on these pages will not qualify a 41' UTB crewmember. However, if you observe these common-sense rules, learn the basic operating procedures, and apply skills developed from practice, the boat will become an effective tool.

WARNING ♥

The 41' UTB is not designed for operation at high speed in steep, short, choppy seas. Its hull configuration and handling characteristics call for extreme care in following seas and the **absolute avoidance of breaking waves and surf**. Observe the recommended limitations when operating against a short chop.

In this chapter

| Section | Title | See Page |
|---------|--------------------------|----------|
| A | Operating Parameters | 5-3 |
| В | Performance Data | 5-9 |
| С | Starting Procedures | 5-11 |
| D | Underway | 5-15 |
| E | Handling Characteristics | 5-17 |
| F | Securing Procedures | 5-29 |





Section A. Operating Parameters

A.1. General

The readiness of the 41' UTB shall be continuously monitored to ensure that it is capable of unrestricted operations. This monitoring is accomplished through a variety of programs, including daily boat checks, the boat PMS schedule, annual engineering inspection, annual Ready for Operations (RFO) evaluations, and biennial Standardization Team Visits.

For the purpose of this section, operational commanders are defined as commanders of groups, activities, air stations, districts and Greater Antilles Section, who exercise direct operational control of a subordinate unit with a standard boat. (See Chapter 1, Coast Guard Boat Readiness and Standardization Program Manual, COMDTINST M16114.24 (series).)

Operating parameters for the 41' UTB and crew members include the following areas.

A.2. Disabling casualties

Disabling casualties are those which make the boat not serviceable. Appendix E contains a listing of disabling casualties. If a disabling casualty is identified when the boat is moored, the boat shall not get underway until the casualty is corrected.

NOTE &

The operational commander may authorize, in writing, the movement of the boat (for short distances) under its own power only to facilitate haul-outs or corrective maintenance. In the event that the boat sustains a disabling casualty while underway, the boat shall immediately return to the nearest safe mooring, if able. In many cases the boat will require assistance from another vessel.

Disabling casualties shall be reported to the operational commander by the most expeditious means; followed by a boat status message as soon as possible but no later than 12 hours after the casualty is discovered. The boat shall be immediately placed in Charlie status and repaired. If the casualties cannot be repaired within 48 hours, a CASREP shall be sent within 24 hours of the casualty.

A.3. Restrictive discrepancies

Restrictive discrepancies are those which restrict the operations of the boat such that it can perform some missions, but not all missions safely. Appendix F contains a listing of restrictive discrepancies.



A.3.a. Reporting restrictive discrepancies

Restrictive discrepancies shall be reported to the operational commander if the discrepancy cannot be repaired within 1 hour. The boat shall be immediately placed in a Charlie status and shall not get underway until the discrepancy is corrected, or a waiver has been received. If the discrepancy cannot be repaired within 48 hours, a CASREP shall be sent within 24 hours of the discrepancy. The operational commander is responsible for monitoring the progress of repairs to these discrepancies.

A.3.b. Waivers

Boats with restrictive discrepancies shall only be operated if the operational commander has issued a written waiver. The waiver shall:

- 1. list the discrepancy,
- 2. describe the conditions under which the boat may be operated, and
- 3. concurrence on the measures to be taken to lessen or negate the hazard posed by the discrepancy.

A verbal waiver is authorized, as long as a written waiver follows it up within four hour.

A.3.c. Discrepancy underway

In the event the boat sustains a restrictive discrepancy while underway, the coxswain should not normally proceed without authorization, unless aborting the mission would increase the level of risk to the person(s) or vessel being assisted. The situation and recommendations must be effectively communicated to the operational commander to allow for prudent risk assessment by all levels.

The reporting procedure is as follows:

| Step | Procedure |
|------|---|
| 1 | The coxswain shall immediately notify the parent unit with all pertinent information and a recommendation as to whether to continue or abort the mission. |
| 2 | The parent unit shall pass along the information pertaining to the casualty, the current mission, and recommendations to the operational commander. |
| 3 | The operational commander shall immediately notify the unit as to whether or not continuing the mission is authorized, and the conditions under which the boat may be operated. |



A.4. Major discrepancies

Major discrepancies are those that degrade the effectiveness of the boat to perform one or more missions. Appendix F contains a listing of major discrepancies. The occurrence of major discrepancies shall be documented. A plan to correct these discrepancies shall be formulated and carried out. The operational commander is responsible for monitoring the status of repairs to these discrepancies.

A.5. Minor discrepancies

Minor discrepancies do not affect the operational readiness of the boat. However, a boat with minor discrepancies does not meet the standardization criteria established for the boat. The occurrence and repair of minor discrepancies shall be documented and monitored at the station/unit level.

In the event that the addition of portable equipment, not part of the standard boat outfit, is necessary to meet mission needs, units are authorized to temporarily carry this extra equipment. This authorization is on case by case basis only, and care must be taken to properly secure any extra gear and to ensure it does not interfere with safe egress or the boat's standard outfit/systems. Under no circumstances shall permanent alterations be made to power, stow, or in any way accommodate extra equipment.

A.6. Responsibilities

The coxswain is always responsible for the safe operation of the boat. The coxswain must decide if the mission warrants subjecting the crew and boat to the danger defined by the mission, weather and sea conditions anticipated.

A.6.a. Disabling casualty – underway

In the event that the boat sustains a disabling casualty while underway, the boat shall immediately return to the nearest safe mooring, if able. In many cases the boat will require assistance from another vessel.

A.6.b. Restrictive discrepancy – underway In the event the boat sustains a restrictive discrepancy while underway, the coxswain should not normally proceed without authorization, unless aborting the mission increases the level of risk to the person(s) or vessel being assisted. The situation and recommendations must be effectively communicated to the operational commander to allow for prudent risk assessment by all levels. The following is the procedure for communicating the discrepancy while underway:

| Step | Procedure | | |
|------|--|--|--|
| 1 | The coxswain shall immediately notify the parent unit with all | | |
| | pertinent information and a recommendation as to whether to | | |
| | continue or abort the mission. | | |



| Step | Procedure |
|------|---|
| 2 | The parent unit shall pass along the information pertaining to the casualty, the current mission, and recommendations to the operational commander. |
| 3 | The operational commander shall immediately notify the unit as to whether or not continuing the mission is authorized, and the conditions under which the boat may be operated. |

| Casualty/Discrepancy | Consequence | Required Action |
|--|--|---|
| Disabling Casualty "Boat is not serviceable" | Not authorized to get u/w*. Notify operational commander immediately by most expeditious means; follow up by a boat status message. | Assign "Charlie" status to the boat, and commence repairs immediately. Submit CASREP if applicable. |
| Restrictive Discrepancy "Boat and crew cannot perform all missions safely." | Operations restricted. Notify operational commander if repairs cannot be made in 1 hour. | Create repair plan and set deadline for completion of repairs. Operational commander shall monitor progress of repairs. Any operations before restrictive discrepancies are repaired require written waiver (See A.3.b. above) from the operational commander. Submit CASREP if applicable. |
| Major Discrepancy "Boat and crew can perform all missions but some degradation in effectiveness or readiness should be expected." | Operations unrestricted. Discrepancy occurrence, and repair is documented. | Maintenance plan is carried out, operational commander shall monitor status of repairs to the discrepancies. |
| Minor Discrepancy "Boat and crew readiness not affected nor impaired. Boat does not meet standards." | Operations unrestricted. Discrepancy occurrence and repair is documented. | Maintenance plan is carried out. Station CO/OIC monitors completion of maintenance/repair. |



A.7. Towing and environmental limits

The boat was designed and built for the following conditions:

- operating in near shore waters and moderate weather conditions;
- towing of vessels up to 100 gross tons; or
- weather and seas **not to exceed**:
 - 30-knot wind;
 - 8-foot seas; or
 - large breaking waves, surf, or breaking bar conditions.

NOTE &

These limits may be exceeded by approval of the operational commander, **only** after appropriate risk assessment for the situation at hand is made. On-scene conditions provided by the on-scene commander and coxswain must be considered in the risk assessment process. The coxswain retains the final on-scene decision as to whether or not an action may be safely executed.

A.8. Mission equipment limits

Mission equipment limits are mission specific and must be considered during the mission risk assessment. The lack of/failure of certain items limit boat mission capability. Their lack or failure does not prevent the 41' UTB from getting underway in an emergency:

NOTE &

For operations more than 10 miles offshore, failure of the GPS becomes a disabling casualty. For operations when visibility is less than 1 mile, failure of the radar becomes a disabling casualty.

- VHF-FM Radio
- Depth Finder
- GPS (DGPS) (if operating less than 10 mile offshore)
- Radar (if visibility is greater than 1 mile)
- Towline A minimum of 500' of 2-¾" DBN, not including the anchor line, must be on board before assigning this boat to a SAR mission with potential for towing.





Section B. Performance Data

B.1. Fuel consumption

Performance and fuel consumption (or operating range) are affected by:

- engine tuning;
- weather conditions;
- operating trim (speed, load, etc.);
- evolutions being performed (towing, searching, etc.); and
- operating area (shallow water increases wave-making resistance).

The average fuel consumption based on engine RPMs are indicated below (both engines operating):

| RPM | Gal/Hr |
|------|--------|
| 800 | 4.0 |
| 900 | 4.5 |
| 1000 | 5.5 |
| 1100 | 7.5 |
| 1200 | 9.2 |
| 1300 | 10.2 |
| 1400 | 12.1 |
| 1500 | 13.5 |
| 1600 | 15.0 |
| 1700 | 17.0 |

| RPM | Gal/Hr |
|------|--------|
| 1800 | 19.5 |
| 1900 | 22.0 |
| 2000 | 24.1 |
| 2100 | 27.5 |
| 2200 | 29.0 |
| 2300 | 31.5 |
| 2400 | 33.5 |
| 2500 | 37.2 |
| 2600 | 40.0 |





Section C. Starting Procedures

C.1. Pre-start

Before starting a cold engine and before each mission, carry out the following steps:

| Step | Procedure | |
|------|--|--|
| 1 | Be sure all bilges are free of unsecured equipment or materials (e.g., loose rags, tools, or cleaning gear). | |
| 2 | Be sure all bilges are free of fuel, oil, and water. | |
| 3 | Check the main engine and the marine gear oil levels. Add oil only as necessary to bring the level to the "H" mark on the dipstick. Do not overfill; damage to the engine seals may result. | |
| 4 | Be sure raw water coolant system sea strainer baskets are clean. | |
| 5 | Be sure fuel tank high suction valves are open. | |
| 6 | Ensure priming and stripping valves in the fuel supply system are closed. | |
| 7 | Open the raw water cooling system valves for each main engine at the sea chest. | |
| 8 | Check main engine coolant level in the heat exchanger. It should be approximately 2" below the fill neck. Add coolant only as necessary. | |
| 9 | Check alternator belts for proper tensionno greater than ⁷ / ₁₆ " depression per foot of span. | |
| 10 | Use the sounding rods to sound each fuel tank. Record the amount of fuel in each tank on the unit's daily boat checkoff sheet. Fuel level should be at or near 231.5 gallons (95%) per tank. | |
| 11 | After securing shore-tie power at the 110 VAC circuit breaker and on the pier, remove the shore-tie plug and screw the protective cover over the receptacle on the boat. | |
| 12 | When the shore-tie cable is moved to the pier, protect the shore-tie plug from the elements with the attached rubber cap. | |
| | | |

NOTE &

When the engine is secured, the marine gear oil level (full) should be above the "H" mark on the dipstick. The marine gear oil level must be re-checked after the engine is started and idling to confirm the correct level on the dipstick.

CAUTION!

Never start or run the engines with the shore-tie power energized. Damage to the alternator may occur.



C.2. Starting

To start the main engines, you must do the following steps, in the order listed:

| | Step | Procedure |
|--|------|---|
| | 1 | At the 24/28V DC circuit breaker panel, place circuit breaker #11 and #12 (port and starboard main engine starting motors) and #17 (main engine alarms) in the ON position. All other circuit breakers must be in the OFF position. |
| | 2 | Be sure the engine alarm bell toggle switches on the steering console are in the ON position. |
| | 3 | Be sure the Morse Controls are in neutral. |
| CAUTION! | 4 | Push down the main engine fuel stop cables (T-handles). This opens the fuel supply system for the main engines. |
| Do not depress both starter buttons simultaneously. Start engines one at a time. | 5 | Depress the main engine starter button and hold until the engine starts. |
| | 6 | If an engine does not start within 30 seconds, release the start button, let stand 2 minutes, and repeat the procedure. During the 2-minute waiting period, ensure steps 1 and 4 above were completed. If after four tries the main engine will not start, consult the troubleshooting chart on page 36 of Diesel Main Propulsion Unit for VT-903M. |
| | 7 | After the main engine has started, check for adequate lube oil pressure and overboard raw water coolant discharge from the exhaust end pipe at the transom. |
| | 8 | With one main engine started and idling, repeat steps 4, 5, and 6 to start the other engine. |

C.3. Post-start

With both engines started, the following post-start inspection must be done:

Pilothouse Steering Console

| Step | Procedure | |
|------|--|--|
| 1 | Ensure forward and astern propulsion for engines are operable. | |
| 2 | Check the following gauges: | |
| | main engine lube oil gauges, | |
| | marine gear lube oil pressure gauges, and | |
| | main engine jacket water temperature gauges. | |



Engine Room

| Step | Procedure | | |
|------------|---|--|--|
| 3 | Check the following items for discrepancies and correct and rep | | |
| | • jacket water system and raw water system for leaks, | | |
| | main engine and marine gear for lube oil leaks, | | |
| | • fuel oil system for leaks, | | |
| | marine gear oil level, and | | |
| | • exhaust leaks. | | |
| With the n | nain engine at idle, the oil level of the marine gear must be between the | | |

NOTE &

With the main engine at idle, the oil level of the marine gear must be between the "L" and "H" marks on the dipstick. If additional oil is required, you MUST secure the main engine for the affected marine gear before adding the oil.

C.3.a. Warm up diesel engine

Diesel engines are best warmed-up under load. When practical, get underway as soon as the checkoff procedures are completed. If upon completion of post-start inspection the main engines have not warmed-up, increase main engine idle speed to 1000 RPMs for a short warm-up period. To do this:

| Step | Procedure | | |
|------|---|--|--|
| 1 | Be sure the marine gear is in neutral position and the main engine is at idle speed (RPM). | | |
| 2 | Pull the throttle arm out from the Morse Control mechanism where it makes the 90° turn into the Morse Control mechanism (note the indentations in the lower portion of the throttle arm) disengaging the marine gear actuating cable from the throttle mechanism. | | |
| 3 | With the throttle handle pulled out, move the throttle in either direction to increase main engine RPMs. | | |
| 4 | Adjust the main engine speed (RPM) by moving the Morse Control throttle handle further in the direction selected until the tachometer reading matches the desired RPMs. | | |

C.3.b. Energize circuit breakers

At the 24/28V DC circuit breaker panel, energize all the remaining circuit breakers for the electrical equipment to be used. At the 12V DC circuit breaker panel, energize all the circuit breakers for the electronics.





Section D. Underway

D.1. Gauges

After getting underway, closely observe the steering console gauges. They indicate system operating conditions. Gauge readings should be within following ranges:

| Gauge | Idle | Cruising |
|---------------------|--------------------------------|---------------------------|
| Tachometer | 700-725 RPM | 2,000 RPM |
| Engine Oil Pressure | 10-30 psi (after warmed up) | 45-65 psi (30 minimum) |
| Gear Oil Pressure | 25-70 psi | 190-220 psi |
| Water Temperature | | 175-185° F |

D.2. Corrective action

During boat operations, if change occurs in any of the systems (e.g., abnormal gauge readings, vibration, or unusual handling characteristics), take corrective action to prevent further damage. Refer to the troubleshooting chart on page 36 of 41' UTB Service Manual TP 041-004 and the engineering casualty control section of the Boat Engineer Qualification Guide, COMDTINST M16114.6 (series).

D.3. Throttles

The 41' UTB responds quickly to the throttles. Increase speed gradually to allow engines to warm-up thoroughly. Unless absolutely mission essential, avoid rapid increases in speed when main engines are cool or cold.





Section E. Handling Characteristics

Overview

Introduction

Boat handling is a complex skill that requires extensive knowledge and practical underway experience to build confidence and skill levels.

NOTE &

The Boat Crew Seamanship Manual (BCSM), COMDTINST M16114.5(series), provides a large amount of information on boat handling. Read and become thoroughly familiar with it. Sections in the BCSM cover:

- various forces affecting boat handling;
- effect of propellers and rudders;
- boat handling, twin screw and single screw (one engine disabled); and
- boat handling in a narrow channel.

The BCSM also addresses boat operations in the various conditions briefly discussed in this section.

In this section

| Topic | See Page |
|------------------------------|----------|
| Maneuverability | 5-18 |
| Head Seas | 5-20 |
| Dead in the Water | 5-21 |
| Beam Seas and Following Seas | 5-22 |
| Inlets | 5-24 |
| Capsize Prevention | 5-25 |
| Towing in Heavy Weather | 5-27 |
| Ice Operations | 5-28 |



Maneuverability

E.1. General

With its powerful twin diesel engines, propellers and rudders, one person can easily operated the 41' UTB from the pilothouse. An experienced coxswain can steer, turn, and dock this boat with minimal rudder use. However, this boat is designed with a wide transom for working space and planing lift for speed in relatively smooth water. These features, desirable for fair weather, can easily become highly undesirable characteristics in foul weather. Safe operation requires the following actions:

| Step | Procedure |
|------|--|
| 1 | Take into account the boat limiting factors. |
| 2 | Continuously monitor the prevailing weather and sea conditions. |
| 3 | Know the boat and its positive handling features, as well as the crew's limitations. |

E.2. Main engine RPMs

The maximum safe operating RPM for this boat is 2,700 (approximately 26.5 knots). However, during normal operations never use more than 90 percent of the main engines' maximum safe operating RPMs. This 90 percent figure equates to a normal main engine operating limit of 2,430 RPMs (approximately 22 knots). The 10 percent extra power and speed is the boat's main defense in most threatening situations.

E.3. Stopping


WARNING 💖

Do not use this method of stopping except in an emergency. Main engine and/or marine gear damage is likely. Serious personnel injury is possible if a warning is not given.

To shift from ahead to reverse, bring the Morse Control throttle handle from the ahead position smoothly to the neutral position, pause, and then into reverse. Make the change from ahead to reverse position allowing adequate time for the main engines, marine gears, shafts, and propellers to slow to nearly a stop. In an extreme situation, moving the throttles directly from ahead to full astern can stop the boat very quickly. Tests going from full ahead to full astern showed the boats are able to stop in 70 feet, with an elapsed time of 3 to 4 seconds.



The following chart gives the upper limits which should be observed when operating in the given sea states. The upper limits should not be exceeded. In addition, the shape and period of the seas may sometimes require even slower speeds to avoid hull damage.

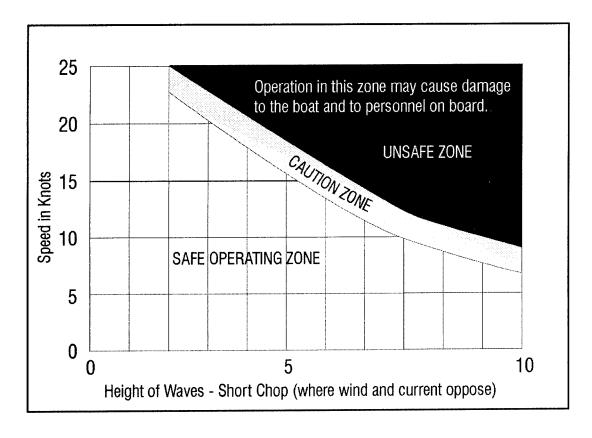

| Seas | Engine | Speed in |
|--------------|-------------|-----------|
| (short chop) | RPMS | Knots |
| 0-2 | 2300 – 2700 | 21 – 26.5 |
| 2 – 4 | 1900 - 2300 | 16 – 21 |
| 4 – 6 | 1700 – 1900 | 12 – 16 |
| 6 – 8 | 1300 – 1700 | 9 – 12 |
| 8 - 10 | 1000 – 1300 | 7 - 10 |
| | | |

Figure 5-1
Safe Operating Zone



Head Seas

E.4. Operating in head seas

Traveling into head seas normally presents no problems if operations remain within the defined wind and sea limiting factors. Remember the following key operational factors:

E.4.a. Maintain maximum steering control

To maintain maximum steering control, keep the rudders and propellers as deep in the water as possible.

E.4.b. Protect the pilothouse

To protect the large, nearly vertical pilothouse windows in large head seas, apply ample power just before passing through the crest of the wave. This will cause the bow to lift and prevent head seas from breaking fully onto the cabin and pilothouse windows.

WARNING 💖

To go through "white water" at the crest of a wave, maintain headway and just as the white water hits the bow, open the throttles so the bow lifts. This avoids the tendency for water to break over the bow and back onto the windshields. Crewmembers must hold on firmly with knees flexed during such maneuvering.

E.4.c. Buoyancy

The buoyancy of the wide, flat stern of the 41' UTB has a greater lifting factor than the bow. When operating at or near the 8-foot maximum sea limiting factor, the coxswain must maneuver constantly using both the rudders and main engines to keep the bow from burying into the seas.

CAUTION!

Avoid at all cost "flying through" the crest. Becoming airborne on the back of a wave places severe stresses on the hull and crew as the boat lands. Serious personnel injuries are likely. The boat and crew can not survive repeated flights of this kind.



Dead in the Water

E.5. Operating in calm conditions

During calm weather and sea conditions, any wind will cause the 41' UTB to lay with its stern into the wind and the bow away from the wind. This is due to the boat's high superstructure and its shallow draft forward. To maintain positive control, maintain minimum steerageway. The pivot point of the 41' UTB is at its pilothouse, amidship.

WARNING 💖

Basin model tests show that a 41' UTB (fully loaded condition) will capsize when dead in the water if hit by a 15-foot breaking wave on the beam or broad on the bow. Capsizing will probably be instantaneous with little time to react.



Beam Seas and Following Seas

E.6. Operating in beam seas

Operating with the seas on the beam is more uncomfortable than dangerous when you follow basic small boat handling guidelines. The danger exists when operations occur in conditions that approach or exceed wind and sea limitations. Use the following techniques to minimize danger:

E.6.a. Tacking

With large seas on your beam, tack across the seas at a slight angle in a zigzag fashion. This prevents exposure of the beam to heavy swells.

E.6.b. Changing course

To change course heading, allow the boat to lose headway, turn the wheel hard over, and apply power to come smartly to the new heading.

E.6.c. Exercise caution

Do not allow the boat to become dead in the water and be hit broadside by a wave.

WARNING 💖

The position of the boat in relation to a breaking wave crest is critical. Severe wave slap will occur in the area approximately two boat lengths in either direction of the breaking water, however this area presents less danger of capsize.

E.7. Operating in following seas

Following seas present the greatest dangers to the 41' UTB. The utility boat doesn't have the balanced buoyancy or ability to lay-to in a following sea like a motor lifeboat. With the wide flat stern, large following seas become a serious problem. The operational limitations are the controlling guideline and must be followed at all times. Consider the following points and techniques when operating under these conditions:

Operation in a following sea involves a risk of surfing on the face of a swell or breaker. This situation is extremely dangerous. Control of the boat may be impossible.

Do not power the boat over the crest of a wave and into the trough of the next wave or bury your bow into the back of the next wave.



The 41' UTB has the tendency to slip down the back of seas, heeling heavily at the bottom or trough.

| IF | THEN |
|---|---|
| If the boat is being pulled back, | increase the throttles to gain additional forward momentum |
| If the boat continues being pulled back | be alert for "sluggish" helm response and higher engine RPM (cavitation). |
| If either situation occurs, | Immediately back off the throttles losing forward momentum, then apply full throttle and rudders and try to kick out of the wave. |
| If riding the back of the wave is not possible. | try to prevent seas from overtaking, breaking under, or breaking over the transom. |

CAUTION!

Carefully observe the seas off the stern to ensure maneuvering room.

E.8. White water

If you observe white water overtaking from astern, quickly stop all forward motion and gain sternway before the white water reaches the propellers and rudders. If this is not possible another option is to come about smartly, present the bow to the sea, **and** gain sufficient headway to establish rudder and throttle control before the white water reaches the boat. Again, carefully observe the seas off the stern to ensure maneuvering room.



Inlets

E.9. Entering an inlet

WARNING ♥

Do not transit a breaking bar or inlet.

E.10. Breaking waves

It is very difficult to judge the sea conditions in an inlet from seaward. WHEN IN DOUBT, STAY OUT. Crew fatigue, risk assessment by the coxswain, and sound judgement are extremely critical at this point. Shallow water, steeper, closer waves, and restricted maneuvering greatly increase demands on the boat, as well as the coxswain. Again, the operational limitations are the controlling guidelines. Follow them at all times.

If the boat enters an inlet where breaking waves are present, and the boat is committed and cannot turn around, take immediate action and follow these precautions carefully:

| Step | Procedure | |
|------|--|--|
| 1 | Immediately notify your unit by radio of the situation. | |
| 2 | Maintain a 360° lookout. | |
| 3 | Immediately station a stern lookout at the pilothouse door with instructions to warn of large or breaking waves overtaking the boat or threatening situations. | |
| 4 | Maintain position squarely on the back of the wave. | |
| 5 | Carefully gauge speed to hold position on the back of waves. If possible, do not use all of your power; keep additional power in reserve for emergency maneuvers. | |
| 6 | Keep the rudders and propellers as deep as possible to maximize rudder and propeller response and control. | |
| 7 | Keep the stern before the sea, slightly quartered. Do not let the bow fall off. This increases the possibility of broaching. | |
| 8 | If the sea shows a tendency to gather speed and accelerate to the point of breaking, keep the seas breaking ahead of and astern of the boat. Do not allow the boat to enter this "white water" area. | |

CAUTION!

Maintain your position ahead of breaking waves. If a wave is close to breaking astern, open the throttles immediately to open the distance. Do not wait until the wave overtakes the boat. At this point, the boat will have lost rudder and throttle control.



Capsize Prevention

E.11. Statistics

As of 1999, three 41' UTBs have capsized--two with loss of life. All three incidents happened while operating in large breaking waves or surf.

situation

E.12. Assess the If a life-threatening situation does not exist, departure from the safe operating limits may create one. Use good judgement and proper risk assessment if called on to exceed those limits. Consider whether lives are clearly in danger. Consider whether the 41' UTB is the best resource available. Departing from the established operational limits will severely test the coxswain and crew. Boat crew survival may quickly replace mission performance as the primary concern.

E.13. Operate within limitations

If the operating limits are exceeded, the boat will be in a "danger zone." The chances of capsizing are greatest while operating in the danger zone. Nearshore, conditions frequently occur which could easily place a boat in the danger zone.

WARNING 💖

Strictly observe the operating limitations of the 41' UTB. Avoid breaking waves or surf. Remain with the boat if it capsizes. With watertight integrity set, the 41' UTB will remain afloat for some time if capsized. Remain with the boat to stay afloat; keep the crew together to aid search and rescue.

E.14. Capsizing conditions

The force needed to capsize the 41' UTB is most likely to come from heavy following seas or large breaking waves striking on the beam.

A number of capsizing reports have been reviewed. Some of the conditions listed were present in each capsizing:

- breaking waves 8 feet or higher;
- water depth less than 20 feet;
- entering shallow water due to navigational error;
- tidal current ebbing or the boat proceeding against a strong tidal current with steep, following seas;
- escorting or towing another boat through an inlet;
- restricted visibility due to darkness, rain, and fog; and
- reduced stability due to low fuel level, excessive water in bilges, or topside icing.



E.15. Corrective action

NOTE &

Always observe the service requirements for wearing hypothermia protective clothing, personal flotation devices, and boat crew signal kits. If any of the above conditions occur, take positive control and execute immediate corrective action to maximize and maintain boat handling capability. The safest method for the 41' UTB to take a heavy breaking sea is "bow-on," taking the pilothouse windows into consideration. Remember the full power maneuver at the last minute to lift the bow to prevent a full wave break over the pilothouse. If the boat takes a sea over the stern, filling the well deck, use extreme caution when maneuvering to come about. If the well deck is flooded, the boat will be sluggish and may not respond well when coming about.

NOTE &

Always be aware of the wind, waves, and currents. Watch for changes. The enclosed cabin creates a sense of isolation and security from the elements. The high superstructure also creates wind resistance that can seriously affect safe navigation and boat stability.



Towing in Heavy Weather

E.16. General

The 41' UTB handles very well with a tow in open water, heavy weather conditions. Much of this stability results from the tow acting as a drogue. If suddenly separated from the tow, use extreme caution and avoid presenting the stern directly to the seas.

E.17. Line handling

A serious station-keeping hazard exists when picking up or tending the towline off the stern. The wide, flat transom of the 41' UTB has a tendency to draw the towline under the transom when a heavy sea lifts the stern. Keep headway on and slack out of the towline. THIS IS A MUST AND CANNOT BE OVER-EMPHASIZED.

WARNING

Line handling during heavy weather can be very dangerous due to extra strain on the line. If the line around the tow bitt must be adjusted, use extreme caution to prevent it from a sudden surge or running free. When adjusting the towline, the crewmember must increase the distance between their hands and the tow bitt to prevent their hands from being pulled into the bitt. Jewelry shall never be worn when handling lines.



Ice Operations

E.18. Ice limitations

The 41' UTB is not designed for breaking ice. The resulting hull stress will shorten the life of the boat even if the hull is not penetrated. Operating in or near ice could also lead to clogging the sea chest.

E.19. Operating in/ near ice

NOTE &

Be sure the amount of recirculated water going to the sea chest does not cause the main engines to overheat. If operating in or near ice, crack open the valves in the recirculating line from the main engine heat riser and the valve at the sea chest. This will allow warm water to enter the sea chest reducing slush ice build up. Use raw water discharge from either main engine (both if necessary).

Watch the amount of raw water coolant discharge at the tail pipe to ensure adequate cooling of the stainless steel mufflers.

E.20. Speed

If you must enter an ice field, proceed very cautiously and never exceed 700 RPMs.

E.21. Ice thickness

The boat can break ice up to 1" thick without much difficulty. The boat is slowed markedly by 2" ice and will be stopped dead in the water by field ice over 3" thick. Exercise extreme caution when operating in ice 4" thick. It can easily cause severe hull damage.



Section F. Securing Procedures

F.1. Procedures

Upon mooring after a mission, take the following steps, in the given order, to secure the boat properly and to prepare it for the next mission:

| Step | Procedure | |
|-----------|---|--|
| 1 | If recently run at high RPMs, allow the engines to idle 4 to 5 minutes for cool-down. An abrupt shutdown of hot engines produces severe internal metal stress. This cooling period is especially important with turbocharged engines. | |
| 2 | Secure all electrical and electronic equipment except for circuit #11 in the 12V DC circuit breaker. | |
| 3 | Secure all 24/28V DC panel circuit breakers except #11 and #12 for the main engine starts, #17 for the main engine alarms, #1, #1 and #25 for the blue light, horn, Halon alarm, and the bilge/fire alarm. | |
| 4 | Secure the main engines by pulling up on the engine fuel stop cables (T-Handles) at the steering console. | |
| ngines ar | engine stops must remain in the UP position at all times when the e secured. Failure to do so may allow fuel oil to leak through the nto the cylinders causing a hydraulic lock of the main engine. | |

CAUTION!

| | 5 | Secure 24/28V DC panel circuit breakers #11, #12, and #17. |
|---|----|---|
| | 6 | Secure the sea suction valves. |
| 7 Remove all water, oil, and fuel from the bilges. Wipe the | | Remove all water, oil, and fuel from the bilges. Wipe them dry. |
| | 8 | Wipe-down all machinery and remove the wipe-down cloths. |
| 9 Make a visual check of all hoses, wires, belts and other subject to wear. | | Make a visual check of all hoses, wires, belts and other items subject to wear. |
| as | 10 | Stow all equipment in its proper place. |
| it | 11 | Rinse all firefighting and dewatering equipment used during the mission with fresh water, then dry and stow it. |
| | 12 | Connect the shore-tie cable to the boat. Energize the dockside circuit breaker first, then the main circuit breaker in the 110V AC circuit breaker panel. |
| _ | 13 | Energize the circuit breakers for the battery charger and main engine heaters in the 110V AC circuit breaker panel. |
| | 14 | Sound each fuel tank and fill to 95 percent (231.5 gallons). |

NOTE &

If the portable dewatering pump was used, replace it with the unit spare while it is being cleaned and serviced.
Replacement of the pump will allow the boat to remain mission ready.



| Step | Procedure |
|------|---|
| 15 | Close all doors, hatches, and scuttles. |
| 16 | Wash down the boat with fresh water. |

NOTE &

The mission is **not** complete until the boat is ready for the next mission.



Chapter 6 Mission Performance

Overview

Introduction

The performance procedures in this chapter are specifically designed for 41' UTB missions and crew. For further information on any of the general procedures, review the Boat Crew Seamanship Manual, COMDTINST M16114.5 (series). In addition, repetitive underway training is essential to gain the practical judgmental skills and operational experience necessary to carry out the Coast Guard's multi-mission role.

In this chapter

| Topic | See Page |
|------------------------------------|----------|
| Person in the Water Recovery (PIW) | 6-2 |
| Damage Control and Dewatering | 6-4 |
| Firefighting | 6-10 |
| Anchoring | 6-14 |
| Helicopter Operations | 6-15 |
| Towing | 6-16 |



Person in the Water Recovery (PIW)

A.1. General

Person in the Water situations are divided into two categories:

- Crew members Individuals from your boat, (reducing the size of your crew for response).
- Victims Other persons in the water, (allowing use of the full crew).

A.2. Key issues

Key issues in PIW retrieval include:

| Feature | Description |
|-------------|---|
| Freeboard | The well deck is wide, with relatively low freeboard (39" sides). This is the preferred location for PIW retrieval. |
| Maneuvering | The boat's speed and ease of handling greatly assist in returning and maneuvering for pickup. Though not appropriate in all conditions, variation of the standard techniques might speed recovery. For instance, by splitting the shafts one ahead and one astern, the 41' UTB will turn in a tight circle to come back on the person in the water. |

NOTE &

Because the well deck is aft, the person in the water will be in close proximity to the propellers during recovery. Minimize use of the shafts when alongside the person in the water.

WARNING

Exercise extreme caution when making any accentuated turning maneuvers, such as a "split-shaft" PIW recovery. A full rudder course change with shafts opposed could eject an unwary crew member from the deck.

| Sail Area | With any amount of wind, the high superstructure and shallow draft will cause the boat's stern to turn into the wind with its bow pointed in the direction the wind is blowing (downwind). This condition could cause pickup problems when getting in close. |
|-----------|--|
| | Carefully assess how to compensate for wind, seas, current or any combination of them. PIW recovery |
| | should be with the bow into the wind and seas. |



| Crew Member Recovery | If an injured crew member is in the water, carefully assess the risk. Exercise extreme caution if necessary to use a swimmer. The normally assigned crew of three is not adequate to handle two crew members in the water with only the coxswain on board. |
|-------------------------|---|
|-------------------------|---|



Damage Control And Dewatering

A.3. General

Damage control procedures provide stability and maintain watertight integrity. The Boat Crew Seamanship Manual, COMDTINST M16114.5 (series), covers general damage control, including watertight integrity and stability. Specific 41' UTB issues are addressed here. Damage control for crew members is divided into two categories:

- those actions required to maintain the boat, and
- those actions that might improve mission accomplishment on an assisted vessel.

A.4. Key factors

Key factors which improve operational abilities are listed below. Consider these before a damage control problem occurs.

integrity

A.4.a. Watertight The 41' UTB has "one-compartment" stability. That is, if no more than any one compartment is flooded, the vessel should remain afloat. This assumes all other compartments are watertight with no progressive flooding. Note the limitations of each compartment with regard to preventing progressive flooding.

> The forepeak, lazarette, engine room, and fuel tanks can effectively be sealed Maintaining off from the other compartments and the environment. watertight integrity of these spaces is imperative. Worn hatch and scuttle gaskets, warped or bent hatches, scuttles and their locking mechanisms, and open stuffing tubes all compromise watertight integrity.

> While underway, all listed watertight closures and fittings must be secured. The 41' UTB has the following watertight fittings:

- Forward Bitt Cap
- Forepeak Scuttle
- **Engine Room Hatches**
- **Engine Room Scuttle**
- Lazarette Scuttle

Though not technically a watertight closure, the forward compartment escape hatch must remain closed while underway.



Damage to the stainless steel mufflers which pass through the lazarette could allow flooding from either exhaust cooling water or water entering the exhaust pipe from astern.

Without watertight integrity, compartment flooding will displace any air remaining in the compartment. This results in a loss of all buoyancy for that compartment. A single fitting, such as a loose forward-bitt cap, could easily be forced out by the pressure created by incoming water, allowing progressive flooding.

A.4.b DC equipment

There is a damage control kit in the passenger compartment stowage area. The kit includes:

NOTE &

Various sizes of hose clamps

Note the location and quantity of other items on board that can be used to supplement damage control equipment, (e.g., pillows, blankets, fenders, tools, engine spares, lines, etc.).

- Canvas, 4'x 4'sheet
- Rubber gasket material, 4'x 4'x ¹/₈" sheet
- Various sizes and number of wedges
- Various sizes and number of plugs
- Marline, 250'line
- Oakum
- Small ball of marlin
- Wooden mallet
- Hacksaw (with sheath) and spare blades

A.4.c. Dewatering pumps

This following information describes the equipment and uses for dewatering available aboard a 41' UTB.

| Pump | Use |
|-----------------|--|
| Fixed Fire Pump | The 41' UTB's fixed fire fighting system is comprised of the sea chest, Simplex/duplex firemain strainer, starboard engine with power take-off, fire pump, firemain riser and tri-gate. It provides firefighting capability, or when coupled with the portable eductor, a very effective dewatering capability (or combination of both). |

CAUTION!

In the next two sections on dewatering and firefighting, use of the power take-off/fire pump will be discussed. REMEMBER: With the fire pump power take-off engaged, use of the starboard engine for maneuvering is limited. Never exceed a maximum of 1000 RPM. Engine speed above 1000 RPM could break or throw the power take-off/fire pump drive belt, causing loss of pump pressure for either fire fighting or dewatering.



| Dewatering Pump Kit | Either the standard CG-P1B or the optional CG-P5 pump can be used for dewatering. Additional information on the pump kit can be found in Chapter 3, Section E.3. of this manual and the Rescue and Survival Systems Manual. |
|--------------------------------|---|
| Installed Bilge Pump System | This system is described in Chapter 3, Section E.1. of this manual. |

A.4.d. Eductor

<u>The first step</u> is to set up the eductor. Follow these steps, in order, to accomplish this task:

Step One

| | Procedure |
|---|---|
| 1 | Close all firemain riser tri-gate discharge ball valve outlets (main deck). |
| 2 | Connect a 1 ½" fire hose to one of the secured 1 ½" outlets on the firemain riser tri-gate. (Use either a 25' or 50' length based on need.) |
| 3 | Connect the other end of the 1 ½" hose to the high pressure/inlet side of the eductor. |
| 4 | Connect a 2 ½" fire hose to the low pressure/discharge side of the eductor. |
| 5 | Submerge the eductor in the flooded area. Use the removable suction strainer to keep debris out of the eductor. |
| 6 | Control the discharge end of the 2 ½" hose to prevent accidental flooding. Lead the discharge end overboard so water does not discharge onto either vessel. |

<u>The second step</u> is to set-up the fixed fire pump. To accomplish this, follow these steps, in order:

Step Two

| | Procedure | |
|---|---|--|
| 1 | Inspect, clean and align the simplex/duplex firemain strainer. | |
| 2 | Open the sea chest firemain butterfly valve. | |
| 3 | Place the starboard engine in neutral. | |
| 4 | Remove the power take-off handle retainer strap. | |
| 5 | Use an open palm and push the power take-off handle forward (toward the bow) to the engaged position. | |



With pressure indicated on the firemain pressure gauge in the pilothouse, operate the eductor (number 3 below).

If the fixed fire pump fails to operate after one minute, follow these steps:

| | | Procedure |
|--|----|--|
| WARNING 🖑 | 1 | Make sure the starboard engine is in neutral and at idle speed. |
| Use extreme caution disengaging the power take-off/fire pump. The lever "arc | 2 | Disengage the power take-off/fire pump using the open palm to push firmly back (toward the stern) on the power take-off handle/lever. |
| of throw" can jam the fingers between the | 3 | Advise the coxswain before taking further action. |
| lever handle and the riser pipe, causing injury. | 4 | Visually inspect the power take-off/fire pump belt. Make sure it is properly installed on the pulleys and not damaged. |
| WARNING ® | | e hands in the vicinity of the power take-off/fire pump belt when the agine is running. |
| | 5 | Make sure the sea chest butterfly valve is open. |
| | 6 | Make sure the simplex/duplex strainer is clean, aligned, and tightened securely (no air leaks). |
| | 7 | With the sea chest butterfly valve open, the simplex/duplex strainer clean, aligned, and tight, and the tri-gate ball valve closed, loosen the air vent plug on top the fire pump so air escapes from the pump casing (bleeding the pump). |
| | 8 | When no further air escapes from the air vent plug hole, tighten the vent plug. |
| | 9 | Advise the coxswain and request to engage the power take-off/fire pump, then use the procedures listed above. |
| | 10 | If the fire pump fails to pump after bleeding, prime the pump manually with water. |
| | 11 | Continue this procedure until the air blockage is eliminated. |

<u>The third step</u> is operating the eductor. With the eductor installed, fixed firemain system aligned, power take-off engaged, and pressure indicated on the firemain pressure gauge:

Step Three

| | Procedure |
|---|---|
| 1 | Open the tri-gate ball valve providing high pressure firemain water |
| | to the 1 ½" eductor supply hose. |



| 2 | Make sure that discharge at the end of the 2 ½" low pressure discharge hose occurs almost immediately after opening tri-gate ball valve. |
|---|---|
| 3 | If maneuvering is not required, disengage the starboard marine gear. Grasp the starboard throttle lever at the base (thumb-finger indents) and pull fully out. This allows throttle use (change in engine speed) without shaft RPM. |
| 4 | Increase starboard engine RPM to bring firemain pressure (at gauge) to 100 psi. Do not exceed 1000 RPMs. |
| 5 | Check all hoses frequently for kinks or anything that will cause back pressure. Discharge hose back pressure or reduction/loss of firemain pressure will decrease eductor output. |

A.5. Assisting a boat

In the course of many SAR missions, the 41' UTB and crew are frequently called on to provide varying levels of damage control.

The key to keeping a boat afloat is to attack the cause of the problem (i.e., broken hose, hole, etc.) and not the symptom (flooding). Dewatering may be necessary to determine the scope of the problem, but dewatering alone will not solve the problem. As with damage control and dewatering the 41' UTB, the same items must be considered prior to assisting another vessel.

NOTE &

Chapter 3 of the Coast Guard Addendum to the National SAR Manual, COMDTINST M16130.2 (series), states the Coast Guard's policy on Maritime SAR Assistance.

CAUTION!

Damage control risk assessment must be done prior to getting underway and repeatedly updated throughout the mission. Risk assessment must first evaluate, then continue to evaluate throughout the mission, the potential for personnel injury. All crewmembers must be aware of the capabilities of the boat, the individual crew members, and the equipment on board. If additional equipment or crew might be necessary for a specific mission, it should be brought aboard before leaving the dock.

A.5.a. Watertight integrity

The standard 41' UTB boat outfit does not have sufficient equipment to conduct extensive watertight integrity control measures.

If necessary to tie up alongside a vessel in need of damage control assistance, ensure maximum watertight integrity is maintained on board the 41' UTB. Determine, to the best extent possible, the assisted vessel's layout and source of problem.



A.5.b. DC equipment

As discussed in Section 6.A.4.b., the 41' UTB damage control kit and other gear is readily available.

In performing the risk assessment mentioned in the caution box above, attempt to determine before leaving the dock whether any additional damage control equipment might be required. Additional gear can easily be carried on the 41' UTB's ample main deck and well deck space.

A.5.c. Pumps

The following information describes the capabilities of the 41' UTB to dewater vessels.

NOTE &

With the fire pump power take-off engaged, use of the starboard engine for maneuvering is limited to a maximum of 1000 RPM.

| Pump | Use |
|-------------------------|---|
| Fixed Fire Pump | While alongside an assisted vessel, the 41' UTB's fixed fire pump/main system and eductor will provide an effective dewatering capability. It is described in Sections 6.A.4.c. and 6.A.4.d. above. |
| | Use of the fire pump power take-off limits starboard shaft maneuvering capability. Keep this in mind when deciding whether to make-up the assisted vessel to the 41' UTB. Assess all risk to both the 41' UTB and the assisted vessel. Pay particular attention to the proximity of navigational hazards and how both vessels react in the prevailing weather conditions. |
| Dewatering Pump Kits | Either the CG-P1B or CG-P5 pump can provide dewatering capability to an assisted vessel. Though each pump has instructions inside its container further assistance or direction might be necessary to dewater the assisted vessel. Assess all risks prior to putting a crew member on the assisted vessel. |



Firefighting

A.6. General

WARNING

The 41' UTB boat outfit has **no** personal protective gear approved for firefighting.

The 41' UTB carries firefighting equipment primarily for use on board, and in those extreme cases where firefighting may save other lives. Coast Guard policy for firefighting is in Chapter 8, Volume VI of the Marine Safety Manual, COMDTINST M16000.11 (series).

In any firefighting situation, proper risk assessment is paramount. The available firefighting equipment aboard the 41' UTB, the training and small size of the crew, and availability of personal protective gear must all be considered in the risk assessment and may limit response.

As with damage control and dewatering, firefighting for 41' UTB crew members is divided into two categories:

- Firefighting on the 41' UTB, and
- Assisting distressed vessels with firefighting.

NOTE &

Persons before property. Remove or rescue any personnel (including persons in the water) and evaluate their condition. If injuries require more than minor first aid, evacuate them before any additional firefighting. Do not hazard victims by keeping them aboard the 41' UTB in non life threatening firefighting situations.

A.7. Firefighting protection

Firefighting is very difficult, challenging, and hazardous. Once a fire begins, knowledge of on board equipment, firefighting capabilities and techniques is the main defense. The crew should be completely familiar with all 41' UTB firefighting capabilities. They include the following.

A.7.a. Halon 1301

This fixed system is for engine room fires only. The components of this system are described in Chapter 3, Section F, Fixed Fire Extinguishing Systems. The system operation is described here.

If engine room temperature exceeds 190° F, sensor contacts will close and sound the pilothouse alarm horn. If the alarm horn sounds, inspect the engine room through the viewing window at Bulkhead 6 to determine why the alarm is sounding before activating the system or entering the engine room. A CO₂ extinguisher may be able to extinguish a small engine room fire. In a severe engine room fire, activate the Halon 1301 system.

To activate the system follow these steps (on the following page):



| Step | Procedure |
|------|--|
| 1 | Stop engines. (engines must be completely stopped) |
| 2 | Clear engine room of all personnel. |
| 3 | Close main deck engine room hatches and scuttle. |
| 4 | Pull emergency fuel cut-off "T" handles. |
| 5 | Actuate Halon flow by pulling release handle immediately above Halon bottle, forward side of Bulkhead 6. |
| 6 | Keep engine room closed for at least 5 minutes. |
| 7 | After 5 minutes, let engine room vent for 15 minutes. |

A.7.b. Portable fire extinguishers

There are three portable fire extinguishers aboard:

| Туре | Location |
|-----------------------|--|
| 10 lb. PKP | Passenger compartment pilothouse support stanchion |
| 10 lb. PKP | Pilothouse, inboard of door, aft bulkhead |
| 5 lb. CO ₂ | Passenger compartment, aft side of gun locker |

A dry chemical (PKP) extinguisher does not cool or remove oxygen from the fire triangle. It is effective **only** in knocking down flames. If enough heat or an ignition source is present, the fire will reflash after the powder settles from the air. Class A fires are particularly prone to reflash. PKP extinguishers are least effective on Class A fires.

WARNING

CO₂ allows the same reflash hazard as does PKP. Cool all hot spots thoroughly to prevent reignition. Note that CO₂ is very poor as a Class B extinguishing agent.

A.7.c. Firemain system

The fixed fire pump and installed firemain system is described in Section 3.C. of this manual.

The following firefighting equipment is stowed in the passenger compartment stowage area:

- One 1 ½" x 25' firefighting hose
- One 1 ½" x 50' firefighting hose
- One 2 ½" x 12' firefighting hose
- One 2 ½" x 30' fire monitor connector hose
- One 1 ½" Vari-nozzle



The following firefighting equipment is stowed in forepeak:

One 2 ½" Stang fire monitor with nozzle

A.7.d. Operating instructions

The following are operating instructions for the firemain system with hose for fire fighting. The first step is preparation.

Step One

| | Procedure |
|---|--|
| 1 | Connect a 1 ½" fire hose to the tri-gate. |
| 2 | Attach the Vari-nozzle to the other end of the hose. Make sure the nozzle is closed. |
| 3 | Lay out the hose and make sure there are no sharp bends or kinks to restrict water flow. |
| 4 | Signal the nozzleman and engineer to make ready to start the fire pump. |

The second step is setting up the fixed fire pump.

Step Two

| | Procedure |
|---|---|
| 1 | Inspect, clean and align the simplex/duplex firemain strainer. |
| 2 | Open the sea chest firemain butterfly valve. |
| 3 | Place the starboard engine in neutral |
| 4 | Make sure the firemain riser tri-gate ball valves are closed. |
| 5 | Remove the power take-off handle retainer strap. |
| 6 | Using an open palm, push the power take-off handle forward (toward the bow) to the engaged position. |
| 7 | With pressure indicated on the firemain pressure gauge in the pilothouse, and only upon the coxswain's command, open the trigate ball valve, providing water to the hose. |

The third step is applying firefighting water.

Step Three

| | Procedure |
|---|--|
| 1 | Do not exceed the 1000 RPM limitation (as noted under dewatering). If maneuvering is not necessary, disengage the starboard marine reduction gear. |
| 2 | Check all hoses frequently for kinks or anything that will restrict the flow of water. |



| (See Section 6.A.4.d.). | | If the fire pump fails to provide water, check the steps listed above (See Section 6.A.4.d.). |
|-------------------------|--|---|
|-------------------------|--|---|

A.7.e. Dewatering pumps

The CG-P1B pump is of little use for firefighting. The optional CG-P5 pump can provide minimal firefighting capability, provided the pump-compatible, quick-release fitting fire hose and nozzle is carried.

A.8. Assisting a boat

The importance of mission risk assessment prior to becoming involved cannot be over-stressed. Continually look at worst-case scenarios developing, and determine whether the 41' UTB is the proper and adequate resource to handle the mission.

A.8.a. Portable fire extinguishers

The portable fire extinguishers mentioned in Section 6.A.7.b. above will provide a "first aid" type firefighting capability. A properly used 10 lb. CO₂ extinguisher can be very effective on small Class C fires.

A.8.b. Firemain system

The fixed fire pump and installed firemain system is described in Section 3.C. of this manual.

A.8.c. Dewatering pumps

If time permits when responding to a fire, bring an optional CG-P5 pump and its pump-compatible, quick-release fitting fire hose and nozzle. This will provide additional fire fighting capability.



Anchoring

A.9. General

Due to the nature of the 41' UTB's work, it may encounter situations where it must take station and standby for periods of time. Rather than keeping station, it is less fatiguing and more economical to anchor. The circumstances will dictate if and where to anchor. The 41' UTB is equipped with 300 feet of 2 ¾" DBN, 9' of galvanized BBB chafe chain, and a 22 or 25-pound Danforth anchor. A second Danforth anchor is stored in the forepeak.

A.10. Site selection

If weather, seas, bar conditions, fatigue, or other factors necessitate anchoring the 41' UTB and an assisted vessel, consider the anchorage carefully. Anchorage site selection is more than finding deep water. Select the anchorage site carefully, based on present conditions and those projected (winds/weather, tide, current, etc.).



Helicopter Operations

A.11. General

Helicopter operations are of two types:

- delivery of equipment or personnel to the 41' UTB and/or
- pickup of personnel or material from the 41' UTB.

For both types of helicopter operations, ensure adequate maneuvering space for the hoist, properly prepare the boat for the hoist, and adequately brief the crew members on the procedures and safety precautions. In the case of a personnel hoist, brief the individual to be hoisted. The 41' UTB's well deck provides a good working area. Close all sliding windows and door to prevent rotor wash spray from entering the pilothouse.

More detailed procedure for helo operations can be found in Chapter 19 of the Boat Crew Seamanship Manual, COMDTINST M16114.5 (series).



Towing

A.12. Towing limitations

Towing limitations for the 41' UTB are set at 100 gross tons (i.e., vessels of approximately 80 feet in length). These parameters are general. Every case will require the coxswain to determine if a tow can be completed in a safe manner. In less than favorable conditions, it may not be possible for the 41' UTB to tow vessels of 100 gross tons.

WARNING

These limits may be exceeded with approval of the operational commander, **only** after making appropriate risk assessment for the situation at hand. Consider on-scene conditions noted by the 41' UTB coxswain in the risk assessment process. The coxswain retains the final on-scene decision as to whether an action may or may not be safely executed.



Chapter 7 Emergency Procedures/Casualty Control

Overview

Introduction

This chapter describes emergency procedures and actions to be taken if a casualty to the boat or one of the boat's systems occurs.

The best casualty control action is to prevent casualties through good maintenance and proper seamanship. If a casualty does occur, there must be timely execution of a predetermined plan of action to correct and/or prevent worsening of the situation. Frequent underway casualty control drills both prepare and improve the crew's response.

NOTE &

Make frequent reference to the other sections of this handbook while reviewing emergency procedures and casualty control. Become fully familiar with emergency procedures and review them often. An actual emergency is not the time to learn emergency procedures.

In this chapter

| Section | Title | See Page |
|---------|------------------|----------|
| A | Capsizing | 7-3 |
| В | Casualty Control | 7-5 |

Operators Manual - 41' UTB





Section A. Capsizing

A.1. General

Capsizing is the most demanding situation the crew of a 41' UTB could experience. Capsize prevention is discussed in Section 5.E.11. of this handbook. Also refer to the Boat Crew Seamanship Manual, COMDTINST M16114.5 (series). Preparation, both physical and mental, increases chances for survival during a capsizing. The first step in preparation is to have a plan of action. This starts with extensive discussion and training, on the boat, as well as in the classroom. Second, be thoroughly familiar with the equipment and physical layout of the boat.

A.2. Egress

Specific changes have been made in the 41' UTB as a result of past casualties.

These include:

WARNING

In a capsizing, staying inside the hull is the least desirable option. There is a limited, undetermined amount of time for positive action. Make every effort to escape. Any air pocket in the hull will eventually be lost, leaving personnel trapped.

| Item | Change |
|---------------------------|---|
| Handrails | To guide survivors, the handrail on the port side of the pilothouse extends down into the passenger compartment. This handrail leads from the overhead of the passenger compartment aft along the port side past the port sliding window and ends at the pilothouse door. |
| Sliding Windows | The sliding windows, installed on the port and starboard sides and the aft pilothouse bulkhead, offer additional escape routes. Note the side windows have one stationary panel. The forward panel slides aft. The outboard (starboard side) panel of the pilothouse aft bulkhead is stationary. To open the second panel, slide the panel outboard (to starboard). |
| Emergency Escape Hatch | A hatch in the passenger compartment cabin overhead serves as an additional escape route. The hatch is located directly above the porta-potti in the passenger compartment head. |

WARNING 💖

The escape hatch in the head **must** remain unobstructed and accessible at all times. Do not install any obstruction nor store any equipment in the head unless it is specifically designated by this manual.



A.3. Recommended methods of egress

Provided all compartments remain watertight at the time of capsizing, the recommended methods of egress from a capsized 41'UTB are:

| Emergency Escape Hatch | The bow section will most likely retain the most buoyancy in event of a capsize. |
|--|--|
| Pilothouse Port Side Sliding Window (forward panel slides aft) | There are less obstructions around this window than all others. |
| Pilothouse Starboard Side Sliding Window (forward panel slides aft) | |
| Pilothouse Rear Bulkhead Sliding Window | |
| Pilothouse Door | This method of egress is least recommended as the door must open outward, against the water pressure and surge. Also, once open, the doorway could allow a significant, uncontrollable increase in flooding. |



Section B. Casualty Control

Overview

Introduction

Casualty control is the positive action taken to correct, control, and/or combat operational discrepancies experienced during underway operations. Due to the nature of Coast Guard missions, corrective casualty control measures can affect a range of operational situations from the potential loss of life to minor hull or machinery damage.

In this section

| Topic | See Page |
|--|----------|
| Fire | 7-6 |
| Main Engine Runaway | 7-7 |
| Loss of Main Engine Lube Oil Pressure | 7-8 |
| Main Engine High Water Temperature | 7-9 |
| Shaft Stuffing Box/ Packing Gland Overheating | 7-10 |
| Collision with a Submerged Object/ Running Aground | 7-11 |
| Loss of Steering | 7-12 |
| Main Engines Fail to Start | 7-15 |
| Reduction Gear Failure | 7-16 |
| Main Engine/Marine Gear Failure | 7-17 |



Fire

B.1. General

This type of casualty presents the most common threat to operations. The most logical and best preventative action is to remain alert and take early corrective action when fire-threatening conditions are observed. Evaluate every fire or potential fire and take corrective action. Firefighting is covered in Section 6.A.6. of this handbook.

B.2. Engine room fire

WARNING 💖

If at any point there is doubt as to the ability to control and extinguish an engine room fire, or if it is determined to be beyond the capability of the portable fire extinguishers, use the installed fixed Halon 1301 Fire Extinguishing System.

The most likely location of fire on the 41' UTB is the engine room. Therefore, a timely physical inspection of this space and its equipment is critical. If an engine room fire is suspected, conduct the initial investigation through the viewing window in Bulkhead 6. If a fire or the potential for fire is present, the severity of the situation will dictate the course of action. In any event, take positive, aggressive action immediately to correct the situation.

The fixed Halon 1301 Fire Extinguishing System has the capacity to extinguish an engine room fire provided the instructions for its use are followed carefully. All crew members must be thoroughly familiar with the operating instructions. (See Section 3.F. for system description and Section 6.A.7. for system operation.)

B.3. Other fires

Proper use of fire extinguishers can quickly extinguish small Class B and Class C fires.

WARNING

If an electrical fire occurs, first secure the appropriate breaker(s) to the effected piece of equipment. If necessary, secure the main breaker.

NOTE &

Consult the Boat Crew Qualification and Certification Manual, Volume IV. Boat Engineer, COMDTINST M16114.6 (series), or Technical Pub 4368 (41' UTB Service Manual) for additional information concerning the following engineering, hull, or mechanical casualties.



Main Engine Runaway

B.4. Procedure

If there is a main engine runaway casualty during normal operation, immediately take the following corrective actions:

| Step | Procedure |
|------|---|
| 1 | Try to reduce the affected main engine's RPM by bringing both main engines back to the "clutch engaged" position, keeping a load on the affected engine. |
| 2 | If the main engine continues to runaway, pull the main engine fuel stop cable for the affected engine. |
| 3 | If after pulling the fuel stop cables the main engine continues to runaway, place the unaffected main engine in the neutral position and turn in the direction of the runaway engine to increase the shaft load. |



Loss of Main Engine Lube Oil Pressure

B.5. Procedure

A main engine lube oil pressure loss will activate the alarm (bell) system and energize the red indicator light (located below the affected main engine lube oil pressure gauge). If this occurs, immediately take the following corrective actions:

| Step | Procedure |
|------|--|
| 1 | Reduce RPM's to clutch ahead on both engines. |
| 2 | Identify affected engine. |
| 3 | Notify crew of casualty. |
| 4 | Secure affected engine. |
| 5 | Check engine room through lower cabin view port to assess the situation. |
| 6 | Rig the anchor, if necessary. |
| 7 | Engineer: Enter engine room, |
| | Crewmember: Act as safety observer for Engineer. |
| 8 | Ensure fire extinguishers are on scene. |
| 9 | Check bilge area for lube oil. |
| 10 | Check lube oil for quality and quantity. |
| 11 | Notify station of situation. |
| 12 | Return to station if cause cannot be determined or repaired. |



Main Engine High Water Temperature

B.6. Procedure

If main engine jacket water coolant reaches 205°F, it will activate the alarm (bell) system and energize an amber indicator light (located below the affected main engine jacket water temperature gauge). If this occurs, immediately take the following corrective actions:

| Step | Procedure | |
|------|--|--|
| 1 | Reduce RPM's to clutch ahead on both engines. | |
| 2 | Identify affected engine. | |
| 3 | Notify crew of casualty. | |
| 4 | If temperature continues to rise, secure engine. | |

CAUTION!

CAUTION!

| 4 | engine is secured and the fuel stop is in the up position, to prevent seizure |
|-----------------------|--|
| mie ine itil the e | ngine cools, periodically rotate the engine with the starter. |
| | |
| 5 | Check overboard discharge. |
| 6 | Engineer: Check engine room through lower cabin view port to assess the situation. |
| 7 | <u>Crew member</u> : If necessary, rig the anchor. |
| 8 | Engineer: Enter engine room. |
| | <u>Crew member</u> : Act as safety observer for engineer. |
| 9 | Ensure sea suction valves are open. |
| 10 | Check sea strainers. If necessary, shift strainers. |
| 11 | Check bilges. |
| 12 | Check cooling lines. |
| 13 | Check raw water pump with back of hand. |
| 14 | Check expansion tank after engine has cooled. |
| 15 | Notify station of situation. |



Shaft Stuffing Box/Packing Gland Overheating

B.7. Warning signs

If there is no water coming from the shaft packing gland (6 to 10 drops per minute) and the stuffing box gland is too hot to touch, immediately take the following corrective actions.

WARNING

Do not place a hand near the turning shaft until you bring that shaft to clutch speed. Always exercise caution when working around a turning shaft.

B.8. Procedure

Follow these corrective actions.

| Step | Procedure |
|------|--|
| 1 | Bring both main engine throttle control handles to the clutch position. Do not disengage the shafts or secure the main engines. |
| 2 | Cool down the shaft and packing gland with raw water. |
| 3 | Loosen the packing gland nut. |



Collision With a Submerged Object/Running Aground

B.9. Procedure

If the boat strikes an object in the water or runs aground, immediately take the following corrective actions:

| Step | Procedure |
|------|---|
| 1 | Reduce RPM's to neutral on both engines. |
| 2 | Notify crew of casualty. |
| 3 | Coxswain: Verify position. |
| 4 | Engineer: Proceed to the engine room to check for compartment flooding. |
| 5 | Crewman: Check all other compartments for flooding. |
| 6 | Engage engines at various speeds to check for vibration. |
| 7 | Notify station of situation. |

CAUTION!

Excessive shaft or propeller vibration may further damage the strut or stern tube bearings.



Loss of Steering

B.10. Signs

CAUTION!

Avoid backing on either shaft until the cause of the steering loss is determined and the proper actions are taken.

If there is a loss of steering control while underway, bring the 41' UTB to dead in the water (at most, maintain bare steerageway). Then investigate to determine the cause. Likely causes of steering loss include:

- broken steering cable,
- broken hydraulic hose(s),
- jammed rudder, or
- helm or helm pump failure.

If the helm turns freely without any effect on the rudders, suspect a broken hydraulic hose, air in the system, or leaking fitting. If the helm will not turn, suspect a jammed rudder.

B.11. Steering hose broken

To regain control if a hydraulic hose is broken, follow these steps.

| Step | Procedure |
|------|--|
| 1 | Bring both main engine throttle controls to the neutral or minimum steerage clutch position if in a running sea. Try to put the seas on the bow. |
| 2 | Notify crew of casualty. |
| 3 | Coxswain: Steer with engines, if needed. |
| 4 | Engineer: Investigate the casualty. |
| 5 | Crew man: If necessary, rig the anchor. |
| 6 | Crew man: Remove emergency tiller from the lazarette. |
| 7 | Place engines in neutral. |
| 8 | Carefully mount the emergency tiller on the port rudder post. |
| 9 | Gain control of the rudders using the emergency tiller. |
| 10 | Detach release pin on starboard rudder post to disconnect steering cable. Tie cable/hydraulic ram out of way. |
| 11 | Test rudders for complete range of motion (full port to full STBD) |
| 12 | Bring the tiller arm about until the rudder arm position indicates the rudders are amidship. |



| Step | Procedure |
|------|--|
| 13 | Engage each shaft separately to reduce propeller thrust on the rudder blades and emergency tiller. |
| 14 | Keep the main engine RPM at a minimum to reduce strain on the crew tending the emergency tiller. |
| 15 | The coxswain shall give standard steering commands to the crew members tending the rudder. |
| 16 | Notify station of situation. |

B.12. Jammed rudder

To regain control with a jammed rudder, follow these steps.

| Step | Procedure | | | |
|------|--|--|--|--|
| 1 | Reduce RPM's on both engines. Bring both main engine throttle controls to the neutral or minimum steerage clutch position if in a running sea. Try to put the seas on the bow. | | | |
| 2 | Notify crew of casualty. | | | |
| 3 | Coxswain: Steer with engines, if needed. | | | |
| 4 | Engineer: Investigate the casualty. | | | |
| 5 | Crew man: If necessary, rig the anchor. | | | |
| 6 | Crew man: Remove emergency tiller from the lazarette. | | | |
| 7 | Place engines in neutral. | | | |
| 8 | Carefully install emergency tiller, mounting it on the port rudder post. Maintain positive control. | | | |
| 9 | Engineer: If necessary, carefully remove the tie rod bar connecting the port and starboard rudder posts. | | | |
| 10 | Use caution while exercising each rudder to determine which rudder is jammed. Determine the cause, if possible (i.e., debris, damage, etc.). | | | |

NOTE &

If the port rudder is jammed, lash the emergency tiller/rudder arm with mooring lines to the stern cleats to prevent movement. If the starboard rudder is jammed, keep the ram attached to prevent movement.

If unable to free the jammed rudder (using attempts to rack it back and forth with the emergency tiller or by clearing any debris), secure it, as possible, to prevent movement.



| Procedure | | | |
|--|--|--|--|
| After securing the jammed rudder, adjust the opposite rudder to gain the greatest steerage. Use main engines, throttles shafts, and propellers, to regain and maintain steerage. | | | |
| Keep main engine RPM at a minimum to reduce stress on the crew tending the emergency tiller. | | | |
| The coxswain shall give standard steering commands to the crewmembers tending the rudder. | | | |
| | | | |

CAUTION!

The starboard rudder does not have rudder stops. Exercise extreme caution when removing the tie rod bar from either rudder arm. Removing the tie rod bar could allow the starboard rudder blade to turn into the starboard propeller.

WARNING

To prevent injury, man the emergency tiller at **all** times while it is installed on a rudder post. However, avoid tending the emergency tiller by hand when backing down. Backing down produces a heavy surge on the rudder. This surge can throw the tiller arm and severely injure the operator. If sternway is necessary, consider lashing the tiller amidships with mooring lines to the stern cleats to prevent movement. If not possible, remove the emergency tiller from the rudder post before backing down.

| 15 | Notify station of situation. |
|----|------------------------------|
| 15 | Notify Station of Station. |



Main Engines Fail to Start

B.13. General

If the main engines will not turn over when the starter button is depressed or they turn over but will not start, refer to Chapter 5, Section C, Pre-Start and Start-Up Procedures, and the engine service manual.



Reduction Gear Failure

B.14. Procedure If the marine gear fails to engage or operate properly, immediately take the following corrective actions:

| Step | Procedure | | | |
|------|--|--|--|--|
| 1 | Bring both main engine throttle controls to the neutral position. | | | |
| 2 | Check the marine gear drive oil pressure gauge for the affected side. If the marine gear drive oil pressure gauge reads zero when the marine gear is in the neutral position, secure the respective main engine immediately . | | | |
| 3 | The MG-509 marine gear is equipped with a "come-home" feature that allows manual engagement of the forward clutch pack for emergency use only. The "come-home" feature for the port main engine/marine gear cannot be utilized due to the method of hookup. | | | |
| 4 | To engage the "come-home" feature, remove the two "come-home" access plugs from the manifold over the forward clutch location (aft side of marine gear). Use a screwdriver and alternately tighten the "come-home" set screws in a clockwise direction until clutch lock-up is attained. (See Technical Pub 4368 (41' UTB Service Manual) for a detailed diagram.) | | | |

WARNING

The use of the "come-home" feature in the MG-509 marine gear requires that the starboard main engine be secured **before** the "come-home" feature can be engaged or disengaged.



Main Engine/Marine Gear Failure

B.15. Procedure

In the event of a main engine or marine gear failure, the MG-509 unit **does not** require securing the shaft, provided the following appropriate actions are taken:

Main Engine Operable

| Step | Action | | |
|------|--|--|--|
| 1 | With the drive oil level at the full mark on the dipstick. | | |
| 2 | Start and run the main engine in the neutral clutch position for a minimum of 5 minutes. | | |
| 3 | Marine gear drive oil pressure must remain at the normal operating pressure during this 5-minute period. | | |
| 4 | This must be done after every 8 hours of free spinning operation. | | |

Main Engine Not Operable

| Step | Action |
|------|---|
| 1 | Complete these steps before operating the marine gear using the free spin feature. |
| 2 | Plug the dipstick tube and fill the marine gear completely with oil. |
| 3 | Drain the excess oil from the marine gear until it again reaches the full mark on the dipstick, after which free spin operation is allowed. |
| 4 | This must be done after every 8 hours of free spinning operation. |

Main Engine and/or Marine Gear Disabled

| Step | Procedure | | | |
|------|---|--|--|--|
| 1 | Lock the shaft, although there is no standard shaft locking device. | | | |

WARNING 💖

You must take extreme care not to cause personnel injury or damage to the boat.

CAUTION!

Do not use wrenches, pry bars, etc. to keep a propeller shaft from rotating. These devices can slip or disengage causing personnel injury, puncture the hull, or damage the machinery. See Mechanical Emergency "Come-Home" feature or "Free-Wheeling" feature above.

Chapter 7 – Emergency Procedures/ Casualty Control





Appendix A 41' UTB Outfit List And Stowage Plan

Overview

Introduction

This appendix is the standard stowage plan for the 41' UTB outfit. No deviation from this list is authorized, except in the event that the addition of portable equipment, not part of the standard boat outfit, is necessary to meet local mission needs; units are authorized to temporarily carry this extra equipment.

This authorization is on case by case basis only, and care must be taken to properly secure any extra gear and to ensure it does not interfere with safe egress or the boat's standard outfit/systems. Under no circumstances shall permanent alterations be made to power, stow or in any way accommodate extra equipment.

In this appendix

This appendix lists the quantity and location of items for the following compartments of the 41' UTB:

| Title | See Page |
|-----------------------|----------|
| Forepeak | A-3 |
| Main deck | A-3 |
| Well deck | A-4 |
| Lazarette | A-4 |
| Passenger compartment | A-4 |
| Pilothouse | A-7 |





| FOREPEAK | | | |
|--|--------|---|--|
| OUTFIT ITEM | QTY | LOCATION | |
| Danforth anchor, 22 or 25 lb. galvanized | 1 Each | On Bulkhead #2 | |
| Anchor line, (2-¾" DBN) | 300' | On stowage shelf | |
| Thimble, galvanized, (¾") | 1 Each | Spliced in eye of anchor line | |
| Shackle, screw pin, (5/8") | 1 Each | Attached to anchor line eye | |
| Swivel, galvanized, (1/2" galvanized) | 1 Each | Attached to shackle on anchor line | |
| Anchor chafe chain, (1/2" galvanized) | 9' | Attached to swivel on anchor line | |
| Shackle, screw pin, (7/16") | 1 Each | Attached to chafe chain, hangs from fwd bitt plug | |
| Portable fire monitor | 1 Each | In bracket, port side | |
| Fire monitor mounting stanchion | 1 Each | In bracket, starboard side | |

| MAIN DECK | | | |
|---|-------------------|---|--|
| OUTFIT ITEM | QTY | LOCATION | |
| Danforth anchor, (22 or 25 lb. galvanized) | 1 Each | In brackets on passenger compartment (exterior) | |
| Wooden handle boat hooks | 2 Each | Hanging by leather straps from pilothouse side handrails, P/S | |
| Life ring, 24" diameter, w/ 75' of 5/16" polypropylene line | 1 Each | Port main deck handrail | |
| Float light w/attachment line | 1 Each | Port main deck handrail | |
| Life raft, in canister, w/weak link, 4 or 6 person | 1 Each | On shelf, pilothouse aft, starboard side (exterior) | |
| EPIRB | Optional | In bracket, pilothouse port bulkhead, aft of window | |
| Firemain tri-gate | 1 Each | Mounted on riser | |
| Spanner wrenches | 1 Set Optional | Mounted starboard side aft pilothouse bulkhead | |



| WELL DECK | | | |
|-----------------------------|----------------|-------------------------------|--|
| OUTFIT ITEM | QTY | LOCATION | |
| Dewatering pump (P-1/P-5) | 1 Kit | In brackets starboard side | |
| Towline (2-3/4"dbn) w/cover | 600' | On tow reel | |
| Safety gas can (5 gallon) | 1 Each | In bracket, port side | |
| Fuel sounding rod | 2 Each | Under gunwale, port/STBD side | |
| Heaving lines (75') | 2 Each | Port deck storage box | |
| Rescue heaving line (75') | 1 Each | Port deck storage box | |
| Skiff hook | 1 Each | Port deck storage box | |
| Shackles, various, spare | 4 Each | Port deck storage box | |
| Chafing gear | As Required | Starboard deck storage box | |
| Lead line | 1 Each | Starboard deck storage box | |
| Shackle, screw pin, 3/4" | 1 Each | Starboard deck storage box | |
| T-handle wrench, large | 1 Each | Starboard deck storage box | |
| T-handle wrench, small | 1 Each | Starboard deck storage box | |

| LAZARETTE | | | |
|-------------|-----|----------|--|
| OUTFIT ITEM | QTY | LOCATION | |

Emergency tiller 1 Each In bracket

| PASSENGER COMPARTMENT | | |
|--------------------------------|--------|-----------------------|
| OUTFIT ITEM | QTY | LOCATION |
| Porta-potti | 1 Each | In head space |
| Toilet paper holder | 1 Each | In head space |
| Swimmer's harness, w/100' line | 1 Each | Under port berth seat |
| Helmets, goggles and gloves | 3 Sets | Under port berth seat |
| Swim mask | 1 Each | Under port berth seat |
| Swim fins | 1 Pair | Under port berth seat |
| Pillows (covered) | 2 Each | Under port berth seat |



| PASSENGER COMPARTMENT OUTFIT ITEM QTY LOCATION Wool blankets (covered) 4 Each Under port b | N |
|--|------------|
| Wool blankets (covered) 4 Each Under north | |
| | perth seat |
| Grapnel hook, 4 lb. (w/100', 2" DBN) 1 Each Under port b | |
| Fire hoses: | Jordi Scat |
| $1-\frac{1}{2}$ " x 50' 1 Each Storage area | |
| 1-½" x 25' 1 Each Storage area 1-½" x 25' | |
| 2-½" x 12' 1 Each Storage area 1 Each Storage area | |
| 2-1/2" x 30' 1 Each Storage area 1 Each Storage area | |
| Vari-nozzle 1 Each Storage area | |
| Eductor 1 Each Storage area | |
| Engineering spare parts kit: | • |
| Fuel filters, Racor 2040TM 2 Each Under Port b | perth seat |
| Oil filter, Fleetguard LF3363 1 Each Under Port b | |
| Belts, alternator, matched set 1 Set Under Port b | |
| Belt, fire pump drive 1 Each Under Port b | |
| Light Bulbs, navigational & interior As Under Port b Required | |
| Electrical equipment fuses As Under Port b Required | perth seat |
| Salt water pump impeller w/gasket 1 Each Under Port b | perth seat |
| Tool box (for underway repairs) 1 Kit Storage area | |
| Damage control kit 1 Kit Storage area | |
| Oil can, 5 gallon (stencil oil grade on can) 1 Each Storage area | ı |
| EMT kit Optional Storage area | i. |
| Oxygen kit (if EMT kit on board) Optional Storage area | i. |
| NOTE So The EMT kit is optional. The Thomas TT 890 Aeromedical p authorized kit if carried. If the oxygen kit is carried on board, required. | |
| Shoulder line throwing gun (SLTG) Optional Gun locker | |
| M-16 SLTG conversion kit Optional Gun locker | |



| PASSENGER COMPARTMENT | | | |
|---|----------------------|---|--|
| OUTFIT ITEM | QTY | LOCATION | |
| Hand-held search light (portable) | 1 Each | Storage area | |
| Personal floatation devices: | | | |
| CG Type I w/PML and whistle | 4 Adult | Under STBD berth seat | |
| CG Type I w/PML and whistle | 2 Child | Under STBD berth seat | |
| Personal survival vests | 5 Each | Gun locker | |
| Stokes litter w/floatation, ballast bar & chest pad | 1 Each | Above STBD berth seat | |
| Pyrotechnics kits: | | | |
| MK-79 signal kit | 2 Kits | Gun locker | |
| MK-124 day/night flare | 12 Each | Gun locker | |
| MK-127A illumination flare | As Required | Gun locker | |
| 10-Person first aid kit | 1 Each | Above gun locker | |
| Safety grounding wand | 1 Each | Storage area | |
| Trash can, 5 gallon | 1 Each | Storage area | |
| Fenders: | | | |
| 8" x 30", cylindrical (white) | 4 Each | Storage area | |
| 60" circ., (optional), (orange) | 2 Each | Storage area | |
| Mooring lines: | | | |
| 2¾" DBN x 30' | 2 Each | Storage area | |
| 2¾" DBN x 60' | 2 Each | Storage area | |
| Bridles | No More Than 150' | Storage area | |
| Fire extinguishers: | | | |
| 10 lb. PKP | 1 Each | On pilothouse support stanchion | |
| 5 lb. CO ₂ | 1 Each | Aft side/gun locker | |
| Battle lantern | 1 Each | On pilothouse support stanchion, facing forward | |
| Paper towel dispenser | 1 Each | Port side above sink | |



| PASSENGER COMPARTMENT | | |
|----------------------------------|--------|--------------------------|
| OUTFIT ITEM | QTY | LOCATION |
| Hot cups | 2 Each | Sink area in receptacles |
| 24-hour clock | 1 Each | Port side above sink |
| Mouth horn, reed | 1 Each | Under sink |
| Air horn, portable, w/propellant | 1 Each | Under sink |
| Ear protectors | 2 Pair | Under sink |
| • | | |

| PILOTHOUSE | | |
|--------------------------------|------------|--|
| OUTFIT ITEM | QTY | LOCATION |
| Bell, 6" | 1 Each | In mounting bracket, port side of the pilothouse door |
| Fire extinguisher, 10 lb. PKP | 1 Each | In mounting bracket, starboard side of the pilothouse door |
| Battle lantern | 1 Each | Starboard bulkhead |
| 6 lb. pick axe | 1 Each | Port bulkhead, under circuit breaker panels |
| Halon warning placard | 1 Each | On steering console |
| Starting and securing placard | 1 Each | On steering console |
| Fire pump RPM placard | 1 Each | On steering console |
| Flashlight (heavy duty) | 1 Each | On shelf, port side of steering console |
| Compass deviation table | 1 Each | Mounted near chart table |
| RPM/speed/fuel curve | 1 Each | Mounted near chart table |
| Binoculars (7 x 50) | 1 Each | In holder inside electronics console |
| Penlight w/red lens | 1 Each | Berth seat/storage area |
| NOS charts | For A.O.R. | Berth seat/storage area |
| Navigator's kit | 1 Each | Berth seat/storage area |
| Stopwatch, w/sweep second hand | 1 Each | Berth seat/storage area |
| Nautical slide rule | 1 Each | Berth seat/storage area |
| Parallel ruler/Weems plotter | 1 Each | Berth seat/storage area |



| PILOTHOUSE | | | |
|---|------------------------------|---|--|
| OUTFIT ITEM | QTY | LOCATION | |
| Dividers | 2 Each | Berth seat/storage area | |
| Pencils #2 | As Required | Berth seat/storage area | |
| NOS Chart No. 1 | 1 Each | Berth seat/storage area | |
| Navigation Rules (COMDTINST M16672.2) | 1 Each | Berth seat/storage area | |
| CG Light List* | For A.O.R | Berth seat/storage area | |
| NOS Coast Pilot * | For A.O.R | Berth seat/storage area | |
| NOS Tide Tables * | For A.O.R | Berth seat/storage area | |
| NOS Tidal Current Tables * | For A.O.R | Berth seat/storage area | |
| CG Addendum to National SAR Manual (COMDTINST M16130.2) | 1 Each | Berth seat/storage area | |
| Operating instructions for: | | | |
| Motorola MCX 1000 | 1 Each | Berth seat/storage area | |
| Raytheon AN/SPS-69 Radar | 1 Each | Berth seat/storage area | |
| Leica MX-200 GPS | 1 Each | Berth seat/storage area | |
| Leica MX-51R DGPS Upgrade | 1 Each | Berth seat/storage area | |
| Raytheon Ray-430 Loudhailer | 1 Each | Berth seat/storage area | |
| 41' UTB Operator's Handbook | 1 Each | Berth seat/storage area | |
| *Excerpts of the applicable government pu may be carried in a binder to fulfill this rec | ablication(s) con puirement. | overing the unit area of responsibility | |



Appendix B 41' UTB Paint/Color Reference Guide

Introduction

This reference guide outlines information on protective coating for the 41' UTB. Listed in this guide are the topcoat colors, supply source, stock number, and reference for most painted items on the boat.

NOTE &

This guide is not the sole source of applicable information. The Coatings and Color Manual, COMDTINST M10360.3 (series) is the governing Coast Guard directive. If a conflict exists between this handbook and the Coatings and Color Manual, use that manual.

Commandant (G-SEN) requires prior approval before testing new coatings and preservation material. Copies of all correspondence must be provided to Commandant (G-SEN).

Only paint boat surfaces to prevent corrosion or deterioration. Clean soiled surface, do not repaint them.

In this Appendix

| Section | Title | See Page |
|---------|---|----------|
| A | Interior and Exterior Surfaces | B-3 |
| В | Safety Colors and Identification Colors | B-5 |
| С | Unpainted Surfaces | B-7 |
| D | Items Not Listed | B-9 |
| Е | List of Items | B-11 |





Section A. Interior and Exterior Surfaces

A.1. Interior surfaces

Do not paint interior surfaces more often than once every 3 years. Repainting too frequently results in paint film failure due to films which are too thick or films which are incompatible.

Apply the minimum number of coats required; usually one is sufficient.

A.2. Exterior surfaces

Do not paint exterior surface more often than once a year.

Consider "touch-up" painting rather than complete repainting. Repair prior to paint film failure.

Appendix B - Paint/Color Reference Guide





Section B. Safety Colors and Identification Colors

B.1. Safety colors

The Coast Guard safety color code complies with Occupational Safety and Health standards. These codes apply to the 41' UTB in conflict with other requirements. Safety colors warn of hazards and are not for decoration. They are discussed in the Coatings and Color Manual, COMDTINST M10360.3 (series).

B.2. Identification colors

The colors for piping, valves, and operating levers are found in the Coatings and Color Manual, COMDTINST M10360.3 (series). These items are provided with a standardized color code.

B.3. Repainting

New machinery, gear, and parts may have a factory painted finish. Do not repaint to the standard color until wear of the original paint requires refinishing.

Appendix B - Paint/Color Reference Guide





Section C. Unpainted Surfaces

C.1. General

The following areas shall not be painted:

| Surface | Items included but not limited to: |
|---|------------------------------------|
| Stainless steel, chrome plated, and | rudder posts |
| decorative plastic surfaces | chart tables |
| | interior/exterior cabin handrails |
| | hot cup holders |
| | anchor brackets |
| | freshwater fill vent |
| | • cleats |
| Aluminum bilge surfaces | • plating |
| | • framing |
| Working surfaces of mooring and towing hardware | • none listed |
| Exterior wood is not painted because cracks and deterioration can not be detected | boat hooks |

Appendix B - Paint/Color Reference Guide





Section D. Items Not Listed

D.1. General

Miscellaneous objects not listed in this guide or elsewhere shall be painted:

- White (17875), if attached or immediately adjacent to some part of the superstructure that is painted white **or** if the objects pose a stumbling hazard, particularly at night.
- Spar (10371), if the objects are attached or immediately adjacent to masts, spars, and other objects which are colored spar.

Appendix B - Paint/Color Reference Guide





Section E. List of Items

E.1. General The following is a list of items and the correct color.

| ITEM | COLOR/NUMBER | SOURCE/NSN | REFERENCE |
|-------------------|---------------------------------|------------------|-------------------------------|
| Anchors | Galvanized | | Coatings and Color Manual |
| Battle Lanterns | Factory/ Yellow/13538 | 8010-01-349-9005 | Coatings and Color Manual |
| Boat Hooks | As per Appendix B, Section C | | Coatings and Color Manual |
| Brightwork (wood) | Varnish | | Coatings and Color Manual |
| Cabin Door | | | |
| Exterior | White/17875 | 8010-01-333-9449 | Paint Sched. 41UT-1901-1 |
| Interior | Brown/20117 | 8010-01-382-1896 | Paint Sched. 41UT-1901-1 |
| Cabin Exterior | White Gel Coat | | Paint Sched. 41UT-1901-1 |
| Cabin Top | Blue-Gray/16099 | 8010-01-360-9307 | Paint Sched. 41UT-1901-1 |
| Console Top | Dull Black/37038 | 8010-01-356-2938 | Paint Sched. 41UT-1901-1 |
| Console Sides | Brown/20117 | 8010-01-382-1892 | Paint Sched. 41UT-1901-1 |
| Deck Plates | | | |
| Тор | Aluminum Polish | 8010-00-410-8452 | Coatings and Color Manual |
| Bottom | Epoxy Primer/#FM156 | | Coatings and Color Manual |
| Decks (Exterior) | Blue-Gray/16099 | 8010-01-360-9307 | Coatings and Color Manual |
| Defroster Vents | Dull Black/37038 | 8010-01-356-2938 | Paint Schedule 41UT-1901-1 |



| ITEM | COLOR/NUMBER | SOURCE/NSN | REFERENCE |
|-------------------------------------|----------------------------------|---|-------------------------------|
| Drop Pump Can | Intl. Orange/12197 | 8010-01-333-9811 | Coating and Color Manual |
| Drop Pump Can Bracket | White/17875 | 8010-01-333-9449 | Coating and Color Manual |
| Electrical Panels | | | |
| Outside | Blue/15123 | 8010-01-333-9821 | Coatings and Color Manual |
| Inside | Intl. Orange/12197 | 8010-01-333-9449 | Coatings and Color Manual |
| Emergency Steering Tiller | Galvanized (hot or cold) | | Print 41UT-2202-2 |
| Engines | Cummins Gray 3823304 B-Series | Seymour of Sycamore, Inc. (ph 1-800-435-4482) | Paint Schedule 41UT-1901-1 |
| Ensign Mast (Flagstaff) | Spar/10371 | 8010-01-360-9307 | Coating and Color Manual |
| Escape Hatch | Factory | - | BoatAlt 49 |
| Exterior Bullnose/ Forward Chock | Spar/10371 | 8010-01-360-9307 | Coatings and Color Manual |
| Fire Extinguishers | Factory Red/11105 | 8010-01-333-9813 | Coatings and Color Manual |
| Fire Extinguisher Brackets | Factory Red/11105 | 8010-01-333-9813 | Coatings and Color Manual |
| Fire System (General) | Red/11105 | 8010-01-333-9813 | Coatings and Color Manual |
| First Aid Kit | Green/14260 | 8010-00-530-5563 | Coatings and Color Manual |
| Freshwater Fill/Vent | No Coating | | Coatings and Color Manual |
| Fuel Fill Caps | Yellow/13538 | 8010-01-333-9450 | Coatings and Color Manual |
| Fuel Fill Pipes | White/17875 | 8010-01-333-9449 | Coatings and Color Manual |
| Fuel Hoses (armored) | No Coating | | |
| Goosenecks | Spar/10371 | 8010-01-360-9307 | Coatings and Color |



| ITEM | COLOR/NUMBER | SOURCE/NSN | REFERENCE | |
|----------------------------------|----------------------------|------------------|--------------------------------|--|
| | | | Manual | |
| Gauges (danger zones) | Red/11105 | 8010-01-333-9813 | Naval Eng. Manual | |
| Halon Alarm | Red/11105 | 8010-01-333-9813 | Coatings and Color Manual | |
| Handrails/ Aluminum Exterior | Spar/10371 | 8010-01-360-9307 | Coatings and Color Manual | |
| Hull | White/17875 | 8010-01-333-9449 | Coatings and Color Manual | |
| Head Door | Factory or Yellow/23594 | 8010-01-333-7761 | Coatings and Color Manual | |
| Life Raft Shelf | White/17875 | 8010-01-333-9449 | Coatings and Color Manual | |
| Life Ring | Intl. Orange (Factory) | | Rescue/Survival Sys. Manual | |
| Life Ring Light | Intl. Orange(Factory) | | Rescue/Survival Sys. Manual | |
| Mast | Spar/10371 | 8010-01-360-9307 | Rescue/Survival Sys. Manual | |
| Mast Support Bracket | White/17875 | 8010-01-333-9449 | Coatings and Color Manual | |
| Name Plates | No Coating | | Coatings and Color Manual | |
| Nav. Light Screens (interior of) | Dull Black/37038 | 8010-01-356-2938 | Coatings and Color Manual | |
| Passenger Compt. Interior | Yellow/23594 | 8010-01-333-7761 | Paint Schedule, 41UT-1901-1 | |
| Pilothouse Interior | Yellow/23594 | 8010-01-333-7761 | Paint Schedule, 41UT-1901-1 | |
| Radar Tripod | Spar/10371 | 8010-01-360-9307 | Coatings and Color Manual | |
| Rudder Stops | White/17875 | 8010-01-333-9449 | Coatings and Color Manual | |
| Shore Tie Receptacle | Blue/15123 | 8010-01-333-9821 | Coatings and Color Manual | |
| Seats/Fwd Cabin | Factory/ | 8010-01-382-1896 | Coatings and Color | |



| ITEM | COLOR/NUMBER | SOURCE/NSN | REFERENCE |
|-------------------------------|--------------------------|------------------|------------------------------|
| Benches | Brown/20117 | | Manual |
| Spotlights/Floodlight | Factory/ White/17875 | 8010-01-333-9449 | Coatings and Color Manual |
| Stanchions | Spar/10371 | 8010-01-360-9307 | Coatings and Color Manual |
| Steps (Mahogany) | Spar Varnish TT-V-119 | 8010-00-597-7856 | Coatings and Color Manual |
| Deck Storage Box Lids | Blue-Gray/16099 | 8010-01-360-8068 | Coatings and Color Manual |
| Steering Wheel | No Coating | | Coatings and Color Manual |
| Stripe | Red/12199 | 8010-01-360-9305 | Coatings and Color Manual |
| Stripe | Blue/15182 | 8010-01-360-9304 | Coatings and Color Manual |
| Taff Rail | No Coating | | Coatings and Color Manual |
| Tiller (Main Arms/Tie Bar) | No Coating | | Coatings and Color Manual |
| Tow Bitt (Fwd & Aft) | No Coating | | NAVSHIPS Tech. Manual |
| Tow Reel | White/17875 | 8010-01-333-9449 | Coatings and Color Manual |
| Underwater Body | Black | | Current Directives |
| Vents (Eng Rm exhaust) | White/17875 | 8010-01-333-9449 | Coatings and Color Manual |
| Vents (Eng Rm intake) | Spar/10371 | 8010-01-360-9307 | Coatings and Color Manual |
| Wiring (Electric Cables) | No Coating | | NAVSHIPS Tech. Manual |
| Tri-gate | Red/11105 | 8010-01-333-9813 | Coatings and Color Manual |



Appendix C 41' UTB Boat Alterations (BoatAlts)

Overview

Introduction

This appendix contains a list of authorized BoatAlts for the 41'UTB.

NOTE &

For a complete breakdown of the BoatAlt Number, see the Naval Engineering Manual, Chapter 041, COMDTINST M9000.6 (series).





| BOATALT NUMBER | DESCRIPTION | DATE |
|-------------------|---|-----------|
| (A)A-01 | Miscellaneous Alterations and Improvements | 16 Sep 74 |
| (A)B-02 | Relocation of M-60 Gun Mounts | 16 Dec 74 |
| (A)A-03 | Performance Improvement of Engine Jacket Water Heaters | 16 Dec 74 |
| (A)C-04 | Cummins V-903-N Conversion to Middle Sump Oil Pan | 17 Dec 74 |
| (A)B-05 | Battery Charger Safety Precautions | 10 Mar 75 |
| (A)B-06 | Standardization of Electronic Gear | 04 Apr 75 |
| | Amend 01 Removal of AN/SRC-42(V) | 06 Oct 77 |
| (A)B-07 | Bow Chock Reinforcement, Engine Hatch Holding Cam Installation | 15 Apr 75 |
| (A)A-08 | Standardization of Propeller Sizes and Alloys | 10 Jun 75 |
| | Amend 01 Standardization of Propeller Sizes and Alloys | 25 Nov 75 |
| (A)A-09 | Steering Cable Maintenance and Inspection | 30 Jun 75 |
| | Amend 01 Steering Cable Maintenance Amendment | 24 Apr 92 |
| (A)A-10 | Conversion to 2" Diameter Propeller Shafts | 26 Aug 75 |
| | Amend 01 Conversion to 2" Diameter Propeller Shafts | 22 Oct 75 |
| | Amend 02 Conversion to 2" Diameter Propeller Shafts | 01 Dec 75 |
| (A)A-11 | Side Window Rain Guard and Coaming Installation | 15 Aug 75 |
| (A)A-12 | Twin-Disc Lube Oil Suction Hose, Internal Support | Aug 75 |
| (A)B-13 | Main Engine Lube Oil Dipstick Marking | 04 Nov 75 |
| (A)B-14 | Main Engine Lube Oil Pressure Switch Hose Installation | 20 Jan 76 |
| (A)B-15 | Installation of Adjustable Alignment Assembly and Drive Belt Guard for Engine Driven Fire Pump | 23 Jun 76 |
| | Amend 01 Installation of Adjustable Alignment Assembly and Drive Belt Guard for Engine Driven Fire Pump | 17 Feb 76 |
| (A)X-16 | Improved Propeller Struts | 27 Jan 76 |
| | Amend 01 Improved Propeller Struts | 30 Dec 76 |
| (A)B-17 | Main Engine Salt Water Piping Modification | 30 Jan 76 |



| BOATALT NUMBER | DESCRIPTION | DATE |
|-------------------|---|-----------|
| (A)A-18 | Mast Modification and Towing Light Relocation | 05 May 76 |
| , , | Amend 01 Mast Modification and Towing Light Relocation | 26 Aug 76 |
| | Amend 02 Mast Modification and Towing Light Relocation | Undated |
| (A)B-19 | Main Engine Salt Water Piping Modification | 26 May 76 |
| (A)X-20 | Installation of Homer | 08 Nov 76 |
| (A)X-21 | Searchlight Change From 10" Incandescent to 7" Sealed Beam | Jun 77 |
| (A)C-22 | Installation of Trainable Loudhailer Speaker Foundation | 02 Aug 77 |
| (A)X-23 | Replacement of Vibration Dampner Starboard Engine | 06 Oct 77 |
| (A)B-24 | Removal Low Lube Oil Pressure Switch (Kim Hot Start) | 20 Sep77 |
| (A)X-25 | Authorization for Replacement of Console Engine Gauges | 09 Sep77 |
| | Amend 01 Authorization for Replacement of Console Engine Gauges | 28 Mar 79 |
| (A)A-26 | Replacement of Engine Jacket Water Thermo Bulb Adapter | 20 Sep77 |
| | Amend 01 Replacement of Engine Jacket Water Thermo Bulb Adapter | 25 Jan 78 |
| (A)X-27 | 41' UTB Chart Table and Light in Forward Cabin | 14 Oct 77 |
| (A)A-28 | Installation of Stern Tow Lights | 16 Dec 77 |
| (A)A-29 | Installation of Updated VHF-FM Homer | 10 Jan 78 |
| (A)C-30 | Standardization of Electrical Wiring | 30 Jan 78 |
| (A)B-31 | AN/SQN-13/X Echo Sounding Set Replacement | 07 Apr 78 |
| (A)X-32 | Single Leg Strut Assembly | 06 Nov 78 |
| | Amend 01 Single Leg Strut Assembly | Undated |
| (A)A-33 | Repair to Turnbull Enterprises Helmsman's Chair | 28 Mar 79 |
| (A)X-34 | Optional Installation of Triton VHF-FM Transceiver | 06 Jun 78 |
| (A)B-35 | Safety Hand Rails and Grab Rails | 28 Nov 79 |
| (A)X-36 | Replacement of Helmsman Chair | 30 Mar 79 |
| (A)C-37 | Replacement of AN/SPS-57(X) Radar with AN/SPS-66 Radar | 09 Mar 79 |
| | Amend 01 AN/SPS-57(X) Radar Replacement Amendment | 20 Aug 79 |



| BOATALT NUMBER | DESCRIPTION | DATE |
|-------------------|--|-----------|
| (A)C-38 | Horn Relocation | 22 Jan 79 |
| | Amend 01 Horn Relocation | 03 Feb 82 |
| (A)C-39 | Alignment Marks on PTO Drive Adapter | 06 Jun 79 |
| (A)B-40 | Modification/Isolation Transformer Foundation | 01 Nov 79 |
| (A)B-41 | Forward Engine Mounts, Cummins Engine V/VT-903M | 29 Nov 79 |
| (A)B-42 | Emergency Lighting for Pilothouse and Cabin Area | 10 Dec 79 |
| | Amend 01 Emergency Lighting for Pilothouse and Cabin Area | 12 Mar 80 |
| (A)X-43 | Installation of CEAN-GLH-100 Loudhailer | 01 Apr 80 |
| (A)X-44 | Access Plate for Bilge Inspection in Cabin | 01 Apr 80 |
| (A)X-45 | Structural Reinforcement | 07 Jul 81 |
| (A)B-46 | Modification of Existing Mast | 10 Sep 81 |
| | Amend 01 Modification of Existing Mast | 27 Aug 82 |
| (A)B-47 | Reduced Mast Height (New) | 10 Sep81 |
| | Amend 01 Reduced Mast Height (New) | 27 Aug 82 |
| (A)C-48 | Loran-C Receiver/Remote Display Installation | 29 Sep 81 |
| | Amend 01 Loran-C Receiver/Remote Display Installation | 22 Dec 81 |
| (A)B-49 | Incorporation of Additional Safety Features | 25 Mar 82 |
| (A)C-50 | Installation of Mast Support Rails and Engine Room Vents | 16 Jun 82 |
| | Amend 01 Installation of Mast Support Rails and Engine Room Vents | 04 Feb 83 |
| (A)B-51 | Installation of Rotary Switch for Navigational Lights | 27 Aug 82 |
| (A)B-52 | Rewiring of Rotary Switch for Navigational Lights | 27 Aug 82 |
| (A)C-53 | Stowage of Anchor, Fire Monitor and Monitor Stanchion in Forepeak | 10 Feb 83 |
| (A)B-54 | Move Fire Pump Gauge | 24 Mar 83 |
| (A)C-55 | Replacement of Bilge Alarm Float Switches | 17 Mar 83 |
| (A)C-56 | Installation of Halon 1301 Fire Extinguishing System | 28 Mar 83 |
| | Amend 01 Installation of Halon 1301 Fire Extinguishing System | 08 May 85 |



| BOATALT NUMBER | DESCRIPTION | DATE |
|-------------------|--|-----------|
| (A)B-57 | Conversion to VT-903M Engines | 03 Jan 84 |
| | Amend 01 Conversion to VT-903M Engines | 11 Jun 84 |
| | Amend 02 Conversion to VT-903M Engines | 28 Mar 85 |
| (A)B-58 | Inline Fuel Sight Glass | 31 Jan 84 |
| | Amend 01 Inline Fuel Sight Glass | 30 Apr 84 |
| (A)B-59 | Removal of 12V DC Power Panel | 15 Feb 84 |
| (A)B-60 | Windshield Wiper Switch Relocation | 15 Feb 84 |
| (A)B-61 | Installation of 24V Docking Lights | 17 Feb 84 |
| (A)B-62 | Engine Alarm Modification | 23 Feb 84 |
| (A)B-63 | Lighting Modification | 01 Mar 84 |
| | Amend 01 Lighting Modification | 16 May 84 |
| | Amend 02 Lighting Modification | 11 Jun 84 |
| (A)X-64 | Secure Gun Rack | 28 Mar 84 |
| | Amend 01 Secure Gun Rack | 09 Jan 85 |
| (A)B-65 | Jacket Water Pump Bolt Replacement | 21 May 84 |
| (A)B-66 | Voltage Regulator Replacement | 11 Jun 84 |
| (A)B-67 | Navigator's Seat Hole Cover | 20 Jun 84 |
| (A)A-68 | Life Raft Stowage Shelf Spacer Shims | 20 Aug 84 |
| (A)A-69 | CRP-750 Loran-C Receiver Installation | 30 Aug 84 |
| (A)X-70 | Heating System Booster Pumps | 14 Dec 84 |
| (A)X-71 | 24 V DC Windshield Washer Pump Installation | 29 Apr 85 |
| | Amend 01 24 V DC Windshield Washer Pump Installation | 19 Sep 86 |
| (A)A-72 | Life Raft Inflation Cylinder Replacement | 07 May 85 |
| (A)B-73 | Rubber Rubrail Installation | 30 Sep 86 |
| | Amend 01 Rubber Rubrail Installation | 29 Nov 91 |
| (A)A-74 | Cabin Aft Window Replacement | 29 Dec 86 |
| (A)B-75 | Defroster Booster Blower | 03 Feb 87 |
| (A)A-76 | Shore Tie Connector Replacement | 10 Mar 87 |
| | Amend 1 Shore Tie Connector Replacement | 16 Feb 94 |
| | Amend 2 Shore Tie Connector Replacement | 29 Aug 94 |



| BOATALT NUMBER | DESCRIPTION | DATE |
|-------------------|--|-----------|
| (A)A-77 | MCX-1000 DES Radio Installation | 10 Apr 89 |
| | Amend 01 MCX-1000 DES Radio Installation Amendment | 10 Sep 91 |
| (A)A-78 | Navigation Light Standardization. Addition of Second Towing Light. | 27 Feb 90 |
| (A)A-79 | Depth Sounder Replacement | 15 Jun 90 |
| (A)A-80 | Visual Identification Modification | 02 May 91 |
| (A)B-81 | Engine Mount Modification | 10 Sep 91 |
| (A)B-82 | Cabin Air Vent Removal | 04 Oct 91 |
| (A)A-83 | Forward Cabin Deck Hatch Modification | 07 Oct 91 |
| (A)C-84 | Engine Chock Replacement | 09 Mar 92 |
| (A)A-85 | Surface Search Radar Replacement | 09 Mar 92 |
| (A)C-86 | AC Power Distribution Panels | 23 Mar 92 |
| (A)B-87 | Fuel Oil System Replacement | 03 Feb 93 |
| (A)B-88 | Navigation Lights And Mast Standardization | 09 Jun 93 |
| | Amend 1 Navigation Lights And Mast Standardization | 29 Jul 93 |
| (A)B-89 | Depth Sounder Replacement | 27 Jan 94 |
| (A)A-90 | VHF-FM Direction Finder Replacement | 20 Mar 95 |
| (A)C-91 | 41' UTB Well Deck Standardization | 21 Mar 95 |
| (A)C-92 | Removable Battery Trays | 19 Oct 95 |
| (A)A-93 | Spin-On Lube Oil Filter | 21 Mar 95 |
| (A)A-94 | MX-200 GPS Receiver Installation | 22 Sep 95 |
| | Amend 01 41'DGPS Installation | 16 Apr 98 |
| (A)A-95 | Electronic Suite Upgrade, All 41' UTB's | 28 Dec 95 |
| (A)A-96 | Coxswain Chair Gussets | 01 Apr 96 |
| (A)B-97 | 41' UTB Electronic Tachometers | 16 May 96 |
| 4.00 | Amend 01 41' UTB Electronic Tachometers | Undated |
| (A)B-98 | Trim Tab Standardization | 05 Jun 96 |
| | Amend 01 Trim Tab Standardization | Undated |
| B-99 | Engine Air Separator Installation | 01 Jul 97 |
| B-100 | Bilge Alarm Upgrade | 19 Aug 98 |

Appendix C – Boat Alterations





Appendix D 41' UTB Material Inspection Checklist

Overview

Introduction

- 1. This appendix is meant to be a systematic means to inspect **any** 41' UTB and ensure the entire boat is prepared to meet mission demands. This enclosure should be used in conjunction with Appendix A and B.
- 2. This checklist may be locally reproduced.

In this appendix

| No. | Area | See Page |
|------|------------------------------------|----------|
| I | Hull | D-4 |
| II | Foredeck | D-4 |
| III | Forepeak Compartment | D-5 |
| IV | Pilothouse Top | D-6 |
| V | Passenger Compartment | D-6 |
| VI | Bench Seats and Compartments | D-8 |
| VII | Head | D-8 |
| VIII | Passenger Compartment Storage Area | D-9 |
| IX | Pilothouse | D-11 |
| X | Main Deck | D-13 |
| XI | Port Main Engine | D-15 |
| XII | Starboard Main Engine | D-16 |
| XIII | Main Engine Accessories | D-17 |
| XIV | Well Deck | D-18 |
| XV | Deck Storage Boxes | D-19 |
| XVI | Lazarette | D-20 |





41' UTB MATERIAL INSPECTION CHECKLIST

| Al' UTB Operator's Handbook, COMDTINST M16114.2 (series) Naval Engineering Manual, COMDTINST M9000.6 (series) Color and Coatings Manual, COMDTINST M10360.3 (series) Rescue and Survival Manual, COMDTINST M10470.10 (series) UTB Boat Outfit and System Support Book, SICPINST M4441.84 (series) Standards The following standards apply to the boat's hull, superstructure, machinery, equipment, outfit, and all installed systems and accessories: Smooth and correct operation. Free of grease, oil, rust, and corrosion. All fluid levels and pressure readings are within tolerance. Protective coatings applied correctly and neatly. Free of rips, tears, abrasions, and cracks. Labels, test dates, and placards properly placed. Outfit and equipment correctly installed, adjusted and maintained. Outfit and equipment stowed according to specifications and stowage plan. No non-standard or unapproved installations or equipment. Guidelines A thorough inspection requires a minimum of two personnel, preferably a Boatswains Mate and a Machinery Technician, each with extensive experience with the 41' UTB and a strong working knowledge of all listed references. Each item on the checklist should be measured against the applicable Inspection Standards and the governing references. Items or discrepancies not listed should be added to the appropriate section. | BOAT # | UNIT | Date | |
|---|---------------|--|---|------------------|
| Smooth and correct operation. Free of grease, oil, rust, and corrosion. All fluid levels and pressure readings are within tolerance. Protective coatings applied correctly and neatly. Free of rips, tears, abrasions, and cracks. Labels, test dates, and placards properly placed. Outfit and equipment correctly installed, adjusted and maintained. Outfit and equipment stowed according to specifications and stowage plan. No non-standard or unapproved installations or equipment. Guidelines A thorough inspection requires a minimum of two personnel, preferably a Boatswains Mate and a Machinery Technician, each with extensive experience with the 41' UTB and a strong working knowledge of all listed references. Each item on the checklist should be measured against the applicable Inspection Standards and the governing references. Items or discrepancies not listed should be added to the appropriate section. | References | Naval Engineering Man Color and Coatings Man Rescue and Survival Man UTB Boat Outfit and | nual, COMDTINST M9000.6 (series) nual, COMDTINST M10360.3 (series) anual, COMDTINST M10470.10 (series) | 84 |
| Boatswains Mate and a Machinery Technician, each with extensive experience with the 41' UTB and a strong working knowledge of all listed references. Each item on the checklist should be measured against the applicable Inspection Standards and the governing references. Items or discrepancies not listed should be added to the appropriate section. | Standards | Smooth and correct open Free of grease, oil, rust, All fluid levels and pres Protective coatings appl Free of rips, tears, abras Labels, test dates, and pl Outfit and equipment co Outfit and equipment steplan. | ration. and corrosion. sure readings are within tolerance. ied correctly and neatly. ions, and cracks. lacards properly placed. orrectly installed, adjusted and maintained. owed according to specifications and stowage | |
| Inspected By: | Guidelines | Boatswains Mate and a experience with the 41' UT references. Each item on applicable Inspection Standard | Machinery Technician, each with extension B and a strong working knowledge of all listed the checklist should be measured against the dards and the governing references. Items | ve ted the |
| | Inspected By: | | | |



I. Hull

| | Sat. | Unsat. | Remarks |
|------------------------------|------|--------|---------|
| Hull | | | |
| Waterline | | | |
| Lettering, numbering, decals | | | |
| Docking lights | | | |
| Rubrails | | | |

| REMARKS: | | | |
|-----------------|------|--|------|
| | | | |
| | | | |
| | | | |

II. Foredeck

| | Sat. | Unsat. | Remarks |
|---------------------------------|------|--------|---------|
| Bullnose | | | |
| Forward bitt | | | |
| Escape hatch | | | |
| Anchor line plug | | | |
| Cabin fore deck | | | |
| Cabin top | | | |
| Cabin sides | | | |
| Anchor (22 lb./25 lb.) & mounts | | | |

| KEWIAKKS: | | |
|-----------|------|------|
| | | |
| | | |
| | | |
| | | |
| | | |



III. Forepeak Compartment

| | Sat. | Unsat. | Remarks |
|---|------|--------|---------|
| Deck hatch | | | |
| Bulkhead | | | |
| Overhead | | | |
| Deck plates | | | |
| Bilge | | | |
| Wiring | | | |
| Docking lights | | | |
| Light | | | |
| Electrical junction boxes | | | |
| Stand-off wire clamps | | | |
| Anchor (22 lb./25 lb.), galvanized | | | |
| Anchor line securing staple | | | |
| D-ring shackle, ⁷ /8" galvanized | | | |
| Shackle, screw pin, ½" galvanized | | | |
| Anchor leader chain, galvanized | | | |
| Swivel, ½" galvanized | | | |
| Anchor line, 2 3/4" DBN, 300 feet | | | |
| Wire rope thimble, 5/8" galvanized | | | |
| Portable fire monitor | | | |
| Monitor mounting stanchion | | | |

| REMARKS: | | |
|----------|--|------|
| | | |
| | | |



IV. Pilothouse Top

| | Sat. | Unsat. | Remarks |
|--------------------|------|--------|---------|
| Safety handrails | | | |
| Radar antenna | | | |
| Radar pedestal | | | |
| Horn | | | |
| Loudhailer speaker | | | |
| Searchlight aft | | | |
| Stuffing tubes | | | |

| REMARKS: | | · · · · · · · · · · · · · · · · · · · | |
|----------|------|---------------------------------------|------|
| | | | |
| | | | |
| | | | |

V. Passenger Compartment

| | Sat. | Unsat. | Remarks |
|-------------------------------|------|--------|---------|
| Deck covering | | | |
| Lower cabin bilge hatch | | | |
| Bilge/ensolite | | | |
| Frames/longitudinals | | | |
| Cabin overhead | | | |
| Cabin bulkheads | | | |
| Lighting | | | |
| Wiring | | | |
| Standoff wire clamps | | | |
| Stokes litter (tending lines) | | | |



V. Passenger Compartment (continued)

| | Sat. | Unsat. | Remarks |
|---|------|--------|--|
| Gun locker | | | |
| MK13 (12 each) | | | |
| MK79 (02 each) | | | |
| Personal signal kits (05 each) | | | |
| First aid kit, 10 man | | | 1 100 |
| 5 lb. CO ₂ Fire extinguisher | | | |
| Hand-held searchlight/bracket | | | |
| Ladder | | | - A. |
| Forward compartment handrails | | | |
| Defroster booster blower | | | |
| Under sink stowage | | | |
| Reed mouth horn | | | |
| Portable air horn | | | |
| Ear protection (02 each) | | | |
| Sink O/B discharge valve | | | |
| Sink and faucet | | | |
| Hot cups | | | |
| Paper towel dispenser | | | |
| 24-Hour Clock | | | |

| REMARKS: | | | | |
|----------|------|------|------|--|
| | | | | |
| | | | | |
| | | | | |



VI. Bench Seats and Compartments

| | Sat. | Unsat. | Remarks |
|-------------------------------------|------|--------|---------|
| Port cushion/storage | | | |
| Grapnel hook, 4 lb. w/100'2" DBN | | | |
| Wool blankets (04) covered | | | |
| Pillows (02) covered | | | |
| Swim fins (01 pair) | | | |
| Swim mask (01 each) | | | |
| Swimmer's harness w/70' line | | | |
| Helmets, goggles & gloves (03 sets) | | | |
| Heater, hoses, & fittings | | | |
| Misc. engineering spare parts | | | |
| Starboard cushion/storage | | | |
| CG Type I PFD | | | |
| Adult (04 each) | | | |
| Child (02 each) | | | |

| REMARKS:_ | | · | | ···· | |
|-----------|------|---|------|----------|--|
| | | | | | |
| | | | | | |

VII. Head

| | Sat. | Unsat. | Remarks |
|------------------------|------|--------|---------|
| Head door w/kick panel | | | |
| Head deck/covering | | | |
| Head bulkhead | | | |



VII. Head (continued)

| | Sat. | Unsat. | Remarks |
|-----------------|------|--------|---------|
| Chemical toilet | | | |
| Escape hatch | | | |
| Handrail | | | |
| Head light | | | |

| REMARKS: | | |
|----------|------|--|
| | | |
| | | |
| | | |

VIII. Passenger Compartment Storage Area

| and the second s | Sat. | Unsat. | Remarks |
|--|------|--------|---------|
| Deck matting | | | |
| Bilge pump/valve/check valve | | | |
| Fenders, 8" x 30" (04 each) (white) | | | |
| Tool box | | | |
| Alongside lines | | | |
| 2 3/4" x 30', DBN (02 each) | | | |
| 2 3/4" x 60', DBN (02 each) | | | |
| Oil can | | | |
| Damage control kit | | | |
| Vari-nozzle, 95 GPM | | | |
| Eductor | | | |
| Fire hoses | | | |
| 2 ½" x 12' w/ends | | | |



VIII. Passenger Compartment Storage Area (continued)

| | Sat. | Unsat. | Remarks |
|------------------------------|------|--------|---------|
| 2 ½" x 30' | | | |
| 1 ½" x 50' | · | | |
| 1 ½" x 25' | | | |
| Safety ground wand | | | |
| Inport heater, 110 VAC | | | |
| Electronic power supplies | | | |
| Garbage receptacle | | | |
| 10 lb. PKP fire extinguisher | | | |
| Battle lantern | | | |
| Steering cable | | | |
| Engine room viewing window | | | |
| Stuffing tubes | | | |
| Wiring and cables | | | 200 |
| Halon bottle/hose/bracket | | | |
| Halon instruction placard | | | |
| Water tank/mount/fittings | | | |

| REMARKS: | | | |
|---|------|------|---------------|
| | | | |
| *************************************** | **** | | ********* |
| | | | |



IX. Pilothouse

| | Sat. | Unsat. | Remarks |
|--------------------------------|------|--------|---------|
| Deck and covering | | | |
| Side windows and frames | | | |
| Rear window and frame | | | |
| Forward windows and frames | | | |
| Weather-tight door | | | |
| Grounding straps | i | | |
| Port bulkhead | | | |
| Port handrail | | | |
| Bell and mount | | | |
| 120V AC power panels | | | |
| 24V DC power panel | | | |
| 12V DC power panel | | | |
| Bilge/fire alarm panel | | | |
| Amp and volt meters | | | |
| Starboard bulkhead | | | |
| Starboard handrail | | | |
| Battle lantern | | | |
| Aft Bulkhead | | | |
| Firemain gauge and tubing | | | |
| Coxswain's console | | | |
| Defroster ducts/hoses/fitting | | | |
| Magnetic compass and red light | | | |
| Deviation table (posted) | | | |



IX. Pilothouse (continued)

| | Sat. | Unsat. | Remarks |
|-----------------------------|------|--------|---------|
| Electronics console | | | |
| Raytheon AN/SPS-69 radar | | | |
| MX-200 GPS/DGPS | | | |
| KDF-538 ADF | | | |
| Raytheon RAY-430 loudhailer | | | |
| Motorola DES radio | | | |
| Binocular storage | | | |
| Chart light w/red bulb | | | |
| ST-50 fathometer | | | |
| Windshield wipers | | | |
| Navigator's chair | | | |
| Coxswain's chair | | | |
| Speakers | | | |
| VHF-FM working | | | |
| VHF-FM guard | | | |
| ADF | | | |
| Engine gauge panel | | | |
| Alarm cutout switches | | | |
| Booster blower switch | | | |
| Halon test button | | | |
| Light switches | | | |
| Dimmer switches | | | |
| Windshield wiper switches | | | |
| Steering wheel | | | |
| Engine throttles | | | |



IX. Pilothouse (continued)

| | Sat. | Unsat. | Remarks |
|--------------------------------|------|--------|---------|
| Engine stops | | | |
| Fuel stop placard | | | |
| Electric horn | | | |
| Starter buttons and shield | | | |
| Starting and securing placard | | | |
| Halon warning placard | | | |
| Fire pump warning placard | | | |
| Boat plate | | | |
| Overhead | | | |
| Trainable loudhailer | | | |
| Trainable searchlight | | | |
| Wiring | | | |
| Stuffing tubes | | | |
| RPM/speed/fuel curves (posted) | | | |
| 10 lb. fire extinguisher | | | |

| REMARKS: | | |
|----------|--|------|
| | | |
| | | |
| | | |

X. Main Deck

| | Sat. | Unsat. | Remarks |
|----------------------|------|--------|---------|
| Deck/covering | | | |
| Gunwales | | | |
| Handrails/stanchions | | | |



X. Main Deck (continued)

| | Sat. | Unsat. | Remarks |
|--------------------------------|------|--------|---------|
| Aluminum safety chains | | | |
| M-60 gun mounts | | | |
| Cleats | | | |
| Boat hooks (02) with markings | | | |
| Engine room vents | | | |
| Fresh water tank fill/vent | | | |
| Shore tie receptacle | | | |
| 24" Ring buoy | | | |
| Polypropylene line, ½" 75 feet | | | |
| Float light w/battery date | | | |
| Life raft in canister | | | |
| Fire main station | | | |
| Mast | | | |
| Mast hardware | | | |
| ADF antenna | | | |
| MCX-1000 antenna | | | |
| GPS antenna | | | |
| DGPS antenna | | | |
| #5 Coast Guard Ensign | | | |
| Junction box/stuffing tubes | | | |
| After tow bitt | | | |

| REMARKS: | | | · | | | · |
|----------|------|---|---|------|------|---|
| | | | | | | |
| | | _ | | | | |
| | | | | | | |



XI. Port Main Engine

| | Sat. | Unsat. | Remarks |
|-----------------------------|------|--------|---------|
| Engine block | | | |
| Cylinder heads | | | |
| Fuel pump/governor | | | |
| Turbocharger | | | |
| Marine gear | | | |
| Jacket water cooling system | | | |
| Marine gear cooler | | | |
| Exhaust system/lagging | | | |
| Shaft and packing | | | |
| Starter | | | |
| Alternator | | | |
| Hot starts and wiring | | | |
| Throttle/shift/stop cables | | | |
| Wiring | | | |
| Engine mounts | | | |
| Lube oil system | | | |

| REMARKS: | | | |
|-----------------|------|------|------|
| | | | |
| | | | |
| | | | |



XII. Starboard Main Engine

| | Sat. | Unsat. | Remarks |
|-----------------------------|------|--------|---------|
| Engine block | | | |
| Cylinder heads | | | |
| Fuel pump/governor | | | |
| Turbocharger | | | |
| Marine gear | | | |
| Jacket water cooling system | | | |
| Raw water system | | | |
| Marine gear cooler | | | |
| Exhaust system/lagging | | | |
| Shaft and packing | | | |
| Starter | | | |
| Alternator | | | |
| Hot starts and wiring | | | |
| Throttle/shift/stop cables | | | |
| Wiring | | | |
| Engine mounts | | | |
| Lube oil system | | | |

| REMARKS: | | | | | ne | |
|----------|------|------|---|------|-------------|--|
| | | | | | | |
| | | | - | | | |
| | | | | | | |



XIII. Main Engine Accessories

| | Sat. | Unsat. | Remarks |
|------------------------------------|------|--------|---------|
| Hatches/scuttle | | | |
| Ladder | | | |
| Bulkheads | | | |
| Insulation | | | |
| Lighting | | | |
| Overhead | | | |
| Deck plating | | | |
| Bilges | | | |
| 12V batteries w/terminal cover | | | |
| Ventilation ducts | | | |
| Sea chest and valves | | | |
| Sea strainers and piping | | | |
| Fire pump strainer | | | |
| Fire pump | | | |
| PTO angle bracket (starboard only) | | | |
| Fuel oil strainer / valves / hoses | | | |
| Bilge pump / hose / check valve | | | |
| Electrical system | | | |
| Bilge alarm | | | |
| Transducer | | | |
| 120V AC isolation transformer | | | |
| Oil pollution placard | | | |
| Halon warning placard | | | |

| REMARKS: | | |
|----------|------|------|
| | | |



XIV. Well Deck

| | Sat. | Unsat. | Remarks |
|------------------------------------|------|--------|---------|
| Deck/covering | | ` ` | |
| Gunwales | | | |
| Scuppers | | | |
| Taff rail | | | |
| Flag post & securing pin | | | |
| #11 National ensign | | | |
| Fuel fills | | | |
| Fuel vents | | | |
| Tow reel and cover | | | |
| Towline, 2 ¾" DBN, 600 feet | | | |
| Portable pump w/seal & retro. | | | |
| Pump bracket | | | |
| Gas can, 5 gallon red | | | |
| Gas label "GASOLINE- FLAMMABLE" | | | |
| Gas can bracket | | | |
| Fuel sounding rods | | | |
| Steering cable & hardware | | | |
| Rudder posts and stops | | | |

| REMARKS: | | |
|----------|--|------|
| | | |
| | | |
| | | |



XV. Deck Storage Boxes

| | Sat. | Unsat. | Remarks |
|--------------------------------|------|--------|---------|
| Port step box | | | |
| Heaving lines (02) | | | |
| Rescue heaving line | | | |
| Skiff hook | | | |
| Shackles (04 assorted sizes) | | | |
| Starboard step box | | | |
| Chafing gear | | | |
| Lead line | | | |
| Shackle, 3/4" galvanized | | | |
| T-handles (02 different sizes) | | | |

| REMARKS: | | | | | |
|----------|------|------|----------|-----|------|
| | | | | | |
| | | | | *** | |
| | | | **** | | |

XVI. Lazarette

| | Sat. | Unsat. | Remarks |
|--------------------------------|------|--------|---------|
| Well deck scuttle | | | |
| Bilge | | | |
| Bulkheads | | | |
| Overhead | | | |
| Exhaust pipes | | | |
| Mufflers/clamps | | | |
| Fuel tank access covers/gasket | | | |



XVI. Lazarette (continued)

| | Sat. | Unsat. | Remarks |
|------------------|------|--------|---------|
| Emergency tiller | | | |
| | | | |
| REMARKS: | | | |



Appendix E 41' UTB Disabling Casualties

Overview

Introduction

This appendix contains disabling casualties for the 41' UTB. Refer to Section 5.A. for steps to follow if any of these casualties occur.

In this appendix

| Title | See Page |
|-------------------------------|----------|
| Engine parameters | E-3 |
| Engineering system components | E-3 |
| Electronic/ navigation | E-3 |
| Safety | E-4 |
| General material | E-4 |





Disabling Casualty List

Engine parameters

- Reduction gear pressure below 190 psi.
- Engine lube oil pressure below 30 psi.
- Engine jacket water temperature below 140 degrees or above 212 degrees.
- Engine speed less than 2400 RPM or greater than 2900 rpm.

Engineering system components

- Engine fails to start.
- Uncontrollable overheats.
- Metallic/non-metallic noise: metal on metal/fuel-knock/bearing/clicking.
- Excessive shaft or engine vibration.
- Engine surging/over speed (over 50 RPM).
- Loss of engine governor control.
- Reduction gear fails to engage (forward or reverse).
- Fuel oil dilution 5% or above.
- Water in engine lube oil (emulsified white milky oil).
- Lube oil in engine jacket water.
 - More then a light sheen.
 - Floating unmixed lube oil separated from the water.
- Alternator failure.
- Continuous electrical breaker trip.
- Starting batteries won't charge.
- Steering system inoperative.
- Engine motor mount hardware loose or missing.
- Excessive shaft packing leak:
 - Packing while rotating trickle or steady stream.
 - Packing while not rotating more than 15 drops per minute.

Electronic/ navigation

- No electronic means of signaling distress (i.e. no radio, EPIRB, etc.).
- Electronics won't energize.



Safety

- Any fuel or lube oil drop* falling on a hot surface (hot surface is defined as a surface greater than 400 degrees, even if covered by insulation).
- Electrical arching and sparking.
- Turbocharger lube oil supply line leaking on to hot surface or not fire rated/fire sleeved.
- Return fuel oil line leaking in the vicinity of the turbocharger where the turbo attaches to the saddle.
- Fixed (Halon) fire extinguishing system inoperative (pressure below 425 psi, disconnected, etc.), PLUS no portable fire extinguishers (unserviceable).
- Emergency alarms inoperative (fire, bilge, lube oil pressure, high water temp).
- * To determine if fuel oil or lube oil dripping is occurring, a clean sheet of paper may be placed under a suspected leak to collect and detect any drops that fall.

General material

- Hull breach below the waterline (except on the skeg = restrictive).
- Inoperative (closed) sea-chest valve.



Appendix F 41' UTB Restrictive and Major Discrepancies

Overview

Introduction

This appendix contains restrictive and major discrepancies for the 41' UTB. Refer to Chapter 5, Section A for steps to follow if any of these casualties occur.

In this appendix

| Title | See Page | | |
|---------------------------|----------|--|--|
| Restrictive Discrepancies | F-3 | | |
| Major Discrepancies | F-5 | | |





Restrictive Discrepancies

Engine parameters

- Engine speed less than 2575 RPM.
- Reduction gear pressure greater than 220 psi
- Water temp greater than 205 degrees.

Engineering system components

- Leaks greater than 15 drops a minute.
 - Antifreeze/ Jacket water
 - Raw water
 - Lube oil
 - Hydraulic oil
 - Reduction gear oil
 - Fuel tank access cover
- Fuel oil dripping* (falling onto a surface which is not hot) within ten (10) minutes.
- Bilge system valves/check valve installed incorrectly or missing.
- Bilge pump inoperative.
- Inoperative/inaccurate gauges
 - Engine pressure/temperature gauges.
- Any detectable exhaust leaks.
- Fuel shut off valves do not fully close.
- PTO locking device missing or allows engagement.
- Missing or loose shafting bolts.
- Fire pump fails to engage.
- * To determine if fuel oil dripping is occurring, a clean sheet of paper may be placed under a suspected leak to collect and detect any drops that fall.

Boat outfit

- Missing boat pyrotechnics.
- Missing personal pyrotechnics vest and or strobe light.
- Portable drop pump inoperative or missing.
- Tow line less than 100 feet of required length.
- Missing emergency tiller.
- Missing life raft.



Electronics/ navigation

- Compass deviation table missing/compass deviation greater than 5 degrees.
- VHF-FM radio inoperative.
- Depth finder inoperative.
- GPS inoperative.
- Radar inoperative.
- Navigation lights inoperative/incorrect configuration.

Safety

- Missile hazard/obstruction of egress route.
- Fire extinguisher not secured in bracket.
- Underweight Halon (with less then 425 psi or 42 lbs.)
- Any (2) portable fire extinguishers missing/unserviceable
- Boat Alt #68 Life raft spacer shims missing/incorrect.
- Improperly secured batteries.
- Head door has locking capabilities.
- Missing exhaust lagging or system blankets.
- Applied non-skid on main decks ineffective/missing. Any traffic/working area without non-skid for an 8.5" x 11" area (including area forward and aft of Cleat 4).
- Deck covering (carpet/matting) not properly attached to the deck.

General material

- Breach of watertight integrity.
- Failure of a watertight closure to seal. Any unrestricted access which would allow water intrusion into the boat.
- Cracks through a watertight scuttle/hatch.



Major Discrepancies

Engine parameters

- Jacket water temperature less than 165 degrees or greater than 195 degrees.
- Engine speed greater than 2700 RPM.

Engineering system components

- Loose/missing fittings, nuts, bolts, brackets, etc.
 - Raw water discharge bracket over exhaust flange.
 - Raw water support brackets forward of both engines missing.
 - Hardware on engines used for attaching equipment.
- Fire pump fails to operate at a minimum pressure of 80 psi.
- Fire main pressure gauge inoperative.
- Leaks less than 15 drops a minute.
 - Antifreeze/ jacket water
 - Raw water
 - Lube oil
 - Hydraulic oil
 - Reduction gear oil
- Fuel oil return hose routed over exhaust system.
- Fuel oil return check valve bracket missing.
- Engine fluid levels below minimum required.
- Boat Alt #1 Port engine lube oil filter location.
- Undersized engine mounting bolts and/or bolts constructed of inferior grade.

Boat outfit

- Type I PFDs (missing/unserviceable).
- Life ring and/or distress light (missing/unserviceable).

Electronics/ navigation

- Compass light inoperative.
- Expired deviation table.
- Searchlight inoperative.



Safety

- Sharp, jagged, or protruding edges of engine room bulkhead sheathing.
- Protruding exhaust lagging securing wire.
- Scuttle not flush with the deck causing a tripping hazard.
- DC kit saw missing sheath.
- Hatch and scuttle safety locks do not engage when item is in open position.
- Pilot house folding step worn, bent, or cracked.
- A power distribution panel missing breakers or blank covers.
- Engine guards inadequate or missing around moving machinery.
- Battery box covered or securing bracket loose.
- Mounting hardware too long.
- Boat Alt #56 Amend 1 Halon discharge pipe location.
- Boat Alt #35 Safety egress handrail missing.
- Boat Alt #42 Emergency lighting location or missing.
- Life raft overdue on 1 or 5 year inspection.
- Any (1) portable fire extinguisher missing/unserviceable
- Fire extinguisher unrecorded or improper PMS completion.
- Hydrostatic testing of fixed or portable cylinders not completed or recorded on equipment tag.
- Fire hoses past due for hydrostatic testing.
- Missing or loose coxswain chair mounting hardware.
- Mast support bracket missing or loose.
- Port-A-Potty not secured to the deck.
- Coxswain chair seat belt missing.

General material

- Holes in watertight structure.
 - Improperly filled holes.
 - Hardware bolted through a watertight hatch or scuttle.
- Boat Alt #40 Isolation transformer foundation not completed.
- Holes in structure, equipment, mounts causing weakening of item.
- Wire run between engine room and pilothouse not sealed.
- Bilge pump hoses missing hose clamps.



Appendix G 41' UTB Full Power Trial

Overview

Introduction

This appendix contains the full power trial requirements for the 41' UTB to ensure that the boat operates to prescribed standards.





41' UTB Full Power Trial Procedure

Conducting a full power trial

| Step | Procedure | | | | | |
|------|--|--|--|--|--|--|
| 1 | Prior to starting the engines, attach a reflective strip to the accessory drive pulley or vibration damper for use with a handheld strobe tachometer. | | | | | |
| 2 | After the engines are started, check the idle speed with the hand- held tachometer. Test all engine alarms from the engine room test panel (inoperative alarms are a disabling casualty). | | | | | |
| 3 | Get the boat underway for a ten (10) minute transit on a relatively straight course. Bring the engine up to full speed. | | | | | |
| 4 | After approximately eight (08) minutes, check engine speed in the engine room with the hand-held strobe tachometer. Normal engine speed range is 2575-2700 RPM. | | | | | |
| 5 | Check for the following abnormalities, which occasionally occur during the full power trial: Any fuel oil or lube oil dripping* on a hot surface is a disabling casualty (hot surface is defined as a surface greater than 400 degrees, even if covered by insulation). The turbocharger lube oil supply hose leaking on to a hot surface or not fire rated or fire sleeved is a disabling casualty. A leak from the shaft packing, equivalent to a trickle or steady stream, while rotating is a disabling casualty. Any leak from the shaft packing, in excess of 15 dpm, while not turning is a disabling casualty. Any fuel oil drop* falling within 10 minutes, not on a hot surface, restrictive discrepancy. Any anti-freeze, raw water, lube oil, or hydraulic oil leaks greater than 15 dpm are a restrictive discrepancy. Any anti-freeze, raw water, lube oil, or hydraulic oil leaks less | | | | | |



| Step | Procedure | | | | |
|-----------|---|--|--|--|--|
| 5 (cont.) | • Any fuel oil leak on the fuel tank access covers greater than 15 dpm is a restrictive discrepancy. | | | | |
| (cont.) | Any fuel oil leak on the fuel tank access covers less than 15 dpm is a major discrepancy. | | | | |
| | * To determine if dripping is occurring, a clean sheet of paper may be placed under a suspected leak for up to ten minutes to collect and detect any drops that fall. | | | | |
| 6 | Check all gauges on the console and record the readings. Refer the following chart for allowable ranges and results: | | | | |

| Categories | Disabling | Restrictive | Major | Normal | Major | Restrictive | Disabling |
|-----------------------|-----------|-------------|-------|-----------|-------|-------------|-----------|
| Oil Pressure | <30 | | | 30-65 | | | |
| Water Temp. | <140 | | <165 | 165-195 | >195 | >205 | >212 |
| Red. Gear Pressure | <190 | | | 190-220 | | >220 | |
| Engine RPM | <2400 | <2575 | | 2575-2700 | >2700 | | >2900 |

Figure G-1 Allowable Ranges and Results

| 7 | Return to the mooring. Secure both engines and check all fuel |
|---|---|
| | fittings, including under the fuel pump in the engine vee, for leaks. |